#### **FORFWORD**

Thank you very much for choosing this vehicle.

In order to correctly operate and maintain your vehicle, please take the time to read this manual carefully.

After reading, please leave the manual in the vehicle for future reference. Please leave this manual in the vehicle at the same time of resale, as the new owner will also need to read the information in it

All the information and specifications in this manual are current at the time of printing.

Remember that authorized service centre know your vehicle best and have factory-trained technicians and OEM parts to guarantee your safety. Do not use non-OEM parts or accessories to modify your vehicle. Modifying will affect the functionality, safety and durability of your vehicle.

According to the specification of equipment and features of your vehicle, some descriptions and illustrations may differ from that on your vehicle.

Any data, descriptions and illustrations provided in this manual cannot be used as the basis for any insurance claim.

We reserve the right to make changes in design and specifications at any time without notice


All rights reserved. This document should not be reproduced or copied, in whole or in part, without the written permission.

Happy driving!

Version No.: T1EJRHDOM25ENUK01 Issued July 2025


FOREWORD 1

# Pictorial Index

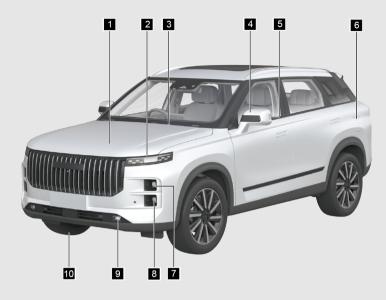

| 1  | Bonnet                   | P.125 |
|----|--------------------------|-------|
| 2  | Position light           | P.40  |
|    | Front indicator light    | P.41  |
|    | Daytime running light    | P.43  |
| 3  | Front wiper blade        | P.40  |
| 4  | Outside rear view mirror | P.35  |
| 5  | Side indicator light     | P.41  |
| 6  | Fuel tank cover          | P.129 |
| 7  | Low beam light           | P.40  |
| 8  | High beam light          | P.40  |
| 9  | Front fog light          | P.42  |
| 10 | Tyre                     | P.241 |


# Pictorial Index

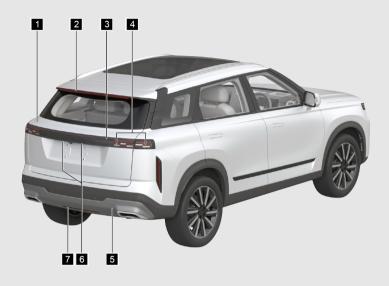

| 1 | Power boot door          | P.125 |
|---|--------------------------|-------|
| 2 | High mounted brake light | P.43  |
| 3 | Rear position light      | P.40  |
| 4 | Rear indicator light     | P.41  |
|   | Brake light              | P.43  |
|   | Reverse light            | P.43  |
| 5 | Rear towing eyelet       | P.226 |
| 6 | License plate light      | P.43  |
| 7 | Rear fog light           | P.42  |

Note: Please refer to the actual vehicle.

# Pictorial Index

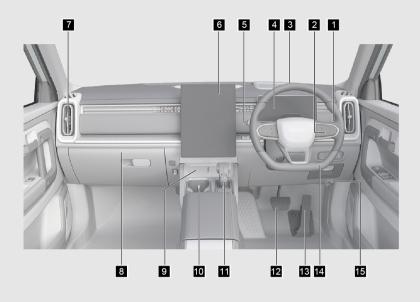

| 7  | Headlight combination switch          | P.40  |
|----|---------------------------------------|-------|
|    | · · · · · · · · · · · · · · · · · · · |       |
| 2  | Cruise button                         | P.166 |
| 3  | Head up display                       | P.207 |
| 4  | Instrument cluster                    | P.22  |
| 5  | Wiper combination switch              | P.37  |
| 6  | Audio system                          | P.91  |
| 7  | Air outlets                           | P.111 |
| 8  | Glove box                             | P.118 |
| 9  | Wireless charging                     | P.115 |
| 10 | Cup holder                            | P.120 |
| II | Shift lever                           | P.138 |
| 12 | Brake pedal                           |       |
| 13 | Accelerator pedal                     |       |
| 14 | Steering wheel                        | P.32  |
| 15 | Bonnet release lever                  | P.125 |

Note: The interiors are different depending to the market requirement. Please refer to the actual vehicle.

| 1. IN | TRODUCTION   | 1 <b>-</b> 9.        | Precautions When Driving in   |
|-------|--|----------------------|---|
| 1-1.  | How to Read This Manual  How to Read This Manual2  Table of Contents                     |                      | the Rain  When Driving on Slippery Road Surfaces 16 Never Drive Through Flooded Water |
| 1-2.  | Symbols in the Manual  | 1-10                 | ).Winter Driving Precautions  |
|       | Symbols in the Manual3   |                      | Winter Driving Tips17   |
| 1-3.  | New Vehicle Inspection   |                      | Driving on Road Covered with Ice and  |
|       | New Vehicle Inspection4 Delivery Inspection Certificate                                  |                      | Snow  |
| 1-4.  | "Face to face"   | 1-11                 | .Cyber security Notice  |
|       | Consultative Service Card  |                      | Cyber Security Support  |
|       | "Face to face" Consultative Service Card5  |                      | Service Update or<br>Termination Notice   |
| 1-5.  | New Vehicle Break-in   | 2 PF                 | REPARATION FOR  |
|       | N MILL D III   |                      |   |
|       | New Vehicle Break-in9  | DRI                  | /ING  |
| 1-6.  | How to Save Fuel and Extend Life of Vehicle  |                      | Instrument Cluster  |
| 1-6.  | How to Save Fuel and   |                      |   |
|       | How to Save Fuel and Extend Life of Vehicle How to Save Fuel and                         | 2-1.                 | Instrument Cluster Instrument Cluster View 22 Operating the meter                     |
|       | How to Save Fuel and Extend Life of Vehicle  How to Save Fuel and Extend Life of Vehicle | 2-1.                 | Instrument Cluster Instrument Cluster View 22 Operating the meter control buttons     |
|       | How to Save Fuel and Extend Life of Vehicle  How to Save Fuel and Extend Life of Vehicle | 2-1.<br>2-2.         | Instrument Cluster Instrument Cluster View 22 Operating the meter control buttons     |
| 1-7.  | How to Save Fuel and Extend Life of Vehicle  How to Save Fuel and Extend Life of Vehicle | 2-1.<br>2-2.         | Instrument Cluster Instrument Cluster View 22 Operating the meter control buttons     |
| 1-7.  | How to Save Fuel and Extend Life of Vehicle  How to Save Fuel and Extend Life of Vehicle | 2-1.<br>2-2.<br>2-3. | Instrument Cluster Instrument Cluster View 22 Operating the meter control buttons     |
| 1-7.  | How to Save Fuel and Extend Life of Vehicle  How to Save Fuel and Extend Life of Vehicle | 2-1.<br>2-2.<br>2-3. | Instrument Cluster Instrument Cluster View 22 Operating the meter control buttons     |

|      | Automatic Inside Rear View Mirror  |                   | Installing Child Restraint Systems Enabling and Disabling Front Passenger Airbag |          |
|------|--|-------------------|--|----------|
| 2-5. | Wiper System   |                   | Reminder for Children Staying in Rear Seat                                       | . 70     |
|      | Wiper Operation37 Wiper Blade  | 3. IN             | TERIOR FUNCTION  |          |
| 0.0  | Replacement39  | 3-1.              | Key Information  |          |
| 2-6. | Lighting System  |                   | Key Information  |          |
|      | Exterior Lighting  |                   | Replacing Key Battery Effective Range Keyless Entry Vehicle Security             | 76<br>77 |
|      | Follow Me Home   |                   | Immobilizer System   |          |
|      | Function45 Smart Vehicle Locating  |                   | Smart Key Vehicle Locating   |          |
|      | Function45 Intelligent Headlight   |                   | Remote Starting for Smart Key  | 81       |
|      | Function (IHC)46 Fogging Instructions for  | 3-2.              | Doors  |          |
| 2-7. | Light  |                   | Doors Lock Switch Unlocking Doors with Inside Handle                             |          |
|      | Head Restraints       47         Front Seats       48         Rear Seat       51 |                   | Door Mechanical Switch<br>Electric Rear Door<br>Child-protector Lock             | 83       |
|      | Seat Heating Function (If Equipped)52  | 3-3.              | Windows  |          |
|      | Seat Ventilation<br>Function (If Equipped)53                                     |                   | Power Windows<br>Window Remote Control<br>Function                               |          |
|      | Seat Memory Function (If Equipped)54 Easy Entry / Exit Seat (If                  |                   | Window Jam Protection Function   |          |
|      | Equipped)54  | 3 /               | Power Moon Roof  | 01       |
| 2-8. | Seat Belts   | J <del>-4</del> . |  |          |
|      | Seat Belts   |                   | Power Moon Roof (If Equipped)  | 88       |
| 2-9. | Child Restraint Systems  |                   | Control Function (If Equipped)   | 90       |
|      | Child Restraint Systems 61 Recommended Child Restraint Systems 63 Top Tether 64  |                   | Moon Roof Jam Protection Function (If Equipped)                                  |          |
| 6 T  | able of Contents   |                   |  |          |

| 3-5. | Audio System  | 3-12  | .Sun Visors , Vanity Mirrors                                 |
|------|---|-------|--|
|      | Audio View       91         Vehicle Centre       92         Audio Buttons       101         Voice Recognition       102         Function       102         Phone-link       102 | 3-13  | and Ticket Clips Sun Visors, Vanity Mirrors and Ticket Clips |
| 3-6. | Air Conditioning System   |       | Opening/closing the bonnet                                   |
|      | Automatic Air Conditioning  | 3-14  | .Boot Door  Power Boot Door                                  |
|      | Control111 Automatic Cabin  | 3-15  | .Fuel Tank Cover   |
|      | Ventilation and   |       | Fuel Tank Cover 129  |
|      | Automatic Cabin Cleaning111   | 4. DF | RIVING VEHICLE   |
|      | Air Quality Control   | 4-1.  | Vehicle Power Mode   |
|      | System 112 Air Conditioning Cooling Operation 112   |       | ENGINE START STOP<br>Switch134                               |
|      | Air Conditioning Heating Operation  | 4-2.  | Starting and Turning off Engine                              |
|      | Box Cooling Function 115  |       | Normal Starting and Turning off                              |
| 3-7. | Wireless Charging   |       | Starting and Turning off                                     |
| 0.0  | Wireless Charging 115   |       | in Emergency   |
| 3-8. | Assist Grips and Coat hooks Assist Grips  |       | (PPF) 137<br>Adaptive Engine Control                         |
|      | Coat hooks 117  |       | System 138   |
| 3-9. | Hooks   | 4-3.  | Transmission   |
|      | Hooks117  |       | Automatic 130  |
| 3-10 | .Storage Space  |       | Transmission   |
|      | Storage Space 118   | 4-4.  | Intelligent Timely All-<br>wheel-drive System (AWD)          |
| 3-11 | .Power Outlet   |       | Intelligent Timely All-                                      |
|      | Power Outlet  |       | wheel-drive System (AWD) (If Equipped) 141                   |

|     |       | Driving Mode (AWD Models)142               | 5-5. | Lane Departure<br>Warning System (LDW)   |
|-----|-------|--|------|--|
|     | 4-5.  | Steering System                            |      | Lane Departure   |
|     |       | Electric Power Steering<br>System (EPS)147 |      | Warning System (LDW)179  |
|     | 4-6.  | Brake System                               | 5-6. | Lane Departure Prevention System (LDP)   |
|     |       | Electric Parking Brake System (EPB)        | 5-7. | Lane Departure Prevention System (LDP)181 Emergency Lane   |
|     | 4-7.  | SRS Airbags                                |      | Keeping (ELK) System   |
|     |       | SRS Airbags154                             |      | Emergency Lane<br>Keeping (ELK) System 183   |
|     | 5. DF | RIVING ASSIST                              | 5-8. | Blind Spot Detection   |
|     | 5-1.  | Speed Limit Assist System                  |      | (BSD) System   |
|     |       | (SLA)                                      |      | Blind Spot Detection   |
|     |       | Speed Limit Assist System (SLA) 165        | 65   | (BSD) System 184<br>Rear Cross Traffic Alert   |
|     | 5-2.  | Cruise System                              |      | (RCTA) System 186<br>Rear Cross Traffic  |
| 5-2 |       | Adaptive Cruise Control System (ACC)       |      | Braking (RCTB)           System         186           Door Open Warning           System         187           Rear Collision Warning           System         188 |
|     |       | Function Overview 173                      | 5-9. | Automatic Emergency  |
| 5-3 | 5-3.  | Idling Stop-start<br>System                |      | Braking System (AEB) / Front Collision Warning   |
|     |       | Idling Stop-start System174                |      | System (FCW) Automatic Emergency   |
|     | 5-4.  | Hill Descent Control<br>System (HDC)       |      | Braking System (AEB) / Front Collision Warning System (FCW)  |
|     |       | Hill Descent Control<br>System (HDC) 177   | 5-10 | Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)  |
|     |       |  |      | Traffic Jam Assist<br>System (TJA) /   |

|       | Integrated Cruise Assist                                    | 400 | 5-19                                     | .Data Privacy   |
|-------|---|-----|--|---|
| 5-11. | System (ICA) Intelligent Avoidance System                   | 192 |  | Driver Drowsiness and<br>Attention Warning<br>(DDAW)213 |
|       | Intelligent Avoidance<br>System                             | 195 | Advanced Driver Assistance System (ADAS) |   |
| 5-12. | Drive Away<br>Information System                            |     | 6 IN                                     | Emergency call (eCall) 214  CASE OF AN EMERGENCY        |
|       | Drive Away Information<br>System                            |     |  | Emergency Call Function                                 |
| 5-13. | .Tyre Pressure<br>Monitoring System (TPM                    | S)  | 6-2                                      | ECALL216 Basic Knowledge of Vehicle                     |
|       | Tyre Pressure   |     | 0 2.                                     | Emergency   |
|       | Monitoring System (TPMS)                                    | 196 |  | Hazard Light216<br>Reflective Strip217                  |
| 5-14. | Driver Monitoring<br>System (DMS)                           |     |  | Warning Triangle  |
|       | Driver Monitoring<br>System (DMS)                           | 198 | 6-3.                                     | Vehicle Emergency<br>Handling                           |
| 5-15. | Parking Assist System                                       |     |  | If You Have a Flat Tyre                                 |
|       | Around View Monitor<br>System (AVM)<br>Parking Radar System |     |  | While Driving   |
| 5-16. | Multi-Collision Brake<br>System (MCB)                       |     |  | If Your Vehicle Cannot<br>Start Normally226             |
|       | Multi-Collision Brake                                       | 207 | 6-4.                                     | Towing  |
| 5-17. | System (MCB)<br>Head Up Display<br>(HUD) System             | 201 |  | Towing Vehicle  |
|       | Head Up Display (HUD)                                       | 007 | 6-5.                                     | Fuse  |
| 5 1Q  | System (If Equipped) Braking Force Control                  | 207 |  | Fuse Box  |
| J-10. | System  |     |  | Replacing Fuse  |
|       | Electronic Stability  |     | 7. M                                     | AINTENANCE  |
|       | Program System (ESP) 208 Anti-lock Brake System (ABS)       |     | 7-1.                                     | Repair and Maintenance                                  |
|       |   |     |  | Repair and Maintenance234 Table of Contents 9           |

|            | Authorized Service Centre is at Your Service |      | Vehicle Product Label 249 Engine Number 249 RF Emitter and Receiver Installation 249 |
|------------|--|------|--|
| 7-2.       | Normal Maintenance                           |      |  |
|            | Normal Maintenance 236                       | 8-2. | Vehicle Specifications   |
|            | Checking Oil Level 237                       |      | Vehicle Dimensions 250   |
|            | Checking Transmission                        |      | Vehicle Type 251   |
|            | Fluid Level238                               |      | Vehicle Weight 251   |
|            | Checking Brake Fluid                         |      | Vehicle Performance 252  |
|            | Level 238                                    |      | Engine Performance 252   |
|            | Checking Coolant                             |      | Fuel System 253  |
|            | Level  |      | Suspension System 254  |
|            | Checking Radiator and                        |      | Wheel Alignment  |
|            | Condenser 240                                |      | Air Conditioning   |
|            | Checking Drive Belt 240                      |      | System 254   |
|            | Checking Tyres 241                           |      | Battery254   |
|            | Tyre Rotation 243                            |      | Wheels and Tyres 255   |
|            | Checking Battery243                          |      | Light Bulb Specification 256   |
|            | Checking Air                                 |      | Vehicle Components   |
|            | Conditioning Filter 243                      |      | That Are Not Included in   |
|            | Checking Windshield                          |      | the Vehicle Size 257   |
|            | Washer Fluid 243                             |      | Your Rights  |
|            | Checking Wiper Blades 244                    |      | Contact Us 258   |
|            | Technical Data 245                           | ALPH | HABETICAL INDEX  |
| $^{\circ}$ |  |      |  |

## 8. SPECIFICATION

## 8-1. Label Location

| Vehicle lo | dentification | 1   |
|------------|---------------|-----|
| Number (   | (VIN)         | 248 |

| 1-1. | How to Read This Manual                         |      | When Driving12                                  |
|------|---|------|---|
|      | How to Read This Manual2                        |      | Parking Operations12                            |
|      | Table of Contents2                              |      | Parking on Slope13                              |
|      | Pictorial Index                                 |      | Check the Exhaust<br>System14                   |
| 1-2. |   | 1-8. | Off-road Driving Precautions                    |
| 4.0  | ·   |      | Off-road Driving15                              |
| 1-3. | New Vehicle Inspection  New Vehicle Inspection4 | 1-9. | Precautions When Driving in the Rain            |
|      | Delivery Inspection Certificate4                |      | When Driving on Slippery Road Surfaces16        |
| 1-4. | "Face to face" Consultative Service Card        |      | Never Drive Through Flooded Water16             |
|      | "Face to face" Consultative Service Card5       | 1-10 | .Winter Driving<br>Precautions                  |
| 1-5. | New Vehicle Break-in                            |      | Winter Driving Tips17                           |
|      | New Vehicle Break-in9                           |      | Driving on Road Covered with Ice and Snow18     |
| 1-6. | How to Save Fuel and Extend<br>Life of Vehicle  |      | Tyre Chains                                     |
|      | How to Save Fuel and                            | 1-11 | .Cyber security Notice                          |
|      | Extend Life of Vehicle10                        |      | Cyber Security Support                          |
| 1-7. | Precautions Before<br>Driving Vehicle           |      | Service Update or Termination Notice20          |
|      | Safety Check11                                  |      | Cyber Security Notice for Scrapping or Resale20 |
|      | Before Starting Engine 11                       |      |   |
|      | After Starting Engine12                         |      |   |

### 1-1. How to Read This Manual

#### How to Read This Manual

There are three ways for you to find the information you need in this manual. Here is a brief introduction of each one.

#### Table of Contents

The main Table of Contents will tell you which chapter of the Owner's Manual contains the information you need and what page to find it on.

### Pictorial Index

The Pictorial Index is a helpful tool to find the required information quickly, especially if you are not familiar with the component name.

### Index

This is the fastest method for you to find the information you need. The index contains a complete listing of all the important vehicle terminologies.

## 1-2. Symbols in the Manual

## Symbols in the Manual

The following symbols are used in this manual to draw your attention to particularly important information. In order to minimize the risks as much as possible, please read the instructions on these symbols carefully before driving, and make sure to follow them.

#### **WARNING**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to your vehicle, personal injury or even death.

#### CAUTION

Indicates something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.

### ENVIRONMENTAL PROTECTION

Indicates that the waste must be handled or disposed according to the local environmental protection regulations, otherwise, the environment will be contaminated.

## r READ

Indicates that the relevant chapter in this manual must be read before any operation.

WARNING and CAUTION relating to personal safety and vehicle safety in this manual are very important. Make sure everyone in the vehicle follows these instructions carefully in order to both enjoy your driving experience and to keep your vehicle in optimum condition.

## 1-3. New Vehicle Inspection

## New Vehicle Inspection

Before delivering the vehicle to you, the Sales & Servicing department of your service centre has inspected it according to regulations. The Sales & Servicing department of the vehicle should fill the delivery date in the inspection certificate and affix the official seal of service centre.

The service centre will familiarize you with your vehicle and verify it via the "-Delivery Card" which will be signed by both parties.

## Delivery Inspection Certificate

In witness whereof, this vehicle has passed delivery inspection as regulated. and quality meets technical specification.

| Vehicle Model                           |                    |
|---|--------------------|
| Vehicle Identification Number (VIN)     |                    |
| Engine Number or Transmission<br>Number |                    |
| Vehicle Registration Number             |                    |
| Official Seal of Sales & Servicing Depa | ırtment:           |
| Signature of Servicer:                  |                    |
| Delivery Date                           |                    |
| User                                    |                    |
| Address                                 |                    |
| E-mail                                  |                    |
| Telephone                               |                    |
| Have provided and explained the follow  | ving items for me: |
| • VEHICLE                               |                    |
| OWNER'S MANUAL                          |                    |
| PRE-DELIVERY INSPECTION                 |                    |
| Signature of User:                      |                    |
| Signature of Servicer:                  | ·                  |

## 1-4. "Face to face" Consultative Service Card

## "Face to face" Consultative Service Card

Authorized service centre will provide a dedicated service consultant when you purchase your vehicle. If you have any questions concerning your vehicle, please consult the consultant.

Sheet One (for User)

| Name of User:   |   | Date of Purchase: |  |
|---|---|-------------------|--|
| Sales   | Sales & Servicing Department: Model:  |                   |  |
| Vehic   | cle Identification Number (VIN):  |                   |  |
| The f   | ollowing items should be confirmed  | by the user:      |  |
| 1. Vehicle Delivery and Inspection (Mark a " √ " for " Yes " and a " × " for Other Conditions):   |   |                   |  |
|   | Have introduced the basic operation of the vehicle to the user and performed the delivery inspection.                               |                   |  |
|   | Have explained the warranty policies to the user.   |                   |  |
|   | Have explained the precautions of driving to the user.  |                   |  |
|   | Have explained the importance of regular maintenance and the recommended interval time/mileage for regular maintenance to the user. |                   |  |
|   | Have explained to the user the importance of having regular maintenance or vehicle repairs done at authorized service centre.       |                   |  |
|   | Have delivered the Owner's Manual to the users and reminded them to read it.  |                   |  |
|   | Have informed the user about the service hotline function and how to use it.  |                   |  |
| 2. "Face to face" Consultative Service Mode Introduction (Mark a " $\checkmark$ " for " Yes " and a " $\times$ " for Other Conditions): |   |                   |  |
|   | If you have any questions or concerns, ask your service consultant.   |                   |  |
|   | The service consultant is the only person authorized by the service centre to answer the user's questions.                          |                   |  |
|   | Have assigned a dedicated service consultant to each user for "Person to- Person" service.  |                   |  |
|   | If the user is not fully satisfied with the service consultant, the user can request another service consultant.                    |                   |  |
| The following items should be confirmed by the user:  |   |                   |  |

| 3. Main Work Introduction on Service Consultant (Mark a " $\checkmark$ " for " Yes " and a " $\times$ " for Other Conditions): |  |  |
|--|--|--|
| □ Service reception during service and maintenance.  |  |  |
| □ Regular maintenance reminders.   |  |  |
| ☐ Answer the service/maintenance consultation.   |  |  |
| □ Service/maintenance booking.   |  |  |
| □ Annual inspection reminders.   |  |  |
| Regular check up and service reminders and holiday greetings.  |  |  |
| □ Other concerns from the user.  |  |  |
| 4. "Face to face" Consultative Service Relationship Establishment:   |  |  |
| Service consultant business card   |  |  |
| Signature of User/Date:  |  |  |
| Signature of Service Consultant/Date:  |  |  |

# Sheet Two (for Sales & Servicing Department)

| Name   | e of User:  | Date of Purchase:                    |  |  |
|--|---|--------------------------------------|--|--|
| Sales  | Sales & Servicing Department: Model:  |                                      |  |  |
| Vehic  | cle Identification Number (VIN):  |                                      |  |  |
| The f  | following items should be confirmed   | by the user:                         |  |  |
|  | 1. Vehicle Delivery and Inspection (Mark a " √ " for " Yes " and a " × " for Other Conditions):                                     |                                      |  |  |
|  | Have introduced the basic operation of the vehicle to the user and performed the delivery inspection.                               |                                      |  |  |
|  | Have explained the warranty policie   | es to the user.                      |  |  |
|  | Have explained the precautions of driving to the user.  |                                      |  |  |
|  | Have explained the importance of regular maintenance and the recommended interval time/mileage for regular maintenance to the user. |                                      |  |  |
|  | Have explained to the user the importance of having regular maintenance or vehicle repairs done at authorized service centre.       |                                      |  |  |
|  | Have delivered the Owner's Manual to the users and reminded them to read it.  |                                      |  |  |
|  | Have informed the user about the service hotline function and how to use it.  |                                      |  |  |
| 2. "Face to face" Consultative Service Mode Introduction (Mark a " ✓ " for " Yes " and a " × " for Other Conditions):          |   |                                      |  |  |
|  | If you have any questions or conce  | rns, ask your service consultant.    |  |  |
|  | The service consultant is the only p centre to answer the user's questio  |                                      |  |  |
|  | Have assigned a dedicated service face" service.  | consultant to each user for "face to |  |  |
|  | If the user is not fully satisfied with the request another service consultant.   | the service consultant, the user can |  |  |
| The following items should be confirmed by the user:   |   |                                      |  |  |
| 3. Main Work Introduction on Service Consultant (Mark a " $\checkmark$ " for " Yes " and a " $\times$ " for Other Conditions): |   |                                      |  |  |
|  | Service reception during service an   | d maintenance.                       |  |  |
|  | Regular maintenance reminders.  |                                      |  |  |
|  | Answer the service/maintenance consultation.  |                                      |  |  |
|  | Service/maintenance booking.  |                                      |  |  |

|  | Annual inspection reminders.                                  |  |  |
|--|---|--|--|
|  | Regular check up and service reminders and holiday greetings. |  |  |
|  | Other concerns from the user.                                 |  |  |
| 4. "Face to face" Consultative Service Relationship Establishment: |   |  |  |
| Service consultant business card                                   |   |  |  |
| Signature of User/Date:  |   |  |  |
| Signature of Service Consultant/Date:                              |   |  |  |

#### 1-5. New Vehicle Break-in

#### New Vehicle Break-in

Frictional resistance between the moving parts of a new vehicle is much more likely in the initial use of the vehicle than later on. Therefore, the initial use can have a greater impact on the vehicle's lifespan, operational reliability and economy. We advise that the use of a new vehicle must strictly follow the following guidelines and that the break-in period would be on average the first 1.864 miles (3.000 km) driven.

■ Driving regulations of new vehicle break-in period

Within the first 621 miles (1,000 km):

- · Avoid driving at full speed.
- Driving speed should not exceed 62 mph (100 km/h).
- Avoid driving at maximum speed in each gear.

Within the first 621 miles (1,000 km) to 932 miles (1,500 km):

- Driving speed can be gradually increased to the highest speed;
- Engine speed can be gradually increased to the maximum allowable speed.
- Driving recommendations after break-in period
- When driving a vehicle, the maximum speed which engine allows to run in short time is 6,000 r/min. When shifting manually, shift to nearby high gear while the tachometer pointer reaches the red indicator zone.
- Engine speed should not be too low while driving, so it will be necessary to shift to the appropriate gear. Do not run the engine at maximum speed in neutral or other gears if the engine is cold.
- Tyre and wheel break-in recommendations:

When starting to use new tyres, the best adhesion is not available. Therefore, new tyres also need break-in, so the vehicle should be driven slowly and especially carefully within the first 62 miles (100 km) of driving.

Braking system break-in recommendations:

New brake lining also needs break-in. Because the brakes cannot provide the ideal brake friction during the first 124 miles (200 km). If the braking efficiency is slightly worse at this stage, increase depression force on the pedal appropriately. This condition also applies to the each replacement of braking lining later.

#### ENVIRONMENTAL PROTECTION

Avoid running engine at unnecessary high speed. Switching to a high gear in time is helpful to save fuel, reduce operation noise and reduce environmental pollution.

## 1-6. How to Save Fuel and Extend Life of Vehicle

#### How to Save Fuel and Extend Life of Vehicle

Saving fuel is largely determined by vehicle conditions and driving habit. Do not overuse the vehicle, which also helps to extend vehicle's life.

The followings conditions are specific tips for fuel saving:

- 1. Make sure to maintain proper tyre inflation pressure. Insufficient tyre inflation pressure will lead to tyre wear and fuel wastage.
- 2. The vehicle should not be loaded with unnecessary weight. Heavy loads increase the engine load, resulting in high fuel consumption.
- 3. Avoid warm-up idling for prolonged periods of time. The vehicle can be driven once the engine runs smoothly. The warm-up time in cold weather will be longer than other seasons.
- 4. Accelerate slowly and smoothly. Avoid sudden accelerating.
- 5. Avoid engine idling for prolonged periods of time. If you need to park vehicle and wait for prolonged periods of time, you should turn off the engine and turn it on again later.
- 6. Avoid out-of-gear or overspeed of engine. Select proper gears according to driving road conditions.
- Avoid continuous acceleration and deceleration. Stop-and-go driving will waste the fuel.
- 8. Avoid unnecessary stopping and braking. You should keep a stable speed. Avoid excessive braking and frequent stops/starts to minimise fuel waste. Maintain a proper driving distance with other vehicles to avoid sudden braking, this will also reduce brake wear.
- 9. Avoid areas with heavy traffic or traffic jams as much as possible.
- 10.Do not hold your foot on clutch or brake pedals for prolonged periods of time. This will cause premature wear, overheating and high fuel consumption.
- 11.Keep a proper vehicle speed on the motorway. The faster the vehicle speed, the more fuel consumption. Decreasing vehicle speed will save fuel.
- 12.Keep proper front wheel alignment. Avoid collision with road curbs and reduce your vehicle speed when driving on rough road surfaces. Improper front wheel alignment will not only quicken tyre wear, but also increase engine load.
- 13. Avoid contacting vehicle chassis with mud, etc.
- 14.Maintain vehicle in optimal working condition. Dirty air filter, improper valve clearance, dirty spark plugs, dirty oil and grease, brakes without proper adjustment, etc. can reduce engine performance and waste fuel. Regular maintenance will extend your vehicle's life and reduce your driving costs.

Your vehicle needs to be serviced more frequently if you regularly drive in severe conditions.



#### CAUTION

Never turn off engine when driving downhill. The power steering system and brake system will not operate normally when engine is not running.

### 1-7. Precautions Before Driving Vehicle

#### Safety Check

It is better to do a safety check before driving vehicle. A few minutes of checking can help ensure safe and pleasant driving.



#### WARNING

If you perform this check in an enclosed garage, make sure there is adequate ventilation.

## Before Starting Engine

#### Outside vehicle

- 1. Tyres (including spare tyre): Check tyre pressure with a tyre pressure gauge and carefully check tyres for cuts, damage or excessive wear.
- 2. Wheel bolts: Make sure no wheel bolts are missing or loose.
- 3. Fluid leaks: After the vehicle has been parked for a while, check underneath for leaking fuel, oil, coolant or other fluids (Water dripping from air conditioning after use is normal).
- 4. Lights: Make sure the headlights, daytime running lights, brake lights, fog lights, directional indicator lights and other lights are working properly.
- 5. Intake grilles: Remove snow, leaves or other obstructions from the intake grilles in front of windshield.

#### Inside vehicle

- 1. Spare tools: Make sure you have spare tools, such as jack, wheel bolt wrench and spare tyre.
- 2. Seat belts: Check if the buckles can be fastened securely. Make sure belts are not worn or frayed.
- 3. Instrument cluster and controls: Make especially sure the malfunction indicator lights, indicator lights, and controls are working properly.
- 4. Brakes: Make sure the pedal has enough clearance.

## ■ Engine compartment and engine

1. Spare fuses: Make sure spare fuses are available. All the fuses with amperage ratings designated on the fuse box cover should be provided.

- 2. Coolant level: Make sure coolant level is correct.
- 3. Battery and cables: Check for corroded or loose terminals and a cracked case. Check the cables for good condition and connections.
- 4. Wiring: Check for damaged, loose or broken wires.
- 5. Fuel lines: Check the lines for leaks or loose connections.

#### ■ Bonnet

Make sure the bonnet is locked completely before driving. Otherwise, the bonnet may tilt up and block front view when vehicle is moving, which could lead to an accident.

## After Starting Engine

- 1. Exhaust system: Listen for any leakage. Repair any leaks immediately if such condition occurs.
- 2. Engine oil level: Stop vehicle on level ground, turn off engine and wait for 5 minutes, pull out the dipstick to check if the engine oil level is proper.

## When Driving

- Gauges and meters: Make sure the gauges and meters are working properly.
- 2. Brakes: At a safe place, check that the vehicle does not pull to one side when the brakes are applied.
- Other abnormal conditions: Check for loose parts and leaks. Listen for abnormal noises

## Parking Operations

Proper parking is an important part of safe driving. Vehicle should be parked in a place with wide road, good view and no impact on traffic. Parking operation steps are as follows:

- 1. Depress brake pedal until the vehicle is completely stopped.
- 2. Confirm that the electronic parking is enabled.
- 3. Move shift lever to "P" position.
- 4. Turn ENGINE START STOP switch to OFF mode.

## **A** CAUTION

When you leave vehicle, make sure to lock your vehicle and carry the keys with you.

## Parking on Slope

Parking vehicle on a slope is mainly enabled by the force of the parking brake. Failing to apply park brake or any brake malfunction may cause the vehicle to slide down a slope and personal injury or damage to vehicle. When parking on a slope, it is better to face the tyres towards one side of vehicle, to prevent vehicle from moving accidentally.

## ■ Parking on downhill with curb



If there is a curb on the roadside, turn the steering wheel to the left to ensure that the front part of the front left wheel is close to or against the curb, to prevent the vehicle from sliding forward down the slope, then apply the parking brake.

#### Parking on uphill with curb



If there is a curb on the roadside, turn the steering wheel to the right to ensure that the rear part of the front left wheel is close to or against the curb, to prevent the vehicle from sliding back down the slope, then apply the parking brake.

## ■ Parking on uphill or downhill (without curb)



If there is no curb on the roadside, turn the steering wheel hard left to prevent the vehicle driving into the centre of the road or sliding down the slope. Turn the steering wheel to the side of the road, so the vehicle is facing away from the centre of the road when moving, then apply the parking brake.

## Carrying passengers

Before driving, make sure all passengers sit in their seats with their seat belts properly fastened. Do not let the passengers sit in the places where there are no seats and seat belts, as they are likely to face serious injury during a collision.

#### ■ Locking the vehicle

- When leaving the vehicle unattended, carry smart key with you and lock all the doors, even if parking the vehicle in the garage or on the road outside your house.
- Vehicle should be parked in bright and spacious places as much as possible, and do not expose valuable items.

#### Exhaust gas

- Avoid inhaling the engine exhaust gas. It contains carbon monoxide (CO), which is a harmful, colorless and odorless gas. It can cause unconsciousness or even death after inhaling.
- Make sure the exhaust system has no leakage holes or loose connections.
   The exhaust system should be checked regularly. If a change in exhaust gas sound is heard, please have the system checked immediately.
- Do not run the engine in a garage or an enclosed area, unless moving the vehicle in or out. The exhaust gas cannot escape, which may cause serious injury.
- Do not stay in a parked vehicle for prolonged periods of time with the engine running. If it is unavoidable, vehicle should be parked in a spacious area and adjust heating and cooling system to forcibly introduce outside air into vehicle.
- Keep the boot door closed while driving. An open or unclosed boot door may cause exhaust gas to enter the vehicle.
- To achieve proper operation of vehicle ventilation system, keep intake grilles free of snow, leaves, or other obstructions.
- If you smell exhaust fumes in vehicle, open windows to allow fresh air to enter and check vehicle condition.

## Check the Exhaust System

The exhaust system should be checked in the following situations:

- 1. When you smell exhaust fumes;
- 2. When you notice a changed noise coming from the exhaust system;
- 3. When exhaust system is damaged due to vehicle collision;
- 4. When the vehicle is lifted for inspection and repair.

## 1-8. Off-road Driving Precautions

## Off-road Driving

Always observe the following precautions to minimize the risk of serious personal injury or damage to your vehicle:

- Be careful when driving off road. Do not drive in dangerous areas.
- Place both hands on the outer ring of the steering wheel when driving off roads.
- Always check your brakes for effectiveness immediately after driving on roads covered with sand, mud, shallow water or snow.
- The driver and all passengers should fasten their seat belts whenever vehicle is moving.

## ↑ WARNING

- After driving on road surfaces covered with tall grass, mud, gravel, sand, rivers, etc., check if there is grass, bush, paper, rags, stone, sand, etc. adhering to or trapped on underbody. Clear off any above materials from the underbody. If driving vehicle with those matters trapped on or adhering to the underbody, a breakdown or fire could occur.
- When driving off road or on rugged terrain, high speed driving, jumping, sharp turning and striking objects, etc. are forbidden. Failure to do so may cause loss of control or vehicle rollover, resulting in death or severe personal injury. You are also risking expensive damage to your vehicle's suspension and chassis.

## 1-9. Precautions When Driving in the Rain

### When Driving on Slippery Road Surfaces

Drive carefully when it is raining, because visibility will be reduced, windows may become fogged-up and roads will be slippery.

 Do not drive at high speed when driving on a motorway in rain, because there may be a layer of water between tyres and road surface, preventing steering system and brakes from operating properly.

#### CAUTION

- Sudden braking, acceleration and steering on slippery road surfaces may cause tyre slippage and reduce your ability to control vehicle, resulting in an accident.
- Sudden changes in engine speed, such as sudden braking may cause vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress brake pedal to make sure brakes are functioning properly. Wet brake lining may prevent brakes from functioning properly. If brake lining on one side is wet and not functioning properly, steering control may be affected, resulting in an accident.

#### Never Drive Through Flooded Water



The vehicle could be seriously damaged when driving on a road that has flooded.

## ↑ CAUTION

- · Never drive through water that is deeper than wheel rim.
- Water intrusion into engine can cause it to stall, or cause serious internal damage.
- Water can wash the grease from the wheel bearing, causing rusting and premature abrasion.
- Driving through water may cause damage to your vehicle drive train components. Always visually inspect your vehicle's fluids (e.g. engine oil, transmission fluid, etc.) for signs of leakage after driving through water. Do not continue to operate vehicle if any fluid leaks, as this may result in further damage.
- Vehicle traction and braking performance will decrease while driving through water. The braking distance will increase. Sand and mud that have accumulated around the brake discs may affect the braking efficiency and may damage the brake system components. After driving through water, slightly depress the brake pedal several times to dry the brakes off.

## 1-10. Winter Driving Precautions

## Winter Driving Tips

- Coolant: Make sure that coolant has anti-freezing function. Only use coolant recommended.
- Battery and cables: Low temperature will decrease power of battery. Sufficient power should be stored in battery for starting in winter.
- Oil: In winter, it is recommended to choose appropriate engine oil according to the local temperature condition. The lower viscosity at low temperature, the better fluidity at low temperature, indicating that the lower the ambient temperature at which the oil can be used.
- Door locks: Avoid door locks being frozen. Deicing agent or glycerin should be sprayed into door lock holes.
- Washer fluid: Use washer fluid containing antifreeze. This product is available at authorized service centre and most vehicle component distributors.
- Mudguards: Avoid ice and snow accumulation under mudguards. Failure to
  do so may cause difficult steering. When driving in cold weather, you should
  often stop vehicle to check for ice and snow accumulation under
  mudguards. It is recommended that you should take some necessary
  emergency items with you according to different driving destinations. Items
  that need to be put in vehicle: Tyre chains, window snow scraper, sand or
  salt bag, signal flasher, shovel, jumper cables, etc.

#### CAUTION

- Do not use water as a substitute for coolant.
- · Do not use engine coolant or other alternative washer fluid, otherwise vehicle paint will be damaged.

## Driving on Road Covered with Ice and Snow



Rapid acceleration on slippery road surfaces, such as snow or ice covered roads, may cause the rear wheels slipping to right or left. Therefore, please drive at low speed and operate carefully.


It is possible to build up a layer of water film between the tyre and road surface when driving on wet or slushy roads. This may prevent the steering and braking from operating properly. It is recommended that you enable ESP function on this occasion.

#### Driving out silt and ice and snow road

If drive wheel is stuck in silt or ice and snow, please attempt to shake vehicle at low speed and drive forward and backward repeatedly. Shift the shift lever between forward position and reverse position several times and depress accelerator pedal slightly. Avoid shifting the shift lever between forward position and reverse position for a long period of time, failure to do so may cause excessive transmission wear

## Tyre Chains

Purchase a set of tyre chains that match size of the vehicle tyres. Pay attention to the following precautions when installing and removing chains:

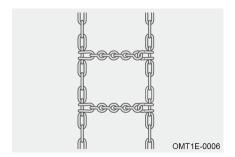

- 1. Follow local regulations when using chains:
- 2. Install and remove tyre chains in a safe location:
- 3. Install tyre chains by following the instructions provided;
- 4. Follow local regulations when using chains;

- 5. It is recommended to use the beef tendon chains or rubber chains with a thickness not exceeding 12 mm, otherwise, tyres, rims, drive system, brake system and wheel guard plates may be damaged. Vehicle damages resulting from improper use of chains are not covered by warranty;
- 6. Please consult authorized service centre for details about wheels, tyre size.



We recommend that snow chains are not used on wheel dimensions greater than 18 inches.



#### CAUTION

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle unable to be driven safely, and may cause death or serious injury.

- Regulations regarding the use of tyre chains vary according to location and type of road. Always check local regulations before installing tyre chains;
- Be sure to use chains that are suitable for your vehicle. Installing chain will
  affect vehicle handling, please drive carefully. Using improper chains or
  improper installing of chains may cause an accident and lead to injuries;
- Please follow the instructions provided by the manufacturer of the chains to install and remove chains, vehicle should be parked in a safe place before installation and removal. Be sure to turn off the engine before installing chains (automatic transmission is in P position), place the traffic warning signs if necessary;
- Do not drive vehicle at more than 18 mph (30 km/h) when chains are installed on vehicle, or refer to the vehicle speed limit specified by the manufacturer of chains, whichever is lower. It should avoid dangerous road conditions such as bumps, potholes, sharp turns etc. when installing chains, do not turn steering wheel sharply, lock brake urgently, accelerate or decelerate suddenly etc.

### 1-11. Cyber security Notice

## Cyber Security Support Service Update or Termination Notice

The company has provided cyber security support services for the corresponding software and equipment of the Internet of Vehicles service, and regularly or irregularly updates or terminates this service.

The scrapped vehicle will stop providing Network Security Services; Network Security Services will maintain essential service after the vehicle is discontinued for 10 years.

We can notify customers through website announcements, emails, in-vehicle systems, mobile phone text messages, voice calls, etc. according to the specific content of the notification.

Email, SMS, and voice calls will be sent to the email address and mobile phone listed in the customer's account registration information.

## Cyber Security Notice for Scrapping or Resale

Before you resell or scrap the vehicle, that is, when you no longer hold the vehicle, you should clear the personal information in the vehicle terminal by yourself.

The company does not assume any responsibility if the personal information of the vehicle terminal is leaked to a third party due to improper operation.

Our franchised dealers are familiar with the relevant regulations and can provide you with consulting services.

# PREPARATION FOR DRIVING


| 2-1. | Instrument Cluster                    |      | Intelligent Headlight Function                  |
|------|---------------------------------------|------|---|
|      | Instrument Cluster View 22            |      | (IHC)46   |
|      | Operating the meter control buttons24 |      | Fogging Instructions for Light46                |
| 2-2. | Operation/Malfunction                 | 2-7. | Seats   |
|      | Indicator                             |      | Head Restraints47                               |
|      | Operation/Malfunction                 |      | Front Seats48                                   |
|      | Indicator25                           |      | Rear Seat51                                     |
| 2-3. | Steering Wheel Horn32                 |      | Seat Heating Function (If Equipped)52           |
|      | Heated Steering Wheel (If Equipped)33 |      | Seat Ventilation Function (If Equipped)53       |
|      | Adjusting Steering Wheel 33           |      | Seat Memory Function (If Equipped)54            |
| 2-4. | Rear View Mirror                      |      | Easy Entry / Exit Seat (If                      |
|      | Manual Inside Rear View               |      | Equipped)54                                     |
|      | Mirror34                              | 2-8. | Seat Belts                                      |
|      | Automatic Inside Rear View Mirror34   |      | Seat Belts55                                    |
|      | Outside Rear View Mirror 35           |      | Seat Belt Pretensioner 60                       |
| 2-5. | Wiper System                          | 2-9. | Child Restraint Systems                         |
|      | Wiper Operation37                     |      | Child Restraint Systems 61                      |
|      | Wiper Blade<br>Replacement39          |      | Recommended Child<br>Restraint Systems63        |
| 2-6. | Lighting System                       |      | Top Tether64                                    |
|      | Exterior Lighting40                   |      | Installing Child Restraint<br>Systems66         |
|      | Interior Lighting43                   |      | Enabling and Disabling                          |
|      | Headlight Height Adjustment45         |      | Front Passenger Airbag 69                       |
|      | Follow Me Home                        |      | Reminder for Children<br>Staying in Rear Seat70 |
|      | Function45                            |      | Otaying in Near Seat                            |
|      | Smart Vehicle Locating Function45     |      |   |

#### 2. PREPARATION FOR DRIVING

### 2-1. Instrument Cluster

Please refer to the actual vehicle for all display images.

#### Instrument Cluster View

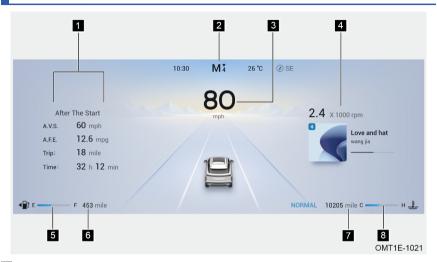

- Conventional display: Current conventional display screen information.
- 2 Gear position information: Currently selected gear position information (in manual mode or the current gear position).

On-board computer displays arrow and target gear according to current conditions to prompt user to perform a reasonable shift operation:

- " " prompts you to perform an upshift operation.
- " ♥ " prompts you to perform a downshift operation.

## **READ**

The information is for reference only. Always upshift or downshift according to actual situations.

3 Speedometer: Current driving speed (unit: mph).

## CAUTION

Speedometer is affected by tyre size used in vehicle. Only tyres of original size can be used (For details, refer to "Vehicle Specifications"), otherwise the speedometer will not indicate the correct speed.

4 Tachometer: Current engine speed (unit: x1000 rpm).

After break-in period of vehicle, it is allowed to reach the high engine speed range of 6000 - 8000 rpm. Do not drive vehicle within this range for prolonged periods of time.



#### CAUTION

- · Do not run engine at high speed during break-in period.
- Do not keep engine speed at 6000 rpm or more for a long time, or engine may be seriously damaged.
- 5 Fuel gauge: Current remaining fuel of fuel tank.

When fuel gauge indication is near E or the low fuel level warning indicator remains on, it indicates that remaining fuel is insufficient. Please add fuel as soon as possible.

## READ

When the vehicle is accelerating, braking urgently, turning sharply or driving on a slope, the fuel gauge reading might be inaccurate.

6 Driving mileage: The estimated maximum distance that can be driven with current remaining fuel (common unit: mile).

## r READ

Driving mileage is calculated by the on-board computer, it can only be used as a reference.

- Total mileage: Total mileage of the vehicle (common unit: mile).
- **8** Engine coolant temperature gauge: Current engine coolant temperature.

Low temperature range: Near C or in C area

When engine coolant temperature gauge is near C or in C area, it indicates that engine coolant temperature is low. Within this temperature range, do not run engine at high speed and the engine load should not be excessive.

Overheating range: Near H or in H area

When engine coolant temperature gauge is near H or in H area, it indicates that engine coolant temperature is high. Stop vehicle at a safe place away from major traffic, turn vehicle power to OFF mode after idling for several minutes. Please contact your authorized service centre for inspection and repair immediately.

#### 2. PREPARATION FOR DRIVING

## **A** CAUTION

- If engine coolant temperature gauge indication remains in low temperature range for a long time, please contact your authorized service centre for inspection and repair immediately.
- Never open the coolant reservoir cap if engine coolant temperature gauge indication is in overheating range. Check if coolant level is too low after engine cools down. Never run engine when coolant level is too low, or the engine will be seriously damaged.

## Overspeed alarm (if equipped)

When vehicle speed reaches the set value, instrument cluster will display the overspeed indication value and alarm buzzer will sound for 3 times.




Overspeed alarm function can be turned on or off in the vehicle centre of the audio system.

The speed limit also can be set.

## Operating the meter control buttons

When the cruise function is not turned on, the meter can be operated by the following buttons.

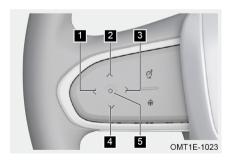

- Left adjustment button
- 2 Up adjustment button
- Right adjustment button
- 4 Down adjustment button
- 5 Enter/exit the meter menu

## 2-2. Operation/Malfunction Indicator

## Operation/Malfunction Indicator

The operation indicator is used to alert driver the operating condition of a certain vehicle's system and the corresponding operation indicator will remain on.

Malfunction indicator is used to alert driver that a certain system of the vehicle is malfunctioning, the corresponding malfunction indicator will come on or flash.

When vehicle power is turned to ON mode, some malfunction indicators will come on for a short time, indicating system is performing self-check. If one system malfunction indicator remains on or flashes after starting the engine, please contact authorized service centre for inspection and repair immediately.

| Item  | Indicator | Description  |
|---|-----------|--|
| Daytime<br>running light<br>indicator       | ::::O     | Daytime running light indicator comes on when engine is started.   |
| Position light indicator                    | ÷00÷      | When the position lights are turned on, the indicator comes on.  |
| Directional<br>signal light<br>indicator    | <b>++</b> | When the left or right indicator lights are turned on, the corresponding indicator signal light flashes.  When hazard light switch is turned on, both left and right indicator lights will flash simultaneously. |
| Headlight high beam indicator               |           | When the high beam lights are turned on or when the high beam lights flash, the indicator comes on.  |
| Front fog light indicator                   | \$0       | When front fog light is turned on, the front fog light indicator will come on.   |
| Rear fog light indicator                    | ()‡       | When rear fog light is turned on, the rear fog light indicator will come on.   |
| Intelligent<br>headlight<br>(IHC) indicator |           | This indicator is used to indicate that the vehicle's automatic headlights are in operating condition currently.   |
| Intelligent<br>headlight<br>(IHC)           |           | This indicator is used to indicate that the vehicle's automatic headlights are malfunctioning currently. Please contact your   |

# 2. PREPARATION FOR DRIVING

| Item  | Indicator | Description  |
|---|-----------|--|
| malfunction indicator   |           | authorized service centre for inspection and repair as soon as possible.   |
| low washer fluid level indicator                                      |           | The indicator is used to remind the driver that washer fluid is low, please add as soon as possible.   |
| Front seat belt indicator   |           | This indicator is used to alert the driver that the driver seat belt and/or front passenger seat belt is not buckled or not fastened firmly. Wear seat belt and drive safely.  |
| Rear seat belt  | 444       | This indicator is used to alert the driver that the rear seat belt is not buckled or not fastened firmly. Wear seat belt and drive safely.   |
| indicator   |           | Note: the red indicator light turns on when the corresponding seat belt is not fastened, and turns off when the corresponding seat belt is fastened.   |
| Brake system malfunction indicator                                    |           | This indicator is used to alert the driver that brake fluid level is low or brake system is malfunctioning. Please contact your authorized service centre for inspection and repair immediately.   |
| Electric<br>Parking Brake<br>(EPB) system<br>indicator                | P         | This indicator comes on to indicate that the vehicle's EPB is in operating condition currently. The indicator flashes during sudden braking, it is normal and does not need to be dealt with. If it flashes in other cases, it indicates that the system is malfunctioning. Please contact your authorized service centre for inspection and repair as soon as possible. |
| Electric<br>Parking Brake<br>(EPB) system<br>malfunction<br>indicator | (P)       | This indicator is used to alert the driver that EPB is malfunctioning. Please drive slowly to authorized service centre for inspection and repair as soon as possible.   |
| Automatic<br>Parking<br>System<br>(AUTO<br>HOLD)<br>indicator         | (A)       | This indicator is used to indicate that the vehicle is in automatic parking condition currently.   |

| Item   | Indicator       | Description  |  |  |  |  |  |
|--|-----------------|--|--|--|--|--|--|
| Automatic Parking System (AUTO HOLD) malfunction indicator     | (A)             | This indicator is used to alert the driver that AUTO HOLD is malfunctioning. Please drive slowly to authorized service centre for inspection and repair as soon as possible.   |  |  |  |  |  |
| Anti-lock<br>Brake System<br>(ABS)<br>malfunction<br>indicator | (ABS)           | This indicator is used to alert the driver that Anti-<br>lock Brake System (ABS) is malfunctioning.<br>Please drive slowly to authorized service centre<br>for inspection and repair as soon as possible.  |  |  |  |  |  |
| Electronic<br>Stability<br>Program                             | <b>**</b>       | This indicator flashes to indicate that the vehicle's Electronic Stability Program (ESP) system is in operating condition currently.  This indicator comes on to alert the driver that   |  |  |  |  |  |
| (ESP) system indicator   |                 | Electronic Stability Program (ESP) system is malfunctioning. Please contact your authorized service centre for inspection and repair as soon as possible.  |  |  |  |  |  |
| ESP OFF indicator  | <b>€</b><br>OFF | When ESP function is turned off, ESP OFF indicator will come on, indicating that Electronic Stability Program (ESP) system is in disabled condition.   |  |  |  |  |  |
| Low fuel level warning indicator                               |                 | This indicator is used to alert the driver that vehicle is running out of fuel. Please add fuel as soon as possible.   |  |  |  |  |  |
| Airbag (SRS)<br>malfunction<br>indicator                       |                 | This indicator is used to alert the driver that Airbag (SRS) system is malfunctioning. Please contact your authorized service centre for inspection and repair as soon as possible.  |  |  |  |  |  |
| Charging<br>system<br>indicator                                | <del>- +</del>  | This indicator is used to indicate the operating condition of charging system. If this indicator does not come on when vehicle power is turned to ON mode, or comes on after engine starts, please contact your authorized service centre for inspection and repair as soon as possible. |  |  |  |  |  |
| Engine<br>warming up<br>indicator                              | ##*             | This indicator is used to alert the driver that when engine coolant temperature is too low, engine is in warming up currently. After coolant temperature rises, the indicator goes off to  |  |  |  |  |  |

| Item  | Indicator       | Description  |  |  |  |  |  |
|---|-----------------|--|--|--|--|--|--|
|   |                 | indicate that the engine warm-up is completed currently.   |  |  |  |  |  |
| High coolant<br>temperature<br>warning<br>indicator               | <del>{</del> }} | This indicator is used to alert the driver that engine coolant temperature is high. Drive vehicle to a safe area and stop, turn vehicle power to OFF mode after idling for several minutes. Please contact your authorized service centre for inspection and repair immediately. |  |  |  |  |  |
| Tyre pressure<br>monitoring<br>system<br>malfunction<br>indicator | (!)             | This indicator is used to indicate that typressure is incorrect. Please check if typressure is too low or if temperature is too highly liftyre pressure is normal, please contact you authorized service centre for inspection a repair as soon as possible.                     |  |  |  |  |  |
| EPC<br>malfunction<br>indicator                                   | EPC             | This indicator is used to alert the driver the engine system is malfunctioning. Please conta your authorized service centre for inspection and repair immediately.   |  |  |  |  |  |
| Engine<br>malfunction<br>indicator                                |                 | This indicator is used to alert the driver that engine is malfunctioning. Please contact your authorized service centre for inspection and repair immediately.   |  |  |  |  |  |
| Transmission<br>malfunction<br>indicator                          |                 | This indicator is used to alert the driver that transmission system is malfunctioning. Please contact your authorized service centre for inspection and repair immediately.  |  |  |  |  |  |
| EPS malfunction indicator   | ⊕!              | This indicator remains on to indicate that EPS is malfunctioning currently.  |  |  |  |  |  |
| Steering angle initialization incomplete indicator                | <b>@!</b>       | This indicator remains on to indicate that EPS is not initialized or calibrated currently.   |  |  |  |  |  |
| Low engine oil pressure warning indicator                         | 45              | This indicator is used to alert the driver that engine oil pressure is low. Drive vehicle to a safe area and stop. Please contact your authorized service centre for inspection and repair immediately.  |  |  |  |  |  |
| ECO mode indicator  | ECO             | When economic mode is turned on, the indicator comes on.   |  |  |  |  |  |

| Item  | Indicator | Description  |  |  |  |  |  |
|---|-----------|--|--|--|--|--|--|
| Normal mode indicator   | NORMAL    | When normal mode is turned on, the indicator comes on.   |  |  |  |  |  |
| Sport mode indicator  | SPORT     | When sport mode is turned on, the indicator comes on.  |  |  |  |  |  |
| Snow mode indicator   | SNOW      | When snow mode is turned on, the indicator comes on.   |  |  |  |  |  |
| Mud mode indicator  | MUD       | When mud mode is turned on, the indicator comes on.  |  |  |  |  |  |
| Sand mode indicator   | SAND      | When sand mode is turned on, the indicator comes on.   |  |  |  |  |  |
| Off-road mode indicator   | OFF-ROAD  | When off-road mode is turned on, the indicator comes on.   |  |  |  |  |  |
| AWD system malfunction indicator  | AWD       | This indicator is used to alert the driver the AWD is malfunctioning. Please contact you authorized service centre for inspection arrepair as soon as possible.                                |  |  |  |  |  |
| Automatic<br>emergency<br>braking<br>system (AEB)<br>indicator                | <b>₩</b>  | This indicator is used to indicate that automat emergency braking system (AEB) is in operatin condition currently.   |  |  |  |  |  |
| Automatic<br>emergency<br>braking (AEB)<br>system<br>malfunction<br>indicator | ¥Q.       | This indicator is used to indicate that automatic emergency braking (AEB) system is malfunctioning. Please contact your authorize service centre for inspection and repair as soo as possible. |  |  |  |  |  |
| Automatic<br>emergency<br>braking (AEB)<br>system OFF<br>indicator            | OFF       | When AEB function is turned off, AEB Of indicator will come on.  |  |  |  |  |  |
| Hill descent indicator  |           | This indicator is used to indicate that the vehicle's hill descent is operating currently.   |  |  |  |  |  |
| Hill descent<br>malfunction<br>indicator                                      | <b>@</b>  | This indicator is used to indicate that the vehicle's hill descent is malfunctioning currently Please drive slowly to authorized service centre for inspection and repair as soon as possible. |  |  |  |  |  |

| Item   | Indicator                 | Description   |  |  |  |  |  |
|--|---------------------------|---|--|--|--|--|--|
| Blind spot monitoring  |                           | Steady on indicates that the blind sp monitoring system enters the first-level alar state.  |  |  |  |  |  |
| system<br>indicator  |                           | Blinking indicates that the blind spot monitorir system enters the level 2 alarm state.   |  |  |  |  |  |
| Blind spot<br>monitoring<br>system<br>malfunction<br>indicator   |                           | This indicator is used to indicate that the blind spot monitoring system is faulty. Please contact your authorized service centre for inspection and repair as soon as possible.  |  |  |  |  |  |
| Active speed   | LIMkm/h                   | This indicator is used to indicate that the active speed limit is in pre-speed limiting state.  |  |  |  |  |  |
| limit indicator  | LIMIT<br>ON<br>30 km/h    | This indicator is used to indicate that the active speed limit is in speed limit state.   |  |  |  |  |  |
| Cruise control   | CRUISE<br>CANCEL.<br>km/h | Blinking indicates that the cruise control system is in pre-cruise state.   |  |  |  |  |  |
| system<br>indicator  | CRUISE<br>ON<br>45 km/h   | Steady on indicates that the cruise control system is in cruise state.  |  |  |  |  |  |
| Adaptive<br>cruise control<br>system<br>indicator                | **                        | This indicator is used to indicate that the adaptive cruise control system is in pre-cruise state.  |  |  |  |  |  |
|  | <b>7</b>                  | This indicator is used to indicate that the adaptive cruise control system is in cruise state.  |  |  |  |  |  |
| Adaptive<br>cruise control<br>system<br>malfunction<br>indicator | <del>-</del>              | This indicator is used to indicate that the adaptive cruise control system is faulty. Pleas contact your authorized service centre for inspection and repair as soon as possible. |  |  |  |  |  |
| Lane<br>departure<br>warning<br>system<br>indicator              |                           | This indicator is used to indicate that lane departure warning system is on or in restricted state.   |  |  |  |  |  |
|  | Ø.                        | Steady on indicates that the lane departure warning system is in stand-by state.  Blinking indicates that the lane departure warning system is active.                            |  |  |  |  |  |
| Lane<br>departure<br>warning                                     |                           | This indicator is used to indicate that the lane departure warning system is faulty. Please   |  |  |  |  |  |

| Item  | Indicator    | Description  |  |  |  |  |  |
|---|--------------|--|--|--|--|--|--|
| system<br>malfunction<br>indicator                              |              | contact your authorized service centre for inspection and repair as soon as possible.  |  |  |  |  |  |
| Emergency   | <del>/</del> | This indicator is used to indicate that emergency lane keeping system is on or in restricted state.  |  |  |  |  |  |
| lane keeping system   |              | This indicator is used to indicate that emergence lane keeping system is in stand-by state.  |  |  |  |  |  |
| indicator   |              | This indicator is used to indicate that emergentane keeping system is active.  |  |  |  |  |  |
| Emergency<br>lane keeping<br>system<br>malfunction<br>indicator | <b>/⊕</b> \  | This indicator is used to indicate that the emergency lane keeping system is faulty. Please contact your authorized service centre for inspection and repair as soon as possible.  |  |  |  |  |  |
| Idling stop-<br>start system<br>indicator                       | (A)          | This indicator is used to indicate that idling stop start system meets working conditions.   |  |  |  |  |  |
| Idling stop-<br>start system<br>malfunction<br>indicator        | (A)          | Steady on indicates that the idling stop-start system does not meet safety start conditions or is shut down.  Blinking indicates that the idling stop-start system is faulty. Please contact your authorized service centre for inspection and repair as soon as possible. |  |  |  |  |  |
| Overspeed alarm indicator                                       | 120          | The indicator remains on and 3 beeps sound to remind the driver that the speed has exceeded the set speed limit value, pay attention to the vehicle speed.   |  |  |  |  |  |
| Safety<br>warning light   | $\triangle$  | This malfunction light comes on to indicate the one of the vehicle's systems is malfunctionin currently. Please contact your authorize service centre for inspection and repair as social as possible.   |  |  |  |  |  |
| Petrol<br>Particulate<br>Filter (PPF)<br>indicator              |              | This indicator comes on to alert the driver that Petrol Particulate Filter (PPF) is full, please increase the speed and clean it.  |  |  |  |  |  |
| Petrol<br>Particulate   |              | This indicator comes on to alert the driver that Petrol Particulate Filter (PPF) is malfunctioning.  |  |  |  |  |  |

| Item                                    | Indicator | Description   |  |  |  |  |  |
|---|-----------|---|--|--|--|--|--|
| Filter (PPF) malfunction indicator      |           | Please contact your authorized service centre for inspection and repair as soon as possible.  |  |  |  |  |  |
| Maintenance indicator                   | No.       | This indicator is used to alert the driver that the vehicle needs maintenance. Please contact your authorized service centre for inspection and repair as soon as possible.   |  |  |  |  |  |
| Fatigue<br>driving<br>indicator         | <b>≈</b>  | This indicator is used to remind the driver to take a rest.   |  |  |  |  |  |
| Steering<br>wheel hands-<br>off warning |           | When the driver releases the steering wheel during driving, a steering wheel hands-off warning will appear on the instrument cluster, accompanied by an alarm sound, reminding the driver to hold the steering wheel. |  |  |  |  |  |

# 2-3. Steering Wheel

# Horn



To sound the horn, press area near horn mark on the steering wheel.

# **₩** READ

Obey local regulations regarding usage of vehicle horns.

## Heated Steering Wheel (If Equipped)



After starting the vehicle, press "" on the air conditioning system screen to turn on steering wheel heating function. After pressing the button again, steering wheel heating function is turned off.

# **↑** CAUTION

When the following conditions are met, the steering wheel heating function will be turned on:

- · Engine is operating.
- · Voltage of battery is in normal range.
- Steering wheel heated switch is pressed.

When any of the following conditions is met, the function will stop or turn off after it works for a period of time:

- · Engine stops.
- · Steering wheel heated switch is pressed again.

# Adjusting Steering Wheel



Stop vehicle at a safe place away from major traffic, turn vehicle power to OFF mode:

Step 1: Push down adjustment lever and release it;

Step 2: Adjust steering wheel upward and downward/forward and backward to a comfortable angle;

Step 3: Hold steering wheel steady and push adjustment lever to original position;

Step 4: Check if the steering wheel is shaking. Repeat operations of step 3 if shaking.

# **↑** WARNING

- Make sure the steering wheel is securely locked before driving, otherwise it may cause accidents and personal injuries.
- Do not adjust steering wheel while driving, otherwise it may cause accidents and personal injuries.

#### 2-4. Rear View Mirror


#### Manual Inside Rear View Mirror

## Adjusting inside rear view mirror position



Adjust inside rear view mirror to a proper position before driving, to make sure that driver can achieve an optimum view.

# Adjusting anti-glare position

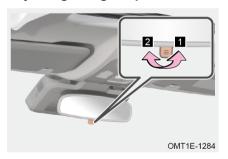

Before driving at night, adjust the inside rear view mirror lever to the anti-glare position, which can reduce the reflected light from the headlights of vehicles behind.

- 1 Anti-glare position
- 2 Normal position

#### Automatic Inside Rear View Mirror




When driving at night, the light sensor installed in front/rear of the inside rear view mirror automatically detects the reflected light from the headlights of vehicles behind and automatically adjusts the lens angle to reduce the reflected light from the headlights of vehicles behind.

## Outside Rear View Mirror

## Adjusting outside rear view mirror

■ Adjust by switch

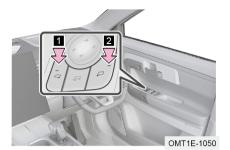


Stop vehicle at a safe place away from major traffic, turn vehicle power to ON mode:

Step 1: To select a mirror to adjust, press the switch. The indicator on the switch illuminates, Pressing again will turn off the indicator.

- 1 Left
- 2 Right

Step 2: To adjust the mirror, press the adjustment switch.

- **Up**
- Down
- ↓ Left
- Right

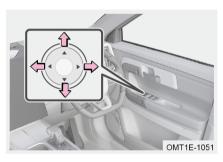

## Adjust by audio system



Turn vehicle power to ON mode, Audio System - Vehicle Centre -Vehicle comfort - Rear mirror adjustment.

In the current interface, the rearview mirror can be adjusted through the buttons on the steering wheel.

# WARNING

- Do not adjust outside rear view mirror while driving, otherwise it may cause accidents and personal injuries.
- Image displayed on outside rear view mirror may differ from the actual, so always drive carefully.

#### Folding/extending outside rear view mirror



Operate using switch: When vehicle power is turned to ON mode, press outside rear view mirror folding switch to fold mirrors automatically, press the switch again to extend mirrors automatically.

Operate using key: In fortifying/ deactivation mode, outside rear view mirror will fold/extend automatically.

## (III) READ

- Automatic folding of Outside rear view mirror needs to be set in audio system. For details, refer to "Audio System".
- According to visual field requirements, folding angles of the left and right mirrors are different. Therefore, when outside rear view mirrors automatically fold, the left and right mirrors are not synchronized, which is normal.

## CAUTION

- Do not fold/extend the power outside rear view mirror manually, otherwise it may cause the folding function to fail.
- When folding/extending the outside rear view mirror, do not touch its surface to prevent damage to it with excessive force.
- In cold weather, it is recommended to turn off the outside rear view mirror automatic folding function. This will prevent the outside rear view mirror from being frozen in folding position due to accumulated snow or rain.

## **Outside Rear View Mirror Memory Function (If Equipped)**



Turn vehicle power to ON mode, the audio system will pop up vehicle comfort screen, select driving position, rest position or alternate location, long press to update and memorize.

When you need to recall outside rear view mirror memory position, short press driving position button, rest position button or alternate location button by Audio System - Vehicle Centre - Vehicle - seat / rear mirror position.

Note: Outside rear view mirror memory and seat memory are saved and recalled at the same time.


# 🕮 READ

If seat memory binding is turned off, no dialog box will pop up from audio head unit after adjusting outside rear view mirror position.

## 2-5. Wiper System

# Wiper Operation

# Wiper combination switch

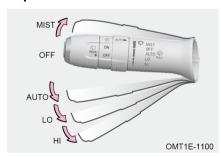

Turn vehicle power to ON mode, move the wiper combination switch:


Mist mode "MIST": Wipers will stop after wiping once.

Low speed mode "LO": Operate slowly and continuously.

High speed mode "HI": Operate quickly and continuously.

Stop mode "OFF": Operate automatically at low speed until wipers return to stop position.

Auto mode "AUTO": Control the wiping speed of the wiper according to amount of rainfall.

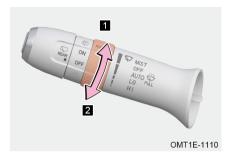

When AUTO mode is selected, the sensor sensitivity can be adjusted by operating the switch.

- Decreases the sensitivity
- 2 Increases the sensitivity

## CAUTION


- Do not operate wiper when the windshield is dry, as this may damage wiper blade or scratch the windshield.
- Do not operate wipers if there are obstacles on windshield, as this may scratch the windshield and damage wiper motor.
- In cold weather, always check if wiper blade is frozen onto windshield before using wipers. If so, defrost before using, otherwise it may damage wiper blade and wiper motor.

## Front washer operation



Turn vehicle power to ON mode, pull wiper combination switch towards the steering wheel and hold, the front washer sprays water, and front wiper operates simultaneously. Front washer will stop operating when the switch is released, the wiper will wipe 3 cycles at low speed, and operate one cycle then stop after a few seconds.

## Rear washer operation

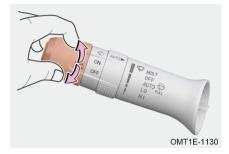

Turn vehicle power to ON mode and operate wiper combination switch.

: rear washer sprays water, and rear wiper operates simultaneously. After releasing, they stop working.

ON: rear wiper is turned on.

OFF: rear wiper is turned off.

in : rear washer sprays water, and rear wiper operates simultaneously. After releasing, they stop working.

# **⚠** CAUTION

- Do not operate wiper combination switch when there is no washer fluid in reservoir.
- When operating wiper combination switch to spray water, do not exceed 10 seconds at a time.
- Do not try to clear a nozzle with a pin or other objects when it becomes blocked, or it will be damaged.
- The windscreen washer fluid will corrode any painted surface, so be careful when adding washer fluid.

# Wiper Blade Replacement

# Replacing front wiper blades



Step 1: Operate the front wiper switch within 3 seconds after turning off the engine start stop switch, the wiper will enter repair mode;

Step 2: Lift the front wiper arm and hold:

Step 3: Push wiper blades outward while pressing the lock button to remove the blades:

Step 4: Install the new wiper blades in reverse order, and make sure the fixing clamp is locked firmly;

Step 5: Check that front wipers operate properly.

## Replacing rear wiper blade

Step 1: Unlock the vehicle and press the ENGINE START STOP switch once, move the wiper combination switch to ON position, the wiper will enter repair mode;

- Step 2: Lift the rear wiper arm and hold;
- Step 3: Separate the wiper blade by hand;
- Step 4: Install the new wiper blade in reverse order, and be sure to install them in place;
- Step 5: Check that rear wiper operates properly.

## **₩** READ

It is recommended you have wiper blades replaced by someone at authorized service centre to ensure correct fitting.


# CAUTION

Make sure the wiper arm returns to its original position before driving, otherwise it may damage the vehicle and cause an accident.

## 2-6. Lighting System

# Exterior Lighting

# Headlight combination switch

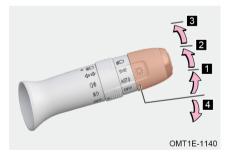

Turn vehicle power to ON mode, operate headlight combination switch:

- Auto-sensing headlight "AUTO": By automatically sensing intensity of external light, position lights, low beam lights and license plate lights remain on.
- 2 Position lights "૩૦૦६": The position lights, license plate lights, ambient lights and backlights remain on.
- 3 Low beam lights " <sup>™</sup>: The headlight low beam lights remain on and keep position lights on.
- 4 Turning off "OFF": Turn off headlight function.

# (A) READ

When parking vehicle for a long time or before leaving vehicle, make sure that headlight combination switch is turned off to prevent the battery from from being depleted. Failure to do so may cause the vehicle not to start.


# Headlight high beam

#### ■ High beam lights



Turn vehicle power to ON mode, when turning on low beam lights, pull headlight combination switch away from steering wheel side and release, high beam lights remain on; Pull headlight combination switch towards steering wheel side and release to turn off high beam lights.

## ■ High beam lights flash

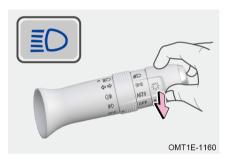

Pull headlight combination switch towards the steering wheel and release it to flash the high beam lights once. At the same time, headlight high beam indicator in instrument cluster flashes once.



High beam light can flash when the low beam light is off.

# **Directional indicator lights**



Turn vehicle power to ON mode, switch headlight combination switch:

Pull up: Left indicator signal lights come on.

Pull down: Right indicator signal lights come on.

When indicator signal lights are turned on, the indicator will flash in the instrument cluster. As vehicle is turning back after turning, combination switch automatically returns to centre position.

# ■ Lane change assist function

Turn vehicle power to ON mode, pull directional indicator light switch once but not too far over. This will make the indicator flash 3 times.

## **№** READ

During a slight steering wheel turn, headlight combination switch may not automatically return to original position.

## Front fog lights



Turn vehicle power to ON mode, when position lights turn on, operate fog light switch to "  $\mbox{10}$ " position to turn on front fog lights; Turn vehicle power to OFF mode or operate fog light switch to "OFF" position again, front fog lights turn off.


#### Assist steering lighting

When the vehicle power is in ON mode and the speed is lower than 24 mph (40 km/h), front fog lights will come on when the indicator signal lights are turned on or steering wheel is turned more than 40° and low beam light is turned on.

Turn off the assist steering lighting function when any of the following conditions are met:

- Vehicle power is in ACC or OFF mode.
- Turn off the indicator signal lights or turn the steering wheel below 10°.
- Turn off the low beam light.
- Vehicle speed is higher than 24 mph (40 km/h).

# Rear fog light

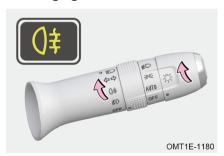

Turn vehicle power to ON mode, when front fog light or low beam lights turn on, operate fog light switch to " 0‡ " position to turn on rear fog light; After turning vehicle power to OFF mode or operate fog light switch to " 0‡ " or "OFF" position again, rear fog light turns off.

# 🚇 READ

- When turning off front fog lights or low beam lights, rear fog light turns off at the same time.
- Obey local regulations regarding usage of fog lights.

## **Daytime running lights**

When the engine is started, the low beam lights, high beam lights and front fog lights are not turned on, the daytime running lights are turned on. Daytime running lights turn off automatically when low beam lights, high beam lights or position lights are turned on.

## **Brake lights**

Depress the brake pedal, brake lights and high mounted brake light turn on.

## **Reverse lights**

Turn vehicle power to ON mode, shift the shift lever to R, reverse lights turn on.

## License plate lights

Turn vehicle power to ON mode and rotate headlight combination switch to " nosition to turn on license plate lights. They are used to illuminate license plate in the dark.

## Welcome lights (if equipped)

Turn vehicle power to OFF/ACC mode, when pressing unlock button on smart key/opening door in dark, welcome lights will come on automatically; When vehicle is armed successfully, welcome lights will go off immediately.

## **Ground lights (if equipped)**

Use key to unlock vehicle to open any of front door, ground lights come on.

# Interior Lighting

# Front dome lights



- Reading lights switch: Press "듯" switch to turn reading lights on, press the switch again to turn reading lights off.
- 2 Door control switch: Press """ switch, if any door is opened and keep opening, dome lights will be on for 3 minutes (fade in and out).

## Rear dome lights



Press rear dome light switch, the light comes on, press the switch again to turn off light.

## Glove box light

When the glove box is opened, the light will come on. When the glove box is closed, the light will go off.

## Luggage compartment lights



When boot door is opened, luggage compartment lights will turn on for several seconds automatically. When boot door is closed, luggage compartment lights will turn off immediately.

# Headlight Height Adjustment



Turn vehicle power to ON mode, headlight height can be adjusted in the vehicle centre of the audio system

#### Follow Me Home Function



ON: Turn vehicle power to OFF mode. and turn the headlight combination switch "AUTO" to position. When the vehicle is in a dim environment, press lock button on smart kev. vehicle is locked successfully. Low beam lights automatically come on for 27 seconds. Press lock button on smart key to activate it again.

OFF: When vehicle power is turned to ACC/ON, press unlock button on smart key, the headlight combination switch is not in "AUTO" position or reaches the set operating time, the follow me home function will be turned off automatically. Low beam lights will go off immediately.

# **@** READ

Follow me home function needs to be set in audio system (for details, refer to "Audio System").

# Smart Vehicle Locating Function



Turn the headlight combination switch to "AUTO" position before stopping. When the vehicle is in a dim environment, press unlock button on smart key, the low beam lights come on for 27 seconds.

## Intelligent Headlight Function (IHC)

Turn vehicle power to ON mode, and turn the headlight combination switch to "AUTO" position. When the low beam light turns on automatically, pull the headlight combination switch away from steering wheel side and release. When the vehicle speed is more than 24 mph (40 km/h), the white indicator " in instrument cluster remains on, and the intelligent headlight function (IHC) is activated; At this time, the intelligent headlight function (IHC) automatically turns headlight high beam on/off according to road conditions, such as meeting, following, and overtaking.

When the intelligent headlight function (IHC) is activated, the headlight high beam turns on or flashes, the white indicator " in instrument cluster goes out. Pull the headlight combination switch away from the steering wheel side and release, intelligent headlight function (IHC) is reactivated.

#### READ

- When the vehicle speed is less than 18 mph (30 km/h), the intelligent headlight function (IHC) turns off the headlight high beam automatically.
- When the ambient brightness is too high, the intelligent headlight function (IHC) turns off the headlight high beam automatically.
- When the left/right indicator signal light is activated, the intelligent headlight function (IHC) can not turn the headlight high beam on automatically.
- Intelligent headlight function (IHC) needs to be set in audio system. For details, refer to "Audio System".

# Fogging Instructions for Light

When the weather is cold or humid, the inner side of lights will fog up due to the difference in temperature between the inside and outside. After lights turn on for a period of time, the fog inside the lights will gradually disappear, and there may still be some fog at the edge of the lights. This is normal. This fog has no effect on service life of lighting system. The vehicle lights generate fog, which gradually begins to disappear in the lights of the headlight within 30 minutes after the low and high beam lights are turned on. After a period of lighting, the moisture disappears naturally. This is normal.

## **↑** WARNING

- Following guidelines for driving through water (for example: water depth, speed, etc.) to avoid any water entering the lights.
- After opening light dust cover, reinstall it in place at the end of operation, otherwise water may enter the lights.
- When replacing a bulb, strictly check installation of various light components to make sure that they are installed correctly and sealed properly. When installing rear cover, check its seal ring and keep it clean!
   Otherwise, it will lead to water and dust entering lights!
- It is strictly forbidden to flush the engine compartment with a high pressure
  washer, in particular, the lights cannot be flushed. Due to high pressure of
  a pressure cleaner, accessories on lights may be loose or fall off, vent hole
  and wire harness connector may damp, resulting in water infiltration or
  moisture not dispersing for a long time, and even severe condensation.

#### 2-7. Seats

#### Head Restraints



Adjust head restraint upward: Pull it up directly to a proper height.

Adjust head restraint downward: Push the head restraint down while pressing the lock release button.



Removing head restraints: Pull the head restraint up completely while pressing 2 lock release buttons.

Installing head restraints: Align the head restraint with the installation holes and push it down to lock position. Press and hold the lock release button when lowering the head restraint.

# **↑** WARNING

- Do not adjust head restraints while driving, otherwise it may cause accidents and personal injury.
- Make sure the head restraint is securely locked before driving, otherwise it may cause accidents and personal injury.

#### Front Seats

## **Correct sitting posture**

The seats, head restraints, seat belts and airbags are helpful to protect passengers. Using them correctly will provide you with more protection.



When sitting, sit slightly inclined backwards (25° backward from vertical position is ideal) and well back on seatback.


The front seats must not be too close to the instrument panel. The driver should hold the steering wheel with slightly bent arms during driving, their feet should also be bent slightly so that they can fully depress the pedal. Adjust head restraints properly so that the top of the head restraint is closest to the top of your head.



The shoulder belt should be over the centre of the shoulder and close to the chest, kept away from the neck, the lap belt should lie over the hips instead of stomach.

#### Power seat

#### ■ Adjusting power seat

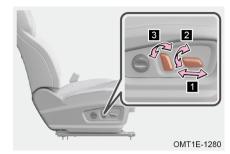

 Adjusting seat position forward and backward

Move button forward and backward to adjust the seat back and forth.

Adjusting seat height (only driver side)

Move rear end of button upward and downward to adjust seat upward and downward.

3 Seatback angle adjustment

Move upper end of button forward and backward to adjust seatback angle.

Turn vehicle power to ON mode, click the icons by Audio System - Vehicle Centre - Vehicle comfort to adjust the seat position.

After adjusting the seat position, this interface will pop up on the audio screen.

Front seat front and back positions and seatback angle adjustable range (-Following data are applicable to power and manual seats):

The total adjustable front and rear range is 240 mm: When at designed position, it can be adjusted 200 mm forward and 40 mm backward; The driver's seat height can be adjusted by a range of 60 mm: When at designed position, it can be adjusted 40 mm upward and 20 mm downward; The seatback designed angle is 25°; When at designed angle, it can be adjusted 30° forward and 50° backward.

Note: When measuring the seat depth, seats and seatbacks should be adjusted to the original (designed) positions.




#### **CAUTION**

Do not place any items under the seat while moving the seat, otherwise it will damage the seat.

# **MARNING**

- Do not adjust seat while driving, otherwise it may cause accidents and personal injury.
- Avoid reclining seatback any more than needed, the seat belts provide maximum protection in a frontal or rear collision when the driver and the front passenger sit inclined slightly backwards and well back in their seats.
- Adjusting driver power seat waist (if equipped)

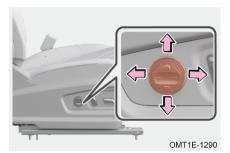

Long press "1" to support upper part of waist and reduce support to lower part of waist.

Long press " to support lower part of waist and reduce support to upper part of waist.

Long press " " to increase support to overall forward side of waist.

Long press "
" to reduce support to overall forward side of waist.

■ Front passenger power seat captain button (if equipped)



Adjusting seat forward and backward

Move button forward and backward parallel to adjust seat position.

2 Adjusting seatback angle Move upper end of button forward and backward to adjust seatback angle.

# 🕮 READ

There is a limit position for waist support adjustment. When reaching the limit position, release the adjusting button in time.



Do not place any items under the seat while moving the seat, otherwise it will damage the seat.

# **↑** WARNING

- Do not adjust seat while driving, otherwise it may cause accidents and personal injuries.
- Avoid reclining seatback any more than needed, the seat belts provide maximum protection in a frontal or rear collision when the driver and the front passenger slightly incline backward and well back in their seats while sitting.

#### Rear Seat

## Folding seatback (the right seat is folded in the same way)



Adjust height of seat head restraints, remove them if necessary and fold up centre armrest. Then pull the left seatback adjustment handle forward and pull seatback forward to fold it down slowly. This can enlarge the luggage storage space.

When at designed angle, rear seatback can be adjusted 106.8° forward and 4.7° backward.



When folding seatback, make sure that outer seat belt passes around the seatback to avoid damaging the belt.

## ↑ WARNING

- Do not adjust seat while driving, otherwise it may cause accidents and personal injury.
- · Do not fold the seatbacks down while driving.
- Do not allow anyone to sit on a folded seatback or in the trunk while driving.
- Do not allow children to enter the trunk.
- Do Be careful not to catch your hand when folding the rear seatbacks.
- Adjust the position of the front seat before folding down the rear seatbacks so that the front seat does not interfere with the rear seatbacks when folding down the rear seatbacks.
- After returning the seatback to the upright position, make sure that the seatback is securely locked in position by lightly rocking it back and forth.
- If the seatback is not securely locked, the red marking will be visible on the seatback lock knob. make sure that the red marking is not visible.

## Seat Heating Function (If Equipped)

#### Front seat heaters



Method 1: After starting the vehicle, click front seat heater button by air conditioning display screen - seat - heating, it is 3-level heating (3 indicators on). Each time the switch is clicked, the heating level is lowered one level. Click it the fourth time to turn off the seat heating.



Method 2 (if equipped): After starting the vehicle, press the front seat heater switch on the auxiliary fascia console. it is 3-level heating (3 indicators on). Each time the switch is pressed, the heating level is reduced by one level. Press it the fourth time to turn off the seat heating.

#### Rear seat heaters



Method 1: After starting the vehicle, click rear seat heater button by air conditioning display screen - seat - heating, it is 3-level heating (3 indicators on). Each time the switch is clicked, the heating level is lowered one level. Click it the fourth time to turn off the seat heating.



Method 2: After starting the vehicle, press the rear seat heater switch. it is 3-level heating (3 indicators on). Each time the switch is pressed, the heating level is reduced by one level. Press it the fourth time to turn off the seat heating.

## (A) READ

Front seat heating and front seat ventilation cannot be turned on simultaneously.

# Seat Ventilation Function (If Equipped)

#### Front seat ventilation



After starting the vehicle, click seat ventilation button by air conditioning display screen - seat - ventilate, it is 3-level ventilation (3 indicators come on). Each time the switch is clicked, the ventilation level is reduced by one level; Click it for the fourth time to turn off the seat ventilation.

# 🕮 READ

Front seat heating and front seat ventilation cannot be turned on simultaneously.

# Seat Memory Function (If Equipped)



Turn vehicle power to ON mode, the audio system will pop up vehicle comfort screen, select Driving position, Rest position or Alternate location, long press to update and memorize.

When you need to recall seat memory position, select driving position button, rest position button or alternate location button by Audio System - Vehicle Centre - Vehicle comfort - Seat / rear-view mirror position.

Note: Seat memory and outside rear view mirror memory are saved and recalled at the same time.

# **⚠** WARNING

When seat memory binding function turns on, please ensure that nobody is caught. If so, move the seat adjustment button to stop operation of seats. Do not leave children alone in vehicle. Otherwise, they may be caught due to seat memory function.

# Easy Entry / Exit Seat (If Equipped)



Turn vehicle power to ON mode, turn on easy entry / exit seat function by Audio System - Vehicle Centre - Vehicle comfort.

Vehicle power is switched from ON to OFF mode and open driver door, driver seat automatically moves backward a certain distance so that driver can get off conveniently.

Vehicle power is switched from OFF to ACC mode, driver seat automatically moves forward a certain distance for easy starting.

#### WARNING

When seat portable entry / exit function turns on, please ensure that nobody is caught. If so, move the seat adjustment button to stop operation of seats. Do not leave children alone in vehicle. Otherwise, they may be caught due to seat portable entry / exit function.

#### 2-8. Seat Belts

#### Seat Belts



We strongly recommend the driver and passengers wear their seat belts correctly at all times. Failure to do so could increase possibility severity of injury in an accident. Check the seat belt regularly. If any seat belt function failure is found. please contact authorized service centre for inspection and repair immediately.

If driver seat belt and/or front passenger seat belt are not buckled or fastened instrument cluster turns on; When vehicle speed is 15 mph (25 km/h) or more, the red indicator " " in instrument cluster flashes, accompanied by sound alarm

If the rear seat belt is not buckled or fastened firmly: When vehicle speed is 15 mph (25 km/h) or more, the indicator "♣♣♣" in instrument cluster flashes for a few seconds and then remains on, accompanied by sound alarm.


Note: the red indicator light turns on when the corresponding rear seat belt is not fastened, and turns off when the corresponding rear seat belt is fastened.

# READ

When the rear seat belts are not fastened, the red indicator in instrument cluster is on. After one of the rear seat belts is fastened, the green indicator is on. When all the seat belts are fastened, the indicator light goes out.


## Using seat belt correctly

Step 1: Adjust the height of front seat belts;

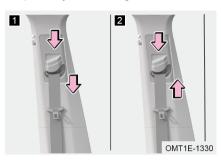

- Adjust downward: Push seat belt adjustment button downward while pressing adjusting button.
- Adjust upward: Push seat belt adjustment button upward while pressing adjusting button.

Step 2: Fasten/release seat belt;

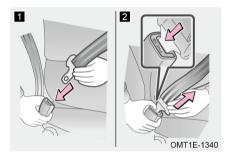

- Fastening seat belt: Push the tab into the buckle until a "click" sound is heard.
- Releasing seat belt: Press the release button to retract seat belt. If the belt cannot retract smoothly, pull it out and check for kinks or twists. Make sure that seat belt can retract smoothly.


# 🚇 READ

- Each seat belt must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupants' lap.
- The seat belt will lock when it is pulled out quickly or the vehicle is on a slope, but it will not lock when pulling it out slowly.

# CAUTION

- Make sure that seat belt buckle position is correct and is locked safely, otherwise it may cause personal injury.
- Do not use any seat belt with a loose buckle, otherwise, the seat belt will not protect the passengers in the event of sudden braking or a collision.

Step 3: Adjust the position of seat belts.

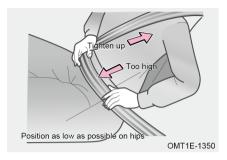

To adjust the seatback angle, sit up straightly and well back in the seat. Position the lap belt as low as possible on your hips - not on your waist, then pull the shoulder section upward so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.

#### $\triangle$

#### **CAUTION**

- We recommend that children be seated in the rear seat and always use seat belt or appropriate child restraint system.
- Avoid loose fitting clothes when driving. These can prevent the seatbelt fitting correctly and can affect the protection offered.
- Do not recline seat more than necessary to achieve a comfortable ride.
   Seat belts are most effective when passengers are sitting up straight and well back in their seats.
- Make sure the shoulder belt is positioned across your shoulder. Do not
  place the shoulder belt under your arm. The belt should be kept away from
  your neck, but not falling off your shoulder. Failure to do so could reduce
  the protection effect of seat belt in an accident.
- Both high-positioned lap belts and loose-fitting belts could cause death or serious injuries during a collision or other unintended events.

# Three-point seat belt for the second row centre seat



When inserting the small tab into the small buckle of left side of the second row seat, use a screwdriver with its tip wrapped with tape or similar object to press the position shown in illustration and pull out the small tab.

# **@** READ

When the seatback is folded, three-point seat belt for the second row centre seat needs to be released, otherwise it may lock and cannot be pulled out.

#### Maintaining seat belt



Check seat belts regularly for cuts, fraying, loose and stretched belt (such as after a traffic accident) If the seat belt is damaged, please contact authorized service centre for inspection and repair immediately.

# CAUTION

- Do not allow water to penetrate belt retractor or buckle mechanism.
- Never use chemical detergent, boiling water, bleach or dye to wash the seat belt.
- The seat belt should be washed with mild cleanser or warm water and dry naturally. Never clean it with artificial heat.
- Do not try to repair or lubricate retractor or buckle mechanism of seat belt, or repair seat belt in any way, we will not be held liable for any problem caused in this way.

## ⚠ WARNING

- If your vehicle has been involved in a serious accident and even if seat belt is not obviously damaged, you should contact authorized service centre for inspection and repair.
- Ensure that the belt and the tab are locked and the belt is not twisted. If the seat belt does not function properly, please contact authorized service centre for inspection and repair immediately.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any service done to the seat belts by authorized service centre.

# Seat belt precautions

■ Precautions for using seat belt by a child

The seat belts of your vehicle are principally designed for persons of adult size. Use a child restraint system (For details, refer to "Child Restraint System" in this section) appropriate for the child, until the child becomes large enough to properly wear the vehicle seat belt. When the child becomes large enough to properly wear the vehicle seat belt, follow the instructions regarding seat belt usage. If a child is too large to use a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle seat belt.



Make sure the shoulder belt is positioned across the centre of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Otherwise, the child is at risk of serious injury or even death during a collision.

Failure to use a child restraint system (for example: Let a child stand or kneel on seats; Let a child sit on an adult's laps; Holding a child in arms). This may cause death or serious injuries during a collision.

■ Precautions for using seat belt by a pregnant woman




Obtain medical advice and wear the seat belt properly. Women who are pregnant should position the lap belt as low as possible over the hips in the same manner other as occupants. Extend the shoulder belt completely over the shoulder and across the chest, avoid belt contact with the abdominal area. If the seat belt is not worn properly, it may cause serious injuries or death during a collision.

# **⚠** WARNING

- After inserting the tab, make sure that the tab and buckle are locked and that the lap and shoulder belt are not twisted.
- Do not insert coins, clips, etc. into the buckle to prevent from properly latching tab and buckle.
- If the seat belt does not function normally, it cannot protect passengers from death or serious injury, please contact authorized service centre for inspection and repair immediately.

#### Seat Belt Pretensioner

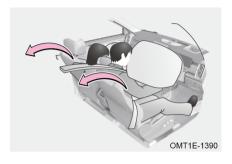

- Seat belt pretensioner is designed to assist front airbag in the event of a severe impact.
- In the event of a minor impact or side impact, pretensioner may not be activated.
- During a severe impact, seat belt pretensioner may be activated even if there is no occupant in front seat.
- 4. When seat belt pretensioner is activated, retractor quickly tightens seat belt to tightly restrain occupant.
- 5. When seat belt pretensioner is activated, it may make a working sound and release a small amount of non-toxic gas. The gas produced does not cause a fire and is generally harmless.

## WARNING

- When seat belt pretensioner is activated, the airbag malfunction indicator remains on, and seat belts cannot be retracted / pulled out. Please contact authorized service centre for inspection and repair immediately.
- Do not modify, remove, hit or open the seat belt pretensioner assembly, airbag sensor and assembly wire. Otherwise, it may cause death or serious injuries during a collision.

#### **Function limit**

In the following cases, the seat belt pretensioner may not work properly:

- Modify suspension system.
- Modify front body section.
- Repair the seat belt pretensioner or any assembly nearby.
- Seat belt pretensioner assembly or its surrounding area is damaged.
- Install grill guard or any other device to front body.

## 2-9. Child Restraint Systems

## Child Restraint Systems

According to accident statistics, a child is safer sitting in the second row seat and properly restrained than child in front seat. Choose a child restraint system suitable for the vehicle, age and size of the child. (Vehicle seat belt meet international standards is designed according to body size of child over 1.5 m. If any under 1.5 m uses seat belt, the belt could hurt his/her neck seriously in case of an accident).

This instruction only provides installation instructions for child restraint systems (ISOFIX). For installation details, strictly follow the instructions provided by the child restraint system manufacturer.

#### ↑ WARNING

- · We suggest use standard fixing device for child restraint system on the second row seat.
- Child restraint system should comply with the safety standards set by local regulations and laws. We will take no responsibility for an accident caused by using a child restraint system.
- · For effective protection in accidents and sudden stops, a child must be properly restrained using a seat belt or a appropriate child restraint system installed on the second row seat depending on age and size of the child. Holding a child in the arms is not a substitute for a child restraint system.

# Child Safety Seat Grouping

Child restraint systems should comply with local motor vehicle standards for child restraint systems and child safety prevention system (ECE R44/R129), generally, the verified child restraint system is applied a local certification label and also has an orange label after testing by ECE R44/R129 standard. There is information, such as weight group, ISOFIX level and license for child restraint system, on this label.

#### **CRS Table**

|   |        | Front Passenger                |                                 |                                |                                  |                                 |
|---|--------|--------------------------------|---------------------------------|--------------------------------|----------------------------------|---------------------------------|
| Seat Position   | Driver | Passe-<br>nger<br>Airbag<br>ON | Passe-<br>nger<br>Airbag<br>OFF | 2 <sup>nd</sup><br>Row<br>Left | 2 <sup>nd</sup><br>Row<br>Middle | 2 <sup>nd</sup><br>Row<br>Right |
| Seating position<br>suitable for<br>universal belted<br>(YES/NO)  | N/A    | NO                             | YES                             | YES                            | YES                              | YES                             |
| i-Size seating position (YES/NO)                                  | N/A    | NO                             | NO                              | YES                            | NO                               | YES                             |
| Seating position suitable for lateral fixture (L1/L2)             | N/A    | NO                             | NO                              | NO                             | NO                               | NO                              |
| Largest suitable<br>rearward facing<br>fixture (R1/R2X/R2/<br>R3) | N/A    | NO                             | NO                              | R1/<br>R2X/<br>R2/R3           | NO                               | R1/<br>R2X/<br>R2/R3            |
| Largest suitable<br>forward facing<br>fixture (F2X/F2/F3)         | N/A    | NO                             | NO                              | F2X/F2/<br>F3                  | NO                               | F2X/F2/<br>F3                   |
| Largest suitable<br>booster fixture (B2/<br>B3)                   | N/A    | NO                             | NO                              | B2/B3                          | NO                               | B2/B3                           |

#### Note:

- 1. The child seat category is defined according to ECE R16/R44/R129, you can find the category of child seat on it's specification. The child restraint system must be appropriate to the age, weight and size of the child.
- 2. If it is absolutely necessary for you to install a child seat to the front passenger seat, be sure to turn passenger airbag off. Adjust front passenger seat to the highest and rearmost position before installing universal CRS on it.
- 3. It is forbidden to install a child seat with a support base or with a support leg on the middle seat of the 2<sup>nd</sup> row.
- 4. Only universal belted child restraint systems can be used on the middle seat of the 2<sup>nd</sup> row.

### **Child Restraint System Precautions**



This sticker is attached to front passenger sun visor and used to remind you that the vehicle is equipped with front airbag (SRS). Observe the following precautions:

- When using a rearward facing child restraint system in the front passenger seat, the passenger airbag must be OFF, Refer to "-Enabling and Disabling Front Passenger Airbag".
- Never change the design of child restraint system fixing device or seat belt on the vehicle under any circumstances.

It is the driver's responsibility to comply to the instructions provided, and to the instructions provided by the CRS manufacturer.

### Recommended Child Restraint Systems

- Only use child restraints approved to either ECE R44 or ECE R129. Refer to the approval reference attached to the child restraint system.
- When using child restraint systems, please carefully read the instructions
  provided by the child restraint system manufacturer and strictly follow the
  installation instructions, to ensure the child restraint system is installed
  correctly.
- We recommend the following child restraint systems.

| Child Stature | Name  | Manufacturer | Type Of Fixation                                  |
|---------------|---|--------------|---|
| 40∼83 cm      | Baby-Safe 2<br>i-Size CRS with<br>i-Size Base | Britax Römer | ISOFIX with<br>Support Leg (-<br>Rearward Facing) |
| 76∼105 cm     | TRIFIX <sup>2</sup> i-Size                    | Britax Römer | ISOFIX and TOP<br>TETHER                          |
| 100∼150 cm    | KidFix i-Size                                 | Britax Römer | ISOFIX and vehicle belt                           |
| 137~150 cm    | Booster Max                                   | GRACO        | ISOFIX and vehicle belt                           |


#### 2. PREPARATION FOR DRIVING

#### Note:

When using Britax Römer KidFix i-Size:

- Install the SICT side impact extension as per the CRS manual instruction;
- Insert the vehicle lap belt into the Secure Guard. Do not place the vehicle diagonal belt into the Secure Guard.

### Top Tether

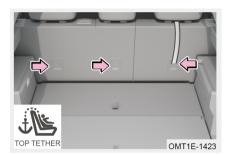

This model is equipped with top tether strap anchorages on the back of the rear seats.

Before using a top tether strap, remove the seating position head restraint and luggage compartment cover. With the child restraint on the seat, attach the top tether strap to the anchorage, and tighten to remove all slack. Refer to instructions provided by the CRS manufacturer.

### **PAD** READ

- · Ensure all removed head restraints are stowed safely.
- After correct installation of the child restraint and top tether, the luggage compartment cover can be re-installed.

## **⚠** WARNING

Ensure the top tether strap anchor is attached correctly. Incorrect installation may cause serious injury to the child.

### ■ Rearward-facing child restraint system



vehicle. Only install a rearward facing child restraint on the front passenger seat if the airbag is OFF. It is recommended children use a rearward facing child restraint system up to 4 years old.

A rearward facing child restraint is installed to face to the rear of the

#### ■ Forward-facing child restraint system



A forward facing child restraint is installed to face to the front of the vehicle. It is recommended children use a forward facing child restraint system when older than 4 years old.

#### ■ Booster seat child restraint system



For larger children that cannot fit in a child restraint system with a high back, they may occupy a second row outboard seat using a booster seat. either attached to the lower anchorage points or belted, described in the instructions provided bv the child restraint system manufacturer.

#### 2. PREPARATION FOR DRIVING

## Installing Child Restraint Systems

## **Child Restraint Systems**



The rear outside seats are equipped with ISOFIX / i-Size anchorages. The anchorage locations are identified by a marking (see illustration) located on the seat back, directly above the associated anchorages. Please press the PUSH position to access the anchorages.

### ■ Size class for child restraint systems (ISOFIX):

We recommends that children should use an appropriate child restraint system, and it is recommended that they are seated on a rear outboard seat.

| Size Class | Fixing<br>Device | Description   |
|------------|------------------|---|
| Α          | ISO/F3           | Full-height, forward-facing child restraint systems   |
| В          | ISO/F2           | Reduced-height forward-facing child restraint systems |
| B1         | ISO/F2X          | Reduced-height forward-facing child restraint systems |
| С          | ISO/R3           | Full-size, rearward-facing child restraint systems    |
| D          | ISO/R2           | Reduced-size rearward-facing child restraint systems  |
| E          | ISO/R1           | Rearward-facing infant seat                           |
| F          | ISO/L1           | Left lateral-facing (carrycot) infant seat            |
| G          | ISO/L2           | Right lateral-facing (carrycot) infant seat           |

### **Installing Child Restraint Systems**




Step 1: Locate the ISOFIX anchorage; Please adjust the second row seat back angle to the front gear.



Step 2: Please press the PUSH position to access the anchorages;

Step 3: Place the child restraint system on the rear outboard seat;

Step 4: Attach the child restraint ISOFIX probe to the anchorage. Where necessary extend the child restraint support leg.

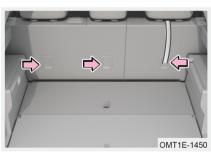

Step 5: Where a top tether strap is required, route, correctly attach and tighten the top tether strap to the top tether anchorage.

Note: If a luggage cover is present, it will need to be removed, to allow the upper tether access to the anchor point.

Note: Refer to the child restraint system instructions whether it needs to be secured by an upper tether belt.

## 🚇 READ

- If it interferes with the installation, the head restraint can be removed from the seat the child restraint system is installed on.
- After attaching the upper tether to the anchor point, be sure to tighten the
  tether and ensure it is secure. For the specific method of fixing and
  tightening upper tether of the child restraint system, strictly follow the
  instructions provided by the child restraint system manufacturer.
- Before installing the child restraint system that uses an upper tether, the head restraint must first be removed. This will limit or prevent interaction of the head restraint with the upper tether. In addition, any luggage cover present must first be removed.

#### 2. PREPARATION FOR DRIVING

## **↑** WARNING

- · After installing a child restraint system, never adjust the seat.
- It is recommended child restraint systems are installed on the rear outboard seats.
- Never fix more than one child restraint system to one set of anchor points.
- Do not allow the upper tether to cross or pass the head restraint and be sure to tighten the tether after installing. Incorrect installation may cause serious injury to children.
- For the vehicle equipped with a luggage cover on the luggage compartment, the luggage cover must be removed before installing child restraint system to anchor points.
- If anchor point device is damaged or overloaded during an accident, please go to authorized service station for inspection and repair immediately.
- If the driver's seat interferes with the correct installation of the child restraint system on the rear seat behind the driver seat, install the child restraint system on the rear seat behind the front passenger.
- Do not use child restraint system anchor bracket to secure items other than child restraint system. We will not be liable for any accident caused this way.
- If the child restraint system is not correctly fixed in place, the child or passengers may face serious injury or even death during a collision.
- Make sure the top tether is securely latched, and check if the child restraint system is secured by pushing and pulling it in different directions. Follow the installation instructions provided by the child restraint system manufacturer. If the child restraint system is not correctly installed, the child may face serious injury or even death during a collision.

## ↑ WARNING

- If the child restraint system on the rear seat interferes with the front seat, after all correct adjustments, do not install the child restraint system in that seat position; The child and front passenger may face serious injury or even death during a collision.
- Whether the child restraint system is in use or not in use, it should always be secure and fixed properly to the seat; Do not place unsecure child restraint systems on any passenger seats.

### **Enabling and Disabling Front Passenger Airbag**



The airbag enabling/disabling switch is located on the passenger side instrument panel and is visible when front passenger door is opened.

■ Disabling front passenger airbag

Turn the switch to OFF position while pulling the switch outward, the front passenger airbag is disabled and the disabling status indicator will come on.

### ■ Enabling front passenger airbag

Turn the switch from OFF to ON, re-enable the front passenger airbag and the enabling status indicator will come on. It is now safe to sit in the front passenger seat.

### Airbag status indicator



- Disabling status indication
- 2 Enabling status indication

## ⚠ WARNING

- Remember to subsequently enable the front passenger airbag when an adult occupant is seated in the front passenger seat. It is the driver's responsibility to confirm the passenger airbag status is correct for the occupant in the front passenger seat.
- In the event a rearward facing child restraint system needs to be installed
  on the front passenger seat, the front passenger airbag must be disabled.
  Otherwise, it may cause serious injury or even death to young children in
  the event of an accident.

#### 2. PREPARATION FOR DRIVING

### Reminder for Children Staying in Rear Seat

#### Introduction

This function is based on the active detection of millimeter wave radar. After the vehicle is powered off and locked, it detects whether there is a child in the car. If there is child, the system alarms to alert customers and pedestrians around the vehicle. The alarm is alerted by a double flash and a siren.

After locking the car, the system will immediately begin to determine whether there is a child in the car. If a child is detected, an initial alert will be sent ten seconds after locking the car, and the whole process will last five seconds or until canceled.

After the end of the initial reminder, if the door is still closed and the system detects that there are still children in the car, the upgrade reminder will be activated at 85 seconds after the end of the initial reminder; The upgrade reminder signal takes every 60 seconds as a reminder cycle. Within a cycle, the signal of yellow double flashing light and siren lasts for 30 seconds, and then pauses for 30 seconds in this cycle. Repeat until the reminder is canceled.

When the first upgrade reminder is triggered for more than 5 minutes and a child is detected in the car, a three-level reminder will be triggered, and your CAR APP or mobile phone SMS will receive a child forget reminder, which is as follows: "Dear user, it is detected people and pets left in your car. Please return to your car promptly".

### **Temporary system suspension**

The system allows temporary suspension. In the Vehicle comfort menu inside the vehicle centre, there is a temporary off switch for this feature. Turn off the reminding function once through this switch when there is no need to remind temporarily. However, when the vehicle starts and drives next time, the switch will return to "ON" state by default.

**@** READ

Please do not leave children alone in the car.

| 3-1. | Key Information                               |      | Audio System   |
|------|---|------|--|
|      | Key Information73                             |      | Audio View91   |
|      | Replacing Key Battery74                       |      | Vehicle Centre92                                     |
|      | Effective Range76                             |      | Audio Buttons 101                                    |
|      | Keyless Entry77                               | 3-6. | Voice Recognition Function                           |
|      | Vehicle Security79                            |      | Phone-link   |
|      | Immobilizer System80                          |      |  |
|      | Smart Key Vehicle Locating81                  |      | Air Conditioning System Automatic Air                |
|      | Remote Starting for                           |      | Conditioning 105                                     |
|      | Smart Key81                                   |      | Mode Adjustment 110                                  |
| 3-2. | Doors   |      | A/C Settings 110                                     |
|      | Doors Lock Switch82                           |      | Air Outlets Airflow Control111                       |
|      | Unlocking Doors with Inside Handle83          |      | Automatic Cabin                                      |
|      | Door Mechanical Switch83                      |      | Ventilation and Automatic Cabin Cleaning111          |
|      | Electric Rear Door Child-<br>protector Lock84 |      | Air Quality Control System112                        |
| 3-3. | Windows                                       |      | Air Conditioning Cooling                             |
|      | Power Windows85                               |      | Operation 112  |
|      | Window Remote Control Function87              |      | Air Conditioning Heating Operation 114               |
|      | Window Jam Protection Function87              |      | Auxiliary Fascia Armrest<br>Box Cooling Function 115 |
| 3-4. | Power Moon Roof                               | 3-7. | Wireless Charging                                    |
|      | Power Moon Roof (If                           |      | Wireless Charging 115                                |
|      | Equipped)88                                   | 3-8. | Assist Grips and Coat hooks                          |
|      | Moon Roof Remote Control Function (If         |      | Assist Grips 116                                     |
|      | Equipped)90                                   |      | Coat hooks 117                                       |
|      | Moon Roof Jam                                 | 3-9. | Hooks  |
|      | Protection Function (If Equipped)90           |      | Hooks117   |
|      | 1 11 /  |      |  |


| 3-10.Storage Space                                | 3-13.Bonnet                    |  |
|---|--------------------------------|--|
| Storage Space118                                  | Opening/closing the            |  |
| 3-11. Power Outlet                                | bonnet125                      |  |
| Power Outlet 122                                  | 3-14.Boot Door                 |  |
| USB Port 123                                      | Power Boot Door125             |  |
| 3-12.Sun Visors , Vanity Mirrors and Ticket Clips | Boot Door Emergency Opening129 |  |
| Sun Visors, Vanity                                | 3-15.Fuel Tank Cover           |  |
| Mirrors and Ticket Clips 124                      | Fuel Tank Cover129             |  |

## 3-1. Key Information


## Key Information

### Smart key

Smart key is used to lock/unlock doors remotely and open boot door within about 20 m (within clear view) of the vehicle.

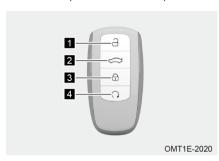

- Unlock button
- 2 Boot door opener button
- 3 Lock button
- 4 Remote starting button

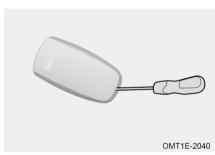

The mechanical key built into the smart key can be used to lock/ unlock doors in emergency after prying off smart key cover using a flathead screwdriver with the tip taped and taking out mechanical key. After using, return it to original place for easy-to-carry (for details, refer to "Door").


#### **Function limit**

- In the following conditions, the smart key may not work properly:
- There are more than one smart keys being used nearby.
- The distance between vehicle and smart key is over 20 m.
- The smart key is in contact with, or is covered by a metallic object.
- The smart key is placed near an electrical appliance (such as mobile phone, personal computer).
- The key is near wireless communication devices that have the similar frequency with the remote control key (such as portable radio).
- The key is near facilities that generate strong radio waves (such as TV tower, radio station, power station, airport, train station).


## ↑ CAUTION

- This product is a low frequency radio device and can be disturbed by various radio services or radiation from industrial, scientific and medical applications.
- Do not change the transmitting frequency, increase the transmitter power (-including installation of the wireless RF power amplifier), or install an external or other transmitting antenna without permission.
- When using it, do not interfere with legal wireless communications; In case
  of interference, immediately stop using and take measures to eliminate the
  interference before continuing to use it.
- If any of the following conditions occurs, the smart key battery may be low or depleted:
- · The remote control distance gradually decreases.
- · Remote control function does not work even without interference.
- Instrument cluster prompts "Smart key battery power is low".

## Replacing Key Battery

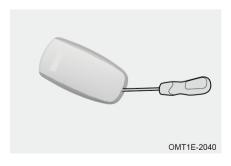

Step 1: Pry off smart key cover using a flathead screwdriver or similar tool with the tip taped.

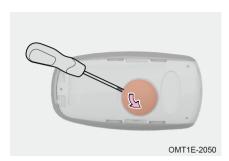

Step 2: Pry off battery cover using a flathead screwdriver with the tip taped, and remove the battery.

Step 3: Install new battery with the positive (+) side up.

Step 4: Install battery cover.

Step 5: Install smart key cover.

Step 6: After replacing the battery, check if the smart key operates properly. If the smart key still does not function correctly, please contact authorized service centre for inspection and repair as soon as possible.

## **⚠** CAUTION

- · Only use the recommended battery type.
- Do not bend electrode and terminal when installing battery.
- Make sure your hands are dry and away from water when replacing the battery.
- Do not touch new battery with oily hands, as this may cause battery corrosion.
- Do not touch or move any components inside the smart key, or its functions may not work properly.
- There may be some difficulties when replacing key battery, that might lead to damage if you are replacing it by yourself, so it is recommended that you replace it at authorized service centre.

## ⚠ WARNING

- Do not swallow the battery. Doing so may cause chemical burns.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.

## 🚇 READ


- Make sure that positive and negative terminals of battery are placed correctly.
- Smart key battery model: 3V-CR2032 lithium battery.
- If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.
- Button batteries are hazardous whether new or used. Keep batteries out of reach of children.
- If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.

### **® ENVIRONMENTAL PROTECTION**

Used lithium battery cannot be handled as general household rubbish, please handle used battery according to the local regulations and provisions regarding environmental protection.

### Effective Range

#### Detectable area

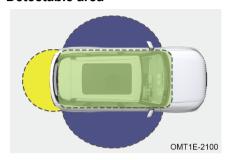

Starting or switching power area

Start or switch power mode when smart key is the vehicle.

Unlocking/locking area

Unlock/lock the doors when smart key is within effective range of door high performance low-frequency antenna.


Opening boot door area

Open the boot door when smart key is within effective range of luggage compartment outer low-frequency antenna.

## **P**READ

Low-frequency antenna can detect areas within 1.5 m away from smart key. Therefore, when using keyless entry or ENGINE START STOP function, ensure that distance between the smart key and low-frequency antenna meets the requirement.

## Automatically sensing area (if equipped)

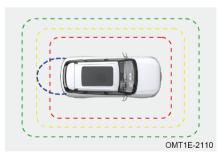

Smart turning on courtesy lights

Approach the vehicle when carrying smart key on your person, the courtesy lights will turn on.

Away from locking area

Leave the vehicle when carrying smart key on your person, doors automatically lock.

Approaching to unlocking area

Approach the vehicle when carrying smart key on your person, doors automatically unlock.

# Smart opening boot door area

Approach the vehicle when carrying smart key on your person, doors can not automatically unlock/lock (for details about boot door sensing open function, refer to "Boot Door").

#### rtth READ


- Please leave the vehicle after the four doors and boot door are closed, otherwise the automatic sensing lock function may not work properly.
- The smart key may be affected by interference from the surround environment and may affect functions like keyless entry, ENGINE START STOP, courtesy, approach unlocking, away locking etc. When the functions are abnormal, please use other methods (such as manual unlocking, remote unlocking) to unlock/lock or start the vehicle.

#### **Function limit**

- Smart key may be not detected in the following conditions:
- · Smart key is in luggage compartment.
- When locking doors, smart key is too close to the window or roof.
- Check if the smart key is placed together with strong electromagnetic interference sources (such as: portable power source, interphone or other phones etc.).

## Keyless Entry

## **Unlocking doors**

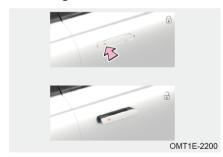

Bring smart key and touch the sensing area of hidden door handle. After system recognizes unlocking signal, the hidden door handle extends automatically, then directional indicator lights flash twice and the door is unlocked.

### Locking doors



Bring smart key and touch the sensing area of hidden door handle. After system recognizes locking signal, the hidden door handle retracts automatically, then directional indicator lights flash once and the door is locked.

#### ( READ

- Turn vehicle power supply to ON mode, turn on the close to welcome guests function by Audio System Quick Control.
- Sensing lock/unlock function is closed after the vehicle is locked for 3 days, restart the engine will restore sensing lock/unlock function.
- When the head unit is set to independent driver door unlocking, only the driver side hidden door handle extends automatically after vehicle is unlocked.

## **MARNING**

Before hidden door handle retracts automatically, make sure that the area is cleared and that no body part of any person nearby is in a position that may be pinched.

## **↑** CAUTION

- Do not put smart key next to computer, cordless mouse, phone, etc. doing so may not affect the lock/unlock sensor.
- Smart key sensing lock function is only operated when vehicle power is switched to OFF mode, all doors and boot door are completely closed and smart key is not stored in vehicle.
- After leaving the vehicle and closing all doors and boot door, smart key is left in vehicle or there is no smart key around vehicle within approximately 2.5 m, smart key sensing active lock function will not be activated.
- If the smart key is over 2.5 m away, the directional indicator lights do not flash and the horn is not hear (signals successful locking), check if the vehicle is locked.
- After smart key sensing active lock/unlock function is activated and if smart key keeps near the vehicle, vehicle will lock automatically for more than 3 minutes, if the key still is in there for another 3 minutes, for the purpose of power saving, smart key sensing function will be temporarily closed, the function can only be activated after opening any door or boot door and then closing all doors and boot door.

### Vehicle Security

### Locking operation



#### ■ Locking mode

Turn vehicle power supply to OFF mode, bonnet, four doors and boot door are closed, perform locking operation of door (For details, refer to "Smart Key" in this section), and enter locked state.

Successful locking prompt: Directional indicator lights flash once and anti-theft horn sounds once.

Unsuccessful locking prompt: Directional indicator lights flash twice and antitheft horn does not sound.

## ■ Secondary locking mode

After deactivating vehicle locking, if four doors and boot door are not operated, the vehicle will lock automatically and become locked after 30 s.

### **印 READ**

- · Locking prompt is set in audio system. For details, refer to "Audio System".
- After deactivating vehicle fortifying, if any of the four doors and boot door is opened, the vehicle will exit secondary locking mode.

## **⚠** CAUTION

- Vehicle locking cannot be set if vehicle power is not switched to OFF mode.
- If four doors are closed and boot door and bonnet is not closed completely, the central lock will lock once but vehicle locking is not set successfully.
- If boot door and bonnet is closed and any door is not closed, the central lock will lock and then unlock and vehicle locking is not set successfully.

### Fortifying deactivation mode



Perform unlocking operation of door to exit locking mode.

Successful deactivating prompt: Directional indicator lights flash twice.

#### Alarm mode

When the vehicle is locked and invalid entry is detected (such as any door, bonnet or boot door is opened invalidly, alarm will be activated), the vehicle will enter cyclic alarm mode, anti-theft horn sounds and directional indicator lights flash; Press unlock button on smart key or switch vehicle power to ON mode to deactivate alarm.

## Immobilizer System

## Engine immobilizer system

Smart key has a built-in transponder chip. If the smart key is not pre-matched into engine anti-theft module, the built-in chip will stop engine from starting. In the following conditions, the engine immobilizer system may not work properly:

- Smart key is in contact with a metallic object.
- Do not modify or remove engine immobilizer system.
- Smart key is too close to or contacts smart key (key with a built-in transponder chip) of another vehicle.

## ↑ CAUTION

- Do not match the smart key by yourself, otherwise the engine immobilizer system may not work properly.
- If the engine fails to start, but the starter works normally, it may be due to the interference of engine immobilizer system, please contact authorized service centre immediately for inspection and repair immediately.

### Vehicle anti-theft system

When vehicle is locked and invalid entry is detected, the vehicle anti-theft system will send sound-light alarm, alerting owner that the vehicle is in an invalid opening state.

### r READ

- The vehicle anti-theft system will not be enabled if the doors are locked by mechanical key. It is recommended to lock doors by smart key.
- After locking doors by smart key, the vehicle anti-theft system will be triggered if front right door is unlocked and opened by mechanical key.
- To prevent unexpected triggering of vehicle anti-theft system and vehicle theft, before leaving the vehicle, check that nobody is in vehicle, all doors and windows are closed properly and the vehicle is locked correctly.
- When vehicle anti-theft system is in anti-theft state, vehicle anti-theft system can be deactivated by pressing unlock button on smart key or if the vehicle starts successfully.

## Smart Key Vehicle Locating

Press lock button on smart key continuously twice within several seconds, horn sounds 6 times, at the same time, directional indicator lights flash 10 times, this allows you to find your vehicle easily.

## Remote Starting for Smart Key


When vehicle power mode is OFF, vehicle is locked and smart key is not in vehicle, press and hold lock button or remote starting button on smart key for several seconds to start it remotely and air conditioning operates automatically at the same time; The vehicle will automatically shut off after vehicle is started remotely for 10 minutes.

### **PAD** READ

- Ensure there is no one in the vehicle (including the driver) when starting the vehicle remotely.
- The vehicle can be unlocked but can not be locked by using remote start.
- Distance when starting vehicle remotely using smart key should not exceed normal operating distance of smart key.
- When single time for starting vehicle remotely is 10 minutes, allow vehicle to start remotely twice, if the two starting has been used, after vehicle power is turned to ON mode, remote start can be used.
- After vehicle is started remotely, some function cannot be operated (such as headlight combination switch, wiper combination switch, audio function), depress brake pedal when carrying smart key on your person, quit remote mode to restore normal operation.

#### 3-2. Doors

#### Doors Lock Switch

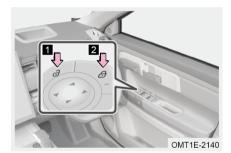

In the vehicle, press lock/unlock switch to lock/unlock the doors.

- Unlock switch
- 2 Lock switch

## READ

When four doors are closed and vehicle speed is more than 9 mph (15 km/h), the door will automatically lock; Door automatic lock need to be set in audio system. For details, refer to "Audio System".

## Unlocking Doors with Inside Handle




When doors are unlocked, pull door inside handle simply to open door. When doors are locked, pull door inside handle for the first time to unlock the door, and pull it again to open the door.

#### Door Mechanical Switch

Vehicle can not be locked/unlocked electrically when battery is depleted, so in this case, the doors can be unlocked/locked with door mechanical switch.

### Locking/unlocking front right door manually

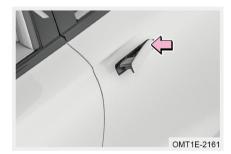

Step 1: Press and hold the front area of the driver door outside handle to open the hidden door handle.



Step 2: Pull the door handle, insert the mechanical key into the keyhole inside the door handle, turn clockwise to unlock the door, counterclockwise to lock the door.

### Locking front left door



Open the door, move the button downward to lock door; Pull the door handle to make sure the door is locked.

#### Locking rear doors manually



Vehicle cannot be locked electrically when battery is depleted or under similar conditions, in this case, the doors can be locked with emergency locking function.

Open the door, insert the mechanical key into the mechanical switch hole, turn the key counterclockwise to lock the rear left door, and turn the key clockwise to lock the door. Pull the door handle to make sure the door is locked.

#### 

- If above problem occurs, please go to authorized service centre for inspection and repair as soon as possible.
- When the vehicle is locked in emergency due to power off, please check if
  the doors are locked successfully one by one after locking. If not, please
  go to authorized service centre for inspection and repair as soon as
  possible.

## Electric Rear Door Child-protector Lock



Press the switch, the switch indicator is on, and child-protector lock is locked. At this time, the rear door cannot be opened from inside the vehicle, but only from outside the car.

### READ

When vehicle power mode is OFF, child-protector lock can be used even if the door is not opened within 2 minutes.

### ↑ WARNING

- The system is independent and can not replace the central lock mechanism in any case.
- Make sure that all doors are closed before driving, otherwise accidents and personal injury may occur.
- When a child is seated in vehicle rear seat, always activate the child lock to prevent rear door being opened accidentally while driving.
- In the case of an accident, when the child lock is activated and there is someone in vehicle, remember that, rear door can only be opened from outside.
- In hot weather, if vehicle stalls and all doors and windows close, do not allow any animal or child in vehicle alone. Otherwise, even if it is a short time, it may cause serious injury or even death due to sharp temperature rise.

#### 3-3. Windows

#### Power Windows

#### Power window switch



Operate power window switch after vehicle power is switched to ON mode:

- Pull the switch to top, window will go up automatically; Press the switch again, window will stop moving.
- Press the switch to bottom, window will go down automatically; Press the switch again, window will stop moving.
- Pull the switch upwards by one level, window will go up; Release the switch, window will stop moving.
- 4 Press the switch downwards by one level, window will go down; Release the switch, window will stop moving.

### **№** READ

- Only vehicles with window jam protection function have one-touch window raising function.
- At the moment of starting engine, window up and down operation will be suspended to provide large current for engine starting.
- If the front door is not opened within 1 minute while vehicle power is switched to OFF mode, the power window can be used.
- After leaving vehicle in low temperature environment for a long time, when
  operating power window switch, window glass cannot be fully opened or
  closed. In this case, release the switch and then operate again, repeat 3-5
  cycles to recover.

## ↑ WARNING

- To avoid personal injury, it is driver's responsibility to guide all passengers to operate power window up/down switch and prevent children using, meanwhile, it is recommended to ensure that vehicle power has been switched to OFF mode or non-mechanical device is closed when leaving the vehicle.
- Take extra care to close windows, failure to do so may cause serious injury! Models without window jam protection function, when window glass rises, passenger's body may be caught, resulting in serious injury. Models with window jam protection function, jam protection function can be activated in jam protection area to protect passenger. However, for the thin or soft objects, jam protection function may be not activated, resulting in serious injury.

## Passenger side window OFF switch



Press passenger side window OFF switch, passenger side window OFF switch indicator comes on, passenger side window switch will be disabled. After disabling, only window switches on driver side can be used to operate passenger side windows (this function is recommended when there is a child in vehicle). Press the switch again to cancel this function and the indicator goes off.

### Window Remote Control Function

#### Remote control window down function

When vehicle power is switched to OFF mode, four doors are closed and unlock button on key is pressed and hold, windows of four doors will go down automatically. If unlock button on key is released or any door is opened in this process, window will stop going down.

### Remote control window up function

While vehicle power is switched to OFF mode and the bonnet, four doors and boot door are closed, press lock button on smart key, the vehicle will lock and the window glass of four doors will rise up automatically. Unlock/lock doors in automatic window up process and windows will stop moving.



If abnormal closing occurs during remote control one-touch window up, the directional indicator lights will flash once and the horn will sound 5 times continuously in order to alarm customer that window has not closed properly.

## ↑ WARNING

Before using remote control up window function, take extra care to see the vehicle clearly and make sure that passengers cannot be caught by window.

### Window Jam Protection Function

## Jam protection function

During one-touch window up or remote control one-touch window up, if obstacle is encountered in jam protection area and resistance exceeds a certain value, window will stop rising and go down slightly; To close window, move away obstacle and operate again.

## Canceling jam protection function

If obstacle is encountered twice continuously when rising the window, the window will stop rising, jam protection function will be canceled. Make sure there are no obstacles when the window is closed.

### Manual learning function

If one-touch window up function and jam protection function can not operate, perform the following steps to restore function. Make sure that there are no obstacles within window range during learning.

Step 1: Switch vehicle power to ON mode;

Step 2: Operate window switch manually to fully close window, and hold it there for 2 s , then release the switch;

Step 3: Operate window switch manually to fully open window, and hold it there for 2 s, then release the switch.:

Step 4: Operate window switch manually to fully close window, then try to operate auto window up function;

Step 5: If window cannot close automatically, please repeat the above steps to set.

### **印 READ**

- If auto window up function cannot be restored after repeating the above steps, please go to authorized service centre for inspection and repair as soon as possible.
- When driving over roads with potholes or uneven surfaces, this may affect door system unexpectedly. In this case, window may reverse and go down while rising by one-touch window up function. This is a low probability event and normal.

## **↑** CAUTION

- If disconnecting battery cable and then reconnecting it, auto window up function and jam protection function will not work.
- Jam protection function is a kind of window safety protection function. Never try to active it repeatedly using various objects, in improper methods or even with some parts of body. Falling to do so may damage window regulation system mechanism or injure personal accidentally.
- When closing window, even if it is equipped with jam protection function, always keep window close area clear. Otherwise, if system encounters a thin object and cannot sense it, jam protection will not work. If someone's hand or finger is caught, serious injury will be caused.

### 3-4. Power Moon Roof

## Power Moon Roof (If Equipped)

#### Introduction

Use the overhead switch to open and close the moon roof and tilt it up and down.

### **Usage method**



#### ■ Opening/closing sunshade

Push " switch backward to slide sunshade to middle position. Push the sunshade switch again to slide sunshade to full open position.

When sunshade is in full open condition, push " == " forward to slide the sunshade to middle position. Push the sunshade switch again to slide sunshade to full closed position.

### ■ Tilting up/closing moon roof

Push " \&" switch backward when moon roof is closed, the moon roof will tilt up.

Push " \( \hightarrow\) " switch forward when moon roof tilts up, the moon roof will close.

#### ■ Opening/closing moon roof

Push " \( \infty \)" switch backward when moon roof is closed, the moon roof will tilt up, push the switch backward again, the moon roof will slide to open.

Push " \$ " switch forward when moon roof is opened, the moon roof will slide to close.

### $\triangle$

#### CAUTION

- If the moon roof jam protection function fails, initial memory position may be lost, and it will be necessary to recalibrate position.
- If there is no response from moon roof during voice control or local button operation, it needs to be re-initialized.
- When moon roof is frozen or covered with snow, forcibly opening moon roof will damage the moon roof glass and the motor.
- If there is water on moon roof after raining, to prevent water from flowing into the vehicle when opening moon roof, always wipe off water or tilt moon roof up to remove these water before opening it.
- Regularly clean the dust and debris in moon roof rails and strips with water; After vehicle washing or raining, completely wipe the water on the moon roof glass before using.
- If you find there is a false jam protection, please go to authorized service centre for inspection and repair as soon as possible.
- The sunshade cannot be closed when the moon roof glass is opening; The moon roof mechanism will be damaged if the sunshade is forcibly closed.



#### ↑ WARNING

Before closing moon roof, take extra care to see the vehicle clearly and make sure that passengers cannot be caught by it.

### Method of initializing moon roof (if equipped)

When moon roof is closed fully, push " \&\times " switch forward for more than 10 s.



#### CAUTION

If moon roof cannot be initialized, please go to authorized service centre to perform it by after-sales personnel.

### Moon Roof Remote Control Function (If Equipped)

#### Moon roof remote control open function

While vehicle power is switched to OFF mode, four doors are closed and unlock button on smart key is pressed and hold for a few seconds, sunshade is opened and then moon roof is opened; Press the lock button or touch the lock sensing area while carrying smart key on your person during opening moon roof, moon roof stops moving.

#### Moon roof remote control close function

While vehicle power is switched to OFF mode, four doors are closed and unlock button on smart key is pressed, the vehicle will be locked and moon roof is closed; Press the lock button or touch the lock sensing area with fingers when carrying smart key on your person during closing moon roof, moon roof stops moving.

## Moon Roof Jam Protection Function (If Equipped)

## Jam protection function

During moon roof glass is closed, it will automatically return under certain resistance. When jam protection occurs in horizontal position, the moon roof glass will return to half open position. When jam protection occurs in vertical position, it will return to tilt up position.



#### WARNING


Do not pass body parts or objects through moon roof during opening and closing, even if it is equipped with jam protection function.

## Overheat protection function

Do not operate the moon roof frequently in a short time, otherwise the motor will overheat or enter the overheat protection state. After that, the moon roof will not respond to key action. The overheat protection will be automatically canceled after the motor is cooled

## 3-5. Audio System

## Audio View

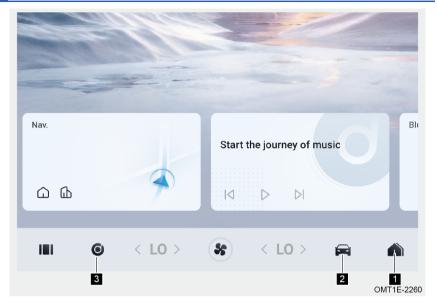

### Home page button

Click to enter system main screen.

Click again to enter vehicle application screen.

## 2 Vehicle setting button

Click to enter the vehicle setting screen for relevant function settings.



## 3 Multimedia button

Click to enter media screen, including DAB radio, music, images, video and bluetooth call.


Press power button on auxiliary fascia console to turn on/off the audio system.

#### **仰 READ**

- · The radio support RDS function.
- Function buttons are different depending on the vehicle configuration. Please refer to the actual vehicle configuration.

### Vehicle Centre

#### **Quick control**

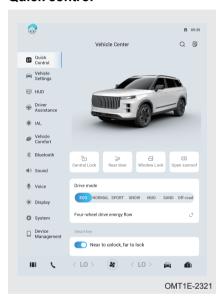

Central lock: Unlocking/locking doors.

Rear door: Opening/closing.

Window lock: Disable ON/OFF of passenger side window/electronic child lock.

Open sunroof: Opening/closing.

Drive Mode: ECO, Normal, Sport, Snow, Mud. Sand. Off-road.

View the four-wheel drive energy flow.

Near to unlock.far to lock: ON/OFF.



Smart key induction tailgate start: ON/OFF.

Headlight delay: ON/OFF.

HMA: ON/OFF.

Welcome when approaching: ON/

OFF.

Headlight height adjustment: 0, 1, 2,

3.

## Vehicle settings



Steering wheel button customization.

Opening height setting of rear door: 1.30 m - 1.80 m.

Arming reminder: Light, Lights and speakers.

Automatic lock: ON/OFF.

Main driver unlocked alone: ON/OFF.


Maintenance tips: ON/OFF. Maintenance mileage reset. Wireless charging: ON/OFF. Forget reminder: ON/OFF.



Steering force mode associated with driving mode: ON/OFF.

Steering force mode: Comfort, Sport.

#### HUD

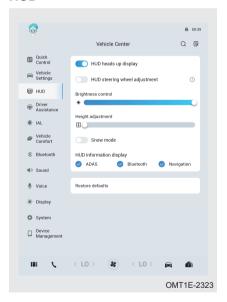

Heads-up display (HUD): ON/OFF.

Settings such as brightness, height, HUD information display, restore default can be performed after it turns on.

HUD steering wheel adjustment: ON/ OFF.

Snow mode: ON/OFF.

#### **Driver assistance**





Intelligent navigation exiting reminder: ON/OFF.

Departure warning system: ON/OFF.

Speed limit assist: ON/OFF.

Overspeed alarm: ON/OFF, and set speed limit value.

Intelligent Speed Control System: ON/OFF.

Intelligent Avoidance System: ON/ OFF.

Traffic sign recognition system: ON/ OFF.

Forward Collision Warning System: ON/OFF.

Forward Collision Warning Sensitivity: Far, Standard, Near.

Automatic emergency braking system: ON/OFF.

Reverse lateral emergency braking: ON/OFF.


Lane assist system: ON/OFF.

Lane departure reminder mode setting: Sound, Vibration, Sound +Vibration.

Lane assist sensitivity: low, high.

Lane departure prevention: ON/OFF.

Emergency lane keeping: ON/OFF.

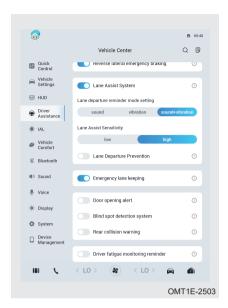

Door opening alert: ON/OFF.


Blind spot detection system: ON/

OFF.

Rear collision warning: ON/OFF.

Driver fatigue monitoring reminder: ON/OFF.

#### IAL

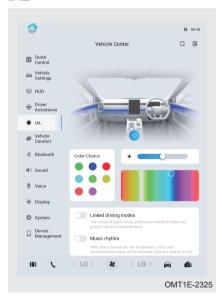


It sets ON/OFF of ambient light; select recommended color, adjust the brightness and color.

Linked driving modes: ON/OFF.

Music rhythm: ON/OFF.

#### Vehicle comfort

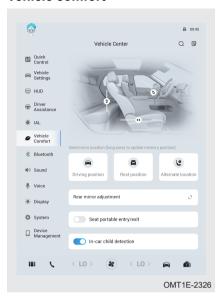


Driver side seat can be adjusted.

Seat/mirror position (ong press to update memory position): Driving position, Rest position, Alternate location.

Rear mirror adjustment.

Seat portable entry/exit: ON/OFF. In-car child detection: ON/OFF.

#### **Bluetooth**

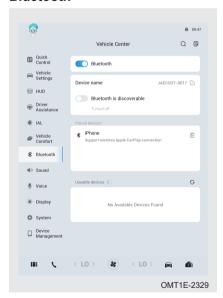


Bluetooth: ON/OFF.

After Bluetooth turns to ON, Bluetooth settings are available.

#### Sound



Sound of navigation, voice, media, bluetooth music, phone, alarm, startup music, default volume can be set.

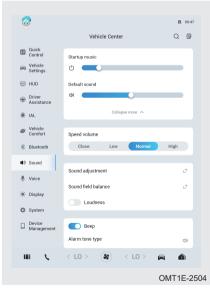

Speed volume: Close, Low, Medium, High.

Set the sound adjustment, sound field balance.

Loudness: ON/OFF.

Beep: ON/OFF.

Alarm tone type: Traditional,

Technological, Trendy.

### Voice




Continuous conversation time: Close, 10s, 15s, 20s.

Sound source localisation: Close, Driver mode. Automatic mode.

Wake-up switch: ON/OFF.


# Display

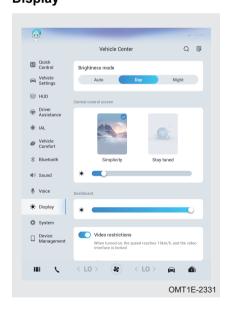

Central control screen: Central control screen.


Set the dashboard and instrument cluster.

Video restrictions: ON/OFF.

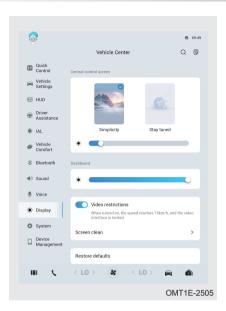

Clean the screen.
Set to restore default.

# **System**

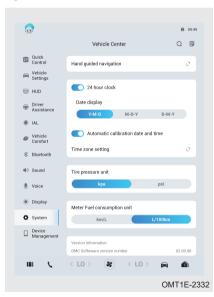

View the hand guided navigation.

24 hour clock: ON/OFF.

Automatic calibration date and time: ON/OFF.

Time zone setting.

Tire pressure unit: kpa,psi.

Meter Fuel consumption unit: km/L,L/ 100km.



View the version information and storage.

Set to restore default.

# **@** READ

The settings are different depending on the buttons of vehicle. Please refer to the actual vehicle.

# **Audio Buttons**



Customization button " \( \frac{1}{2} \) ": This button can be customized in audio system - Vehicle Centre - Vehicle Settings.

Voice recognition button "oc": Short press to enable the local voice recognition function; Long press to enable the Siri function or CarLife voice function (need to be connected with phone).

- "O": Short press to pause while music/radio is playing.
- "
  □+": Press to increase volume.
- "
  □": Press to decrease volume.
- "<": Short press to switch to previous track in music mode; Short press to switch to previous station in radio mode; Hang up the call.
- ">-": Short press to switch to next track in music mode; Short press to switch to next station in radio mode; Answer the call.

# Voice Recognition Function

Voice recognition function can be enabled using the following methods when audio system is turned on:

Method 1: Directly say the wake word to enable the voice recognition function.

Method 2: Short press the voice recognition button "  $({}^{\prime\prime}\zeta$ " on steering wheel to enable the voice recognition function.

### Phone-link

# Apple CarPlay (iOS)

# ■ Connecting method



Step 1: Turn Listen for "Hey Siri" and Press Home for Siri to ON on Settings (Siri&search) screen of phone;



Step 2: Turn CarPlay to ON on Settings (General) screen of phone;



Step 3: Connect USB port and phone using original data cable;



Step 4: Select Allow on CarPlay permission request screen;

Step 5: Enter Apple CarPlay screencast screen.

### ■ Wireless carplay connection

- Step 1: Turn on hotspot on Apple phone, audio head unit WIFI interface is connected to phone hotspot.
- Step 2: Connect Apple phone to Bluetooth on audio head unit.
- Step 3: Select Carplay according to interface that pops up on audio head unit or phone.
- Step 4: Make pairing connection according to pop-up interface on phone; after connection is successfully, audio head unit displays carplay interface.
- Step 5: Enter Apple CarPlay screencast screen.

### **Android Auto (Android)**

■ Connecting method



Step 1: Install the Google Framework:

Step 2: Perform the installation in Google Play and run Android Auto, install all supporting softwares according to the system prompt and update the existing program, and then Android Auto can run normal after completing the update.



Step 3: Connect USB port and phone using original data cable;

Note: Only USB port " F" " supports Android Auto screencast function. Before phone-link, please turn on the developer permissions in the phone settings.




Step 4: If this phone is connected to the vehicle for the first time (a prompt will pop up on the head unit, please operate according to the prompt on the mobile phone, stop the vehicle and apply the parking brake), then the first connection setting can be completed;

Step 5: Click "Android Auto" on the audio main screen to enter "Android Auto" mapping interface.

- Wireless Android Auto connection
- Step 1: Turn on wireless Android Auto switch on the phone.
- Step 2: Turn on Wi-Fi hotspot on head unit.
- Step 3: Perform Bluetooth pairing between head unit and mobile phone.
- Step 4: After Bluetooth connection is successful, a reminder to start wireless Android Auto will pop up on head unit, click "START" to complete wireless Android Auto connection.

# 3-6. Air Conditioning System

# Automatic Air Conditioning

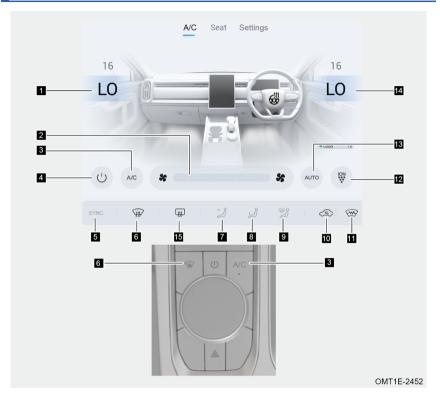

| ■ Front passenger side temperature adjustment area |                                      | Front windshield heating button (if equipped)                       |
|--|--------------------------------------|---|
| 2 Fan speed adjustment area                        | 7 Face mode button                   | 2 Air purification button   |
| 3 A/C button                                       | 8 Foot mode button                   | 13 AUTO button  |
| 4 Power button                                     | Defrosting mode button               | 14 Driver side temperature adjustment area                          |
| 5 SYNC button                                      | Outside/recirculated air mode button | ■ Rear defrosting/<br>outside rear view mirror<br>defrosting button |

Note: Function buttons are different depending on the vehicle configuration. Please refer to the actual vehicle configuration.

### **印 READ**

- Slide up the screen from the bottom of head unit screen, operate the air conditioning operating button on bottom status bar or operate the air conditioning panel button to display the air conditioning system operation screen.
- Do not leave the air conditioning system on longer than necessary when the engine is off to prevent battery discharge.

### Fan speed adjustment

The airflow volume can be adjusted by operating the fan speed adjustment buttons.

### Outside/recirculated air mode button

The outside/recirculated air mode can be switched by operating the outside/recirculated air mode button.

Press outside/recirculated air mode button. If indicator comes on, it indicates that it is in recirculated air mode; if indicator goes off, it indicates that it is in outside air mode.

Use the recirculated air mode under following conditions:

- · In dusty environment.
- · Keep out smells from exterior.
- · prevent outside exhaust gas from entering vehicle.
- To quickly cool or heat the air in the vehicle.

#### A/C button

The air conditioning cooling can be achieved by operating the A/C button.

The A/C button indicator comes on, indicating that the air conditioning compressor is turned on. The indicator goes off, indicating that air conditioning compressor is turned off.

### **Power button**

The air conditioning system can be turned on/off by operating power button.

# Front windshield defogging and defrosting

The front windshield defogging and defrosting function can be achieved by operating front windshield defogging and defrosting button.

Front windshield defogging and defrosting button indicator comes on, indicating that the front windshield defog and defrost function starts to operate. The indicator goes off, indicating that the front windshield defogging and defrosting function stops operating.

Front windshield defogging and defrosting: Most of the airflow blows to front windshield, a small amount of airflow blows to side windshield.

When the air volume is not OFF, touching front windshield defogging and defrosting button will start the outside air mode and air conditioning compressor forcibly.

For the best defogging and defrosting effect, please operate as follows:

- Step 1: Before driving, make sure that the inner surface of glass is clean and dry, if there is obvious dust or water drop, it is necessary to wipe off;
- Step 2: Air volume adjustment: Max level;
- Step 3: Temperature adjustment: Adjust comfortable temperature;
- Step 4: Outside/recirculated air mode switching: Select outside air mode;
- Step 5: Mode adjustment: Touch defrost button or adjust foot/defrosting mode;
- Step 6: Turn on the refrigeration system: A/C indicator comes on.

### READ

- When defogging in humid climate (such as rain and snow): Please keep A/ C on. If A/C is off, it will affect defogging effect.
- When defogging in humid climate (such as rain and snow): Please keep outside air mode. If select recirculated air mode, it will affect defogging effect.
- When defogging in winter: Please keep outside air mode, adjust the direction of partial heat, the air outlets on both sides of the instrument panel face the windows on both sides, and when outside temperature is above 0°C, A/C auxiliary defogging is needed.
- If the A/C does not cool, it will affect the defogging effect, please contact authorized service centre for inspection and repair as soon as possible.
- After wiping off all frost or fog, to improve comfort in vehicle, adjust mode and air volume to correct position.

# ⚠ CAUTION

- For driving safety, please use the defogging function correctly.
- Please do not use recirculated air mode for a long time in winter, otherwise the front windshield will be fogged quickly.
- Poor visibility will increase the risk of traffic accidents and personal injury.
   Therefore, it is very important for traffic safety to ensure a good visibility during driving.

# Rear defrosting/outside rear view mirror defrosting

After turning vehicle power to ON mode, press the rear defrosting button, the indicator comes on, indicating that the rear defrosting/outside rear view mirror defrosting function starts to work. The indicator goes off, indicating that the rear defrosting/ outside rear view mirror defrosting function stops working.

The function will automatically shut off after the defrosters have operated about 20 minutes.

# ⚠ CAUTION

- Make sure that the rear defroster is turned off when the fog and frost on window surfaces are cleared.
- Do not scratch or damage the heater wires when cleaning the rear windshield or outside rear view mirror.
- When the battery is low, the rear defroster cannot be turned on to allow the vehicle to start normally.

# **⚠** WARNING

To prevent burning yourself, do not touch the rear windshield or outside rear view mirror when the defroster is operating or has just turned off.

### **AUTO** button

AUTO mode can be turned on by operating AUTO button.

In AUTO mode, with operating A/C switch, blowing mode, adjusting air volume or temperature LOW/HI, the corresponding function exits from AUTO mode.

In AUTO mode, outside/recirculated air mode switches and the circulation function exits the automatic control, and other functions are still in the AUTO mode.

In AUTO mode, operating the AUTO button will not exit from AUTO mode.

#### SYNC button

The mode switches between dual mode and single mode each time SYNC button is pressed.

Single mode: SYNC indicator comes on, indicating that the air conditioning is in single control mode. Driver side and front passenger side temperature cannot be adjusted separately.

Dual mode: SYNC indicator goes off, indicating that the air conditioning is in dual control mode. Driver side and front passenger side temperature can be adjusted separately.

# Front windshield heating (if equipped)

After turning vehicle power to ON mode, press front windshield heating button on the air conditioning control panel, turn on the function. Press the button again, turn off the function.

It is turned off automatically after the function works approximately 20 minutes.

# ↑ CAUTION

- Do not scratch or damage the heater wires when cleaning the front windshield.
- Make sure that the heating function is turned off when the fog and frost on front windshield surface are cleared.
- When the battery is low, the front windshield heating function cannot be turned on to ensure that vehicle starts normally.



To prevent burning yourself, do not touch the front windshield when the front windshield heating function is operating or has just turned off.

### Air purification button

Press air purification button to realize on/off of air purification.

PM2.5 value is displayed on the head unit.

Note: After the air purification function is turned on, the air volume is adjusted to OFF, the temperature is adjusted to LOW/HI, the outside/recirculated air mode is switched on, the front windshield defogging and defrosting function is turned on, and then the air purification function is turned off.

# (A) READ

- The air purification function effect in winter is not obvious due to low ambient temperature in winter.
- When the air purification function is turned on, the outside/recirculated air mode is switched on, the air volume and mode may change.
- Turn on air purification function to ensure that the vehicle is not fogged, the response method of automatic A/C in summer, winter, spring and autumn is not exactly the same, but purification effect can be achieved.
- Air purification function is inoperative and the button is deactivated in following conditions:
  - Air purification function cannot be turned on when temperature conditions are not met.
  - Air purification function cannot be turned on when front windshield defogging and defrosting is turned on;
  - When the wiper is turned on (in high speed or low speed), one-button purification function cannot be turned on after a few seconds;

# Mode Adjustment


The mode adjustment can be achieved by operating the mode adjustment button (defrosting mode, face mode and foot mode can be combined) on air conditioning control panel or the soft button on display screen.

- "Defrosting mode: Airflow is blown out from defroster outlet.
- " 3" Face mode: Airflow is blown out from centre and face outlets on both sides.
- "Foot mode: Airflow is blown out from foot outlet.

### ( READ

- · Face mode and defrosting mode cannot be combined.
- If windshield windows become fogged-up during driving, defrosting mode is recommended. For details, refer to Front Windshield Defog and Defrost in this section.

# A/C Settings

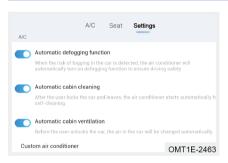

When vehicle power is switched to ON mode, the following functions can be set on the A/C settings screen.

[Automatic defogging function]: When there is a risk of fogging inside the car, the air conditioner will automatically defog to ensure safe driving.

[Automatic cabin air cleaning]: A/C will turn on automatically after the vehicle is locked.


[Automatic cabin ventilation]: The air in the car will be changed automatically before entering the vehicle.

# **READ**

The settings are different depending on the vehicle. Please refer to the actual vehicle.

# Air Outlets Airflow Control

### Centre outlets

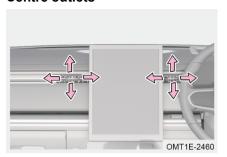

Move centre outlet adjustment lever up, down, left or right by hand to adjust direction of airflow.

### Side outlets



Move left/right side outlet adjustment lever up, down, left or right by hand to adjust direction of airflow.

#### Rear outlet



Move rear outlet adjustment lever up, down, left or right by hand to adjust direction of airflow.

# Automatic Cabin Ventilation and Automatic Cabin Cleaning

#### **Automatic Cabin Ventilation**

In hot weather, when the vehicle is parked outside, the temperature in the vehicle will be high. The interior active ventilation function can be set through the audio setting to cool the temperature in advance and remove the odor coming from the interior trim.

When the outside temperature is higher than 20°C and the system detects that the battery voltage meets the requirements, the vehicle will deactivate locking and the blower will start working in advance (30 seconds).

When the working time of the blower exceeds 30 seconds, any door is opened or the vehicle is locked, the blower will stop working.

# **₩** READ

The blower can operate up to two times before starting vehicle.

### **Automatic Cabin Cleaning**

The automatic cabin cleaning function can be set through the audio setting used to dry the air conditioning pipeline to keep air conditioning system relatively dry and avoid the accumulation of a large number of bacteria and other dirt.

If the A/C was turned on during the last journey and the battery has enough power, the blower will work for 1 minute and then stop after the vehicle is locked for 5 minutes or more.

# READ

Automatic cabin ventilation and automatic cabin cleaning are set in audio system.

# Air Quality Control System

When the outside air quality level is detected to decline in AUTO mode, the recirculated air mode will be turned on automatically. When the air quality returns to a proper level, the recirculated air mode will be turned off automatically. This function cannot be used to detect unpleasant gas. When the ambient temperature is  $\leq 2^{\circ}$  C, air quality control system does not respond, to prevent windshield and window from fogging up.

# Air Conditioning Cooling Operation

- When the engine is working:
- 1. Click AUTO button, the air conditioning system will automatically control compressor switch, compressor displacement, outlet temperature, outlet mode and airflow volume according to the user setting temperature and current ambient condition to meet the user's requirement of temperature control.
- 2. Choosing recirculated air mode can speed up cooling, which is helpful to improve fuel economy and driving comfort.
- For the best cooling effect, please operate as follows:
- Please keep the surface of the air conditioning filter clean without any obvious blockage;
- 2. Click AUTO button, then set driver/front passenger seat temperature to LO. The airflow volume, outside/recirculated air mode, blowing mode, air

conditioning compressor will be set to required maximum cooling status automatically.

### READ

- Surface dirt and block in A/C condenser surface may cause poor cooling effect, please keep condenser clean.
- When air is cooled down quickly in humid and warm conditions, fog may be seen coming from the outlet, this is normal.
- When the temperature is low, such as in winter, even if indicator comes on after operating A/C button, A/C compressor still cannot be started.
- Water dripping from the A/C drain pipe and forming a pool after use of A/C cooling system is normal.
- Refrigerant filled in A/C system will decrease over time, if you feel cooling effect of A/C is poor, please go to authorized service centre for inspection and repair in time.
- It is recommended to turn on A/C refrigeration system not less than 5
  minutes every month and open the window simultaneously, this will help to
  prevent A/C system damage due to lack of lubricant, and also prevent
  evaporator odor due to moist and germs.
- If A/C is on and vehicle is continually climbing long slopes, or is in heavy slow moving traffic for a prolonged period, the engine may become overheated. Please observe the high coolant temperature warning light. If engine is overheating, it is advisable to turn off A/C.
- After temperature in vehicle is decreased to lower temperature, to reduce
  the influence to power system power and fuel consumption, compressor
  will turn off automatically, so if using A/C in spring and autumn seasons
  with low temperature, the compressor will be turned on or off automatically,
  this is normal.
- During sudden acceleration, overtaking and climbing, power system needs more power for compensation. At this time, if the A/C is operating, the compressor may be turned off automatically, if it does not turn off and you feel lack of power, it is recommended to turn off A/C.

# **↑** WARNING

- To extend service life of A/C system, do not use the A/C for a long time with low speed when using A/C refrigeration.
- It is forbidden to repair A/C system by yourself, since the high pressure refrigerant is harmful to human, it is necessary to go to authorized service centre for inspection and repair.
- Please purchase special refrigerant and compressor lubricant at authorized service centre, otherwise, A/C system damages sustained by this are not under warranty.
- In hot summer, the temperature in closed vehicle will quickly increase due to sunshine, this may cause personal or animal injury or death, especially for the infants, even in short time.

# Air Conditioning Heating Operation

- When the engine is working:
- 1. Click AUTO button, the air conditioning system will automatically control outlet temperature, outlet mode and airflow volume according to the user setting temperature and current ambient condition to meet the user's requirement of temperature control.
- 2. Choosing recirculated air mode can speed up heating, which is helpful to improve fuel economy and driving comfort.

# **@** READ

- It is recommended to adjust to foot mode and turn off A/C.
- When air conditioning control operates automatically, priority is given to
  defogging and defrosting, so the auto mode is window and food mode,
  resulting in excessive noise and insufficient temperature at feet area during
  actual usage. It's recommended to set to foot mode manually when there is
  no fogging on front windshield. If there are more people in vehicle and front
  windshield fogs up, air outlet mode can be switched to foot and window
  mode manually.

# Auxiliary Fascia Armrest Box Cooling Function



Place necessary items (For example: Canned drinks) in the auxiliary fascia armrest box to perform A/C cooling operation. Rotate inner button of armrest box to cool the necessary items.

### ↑ WARNING

Those items can not be too big, otherwise, the auxiliary fascia armrest box can not be closed. Movement of driver's arm may be interfered if the auxiliary fascia armrest box is not closed. Be careful not to get hurt.

# 3-7. Wireless Charging

### Wireless Charging

### Introduction

Wireless charging uses electromagnetic induction technology, conveniently and safely to allow for a better experience while driving.

# Usage method



While vehicle power is switched to ON mode, the wireless charging starts to work after putting the mobile phone in wireless charging sensing area, and the audio head unit displays " (1)") ". The audio head unit displays " (1)") " after charging is completely.

- In the following conditions, the wireless charging may not work properly:
- The mobile phone cannot be charged if the back of the phone is more than 8 mm away from wireless charging sensing area.
- The mobile phone cannot be charged if the back of the phone has thick metal (such as coin, metal mobile phone shell), and audio head unit displays " \*\*II "

 When the surface temperature of wireless charging sensing area is higher than 65°C due to sun exposure, the wireless charging module will trigger self-protection and the mobile phone cannot be charged.

### READ

- Wireless charging function is set in audio system (for details, refer to "-Audio System").
- Wireless charging function only supports mobile phones with wireless charging function.
- Please put the mobile phone in the centre of the mobile phone slot. If you
  accelerate, decelerate or turn sharply during driving, the mobile phone will
  shake, which may affect the charging efficiency and stability.

# ↑ CAUTION

- In order to ensure the connection between vehicle and smart key, there will be a temporary charging shield.
- If your mobile phone does not support the wireless charging function, it is recommended that do not use the wireless charging patch. The quality of the wireless charging patch in the market is uneven, and frequent use is easy to damage (such as function failure, interface poor contact, metal foreign object recognition failure, etc.).

### Phone forgetting reminder function

While vehicle power is switched to OFF mode, open driver door and if your mobile phone is left in wireless charging sensing area, it will sound an alarm for 20 seconds or take the phone out within 20 seconds, then the alarm will stop.

Note: Phone forgetting reminder function is set in audio system after wireless charging function is turned on.

# 3-8. Assist Grips and Coat hooks

# Assist Grips



Assist grips are installed above front passenger door and both rear passenger doors respectively.

# $\Lambda$

### **CAUTION**

- Do not use the assist grip when getting in or out of the vehicle or rising from your seat.
- To prevent damage to the assist grip, do not put a heavy load on the assist grip.

# Coat hooks



Coat hooks are located on upper part of B-pillar trim plate.



### CAUTION

Do not hang coat hangers or other hard or sharp objects on the hooks. If the curtain side airbags deploy, these items may become projectiles, causing death or serious injury.

# 3-9. Hooks

### Hooks

# Instrument panel hook



Instrument panel hook is at right of glove box.

# Luggage hooks



Luggage hook is at left and right sides of luggage.



Do not hang heavy items (no more than 3 kg) on the hooks, avoid damage to the hooks.

# 3-10. Storage Space

# Storage Space

# Door storage boxes



Door storage boxes on front and rear doors can be used for storing maps, cups and other items.

# Glove box



Glove box is used to store map, instructions and other items.

### ↑ WARNING

Before driving, make sure that the glove box is closed in place. Otherwise in case of emergency braking or emergency steering, it may cause accidents and serious injury or even death.

### Seat storage bags



Front seatbacks are both equipped with storage bags on backside, which are used to store documents. instruction etc.

### Auxiliary fascia console storage box

Auxiliary fascia console storage box is used to store map, instructions and other items



Lift the lid to open the auxiliary fascia console storage box.



### WARNING

- · Adults or children are not allowed to sit on the auxiliary fascia console storage box.
- Auxiliary fascia console storage box must be closed when the vehicle is running, or it may hinder the driver's arm movement and cause injury.

# **Cup holders**



Front cup holder is located on the auxiliary fascia console.



Rear cup holder is located on the rear centre armrest.

# ⚠ WARNING

- Cover the cup or drink can firmly to prevent water or drinks from spraying out.
- Do not place anything other than cups or drink cans in cup holders to prevent these items being thrown out of the holders in the event of an accident or sudden braking, causing injury.

# Luggage compartment



The split folding rear seats provide convenience for storage of cargo (for details, refer to "Seats").

- When stowing luggage in the vehicle, observe the following precautions:
- Be careful to keep the vehicle balanced.
- For better fuel economy, do not stow unneeded items.

• Make sure that the stowing items are not oversize to prevent the boot door from closing properly.

### ⚠ WARNING

- Do not drive with the boot door open or not closed, to prevent items from being thrown out to cause personal injury.
- Do not allow anyone to sit in the luggage compartment. The passengers should sit in their seats with their seat belts properly fastened. Otherwise, they may be seriously injured in event of sudden braking or a collision.
- Do not stack goods or luggage higher than seatback. Keep them low, as close to the floor as possible to prevent them sliding forward in event of braking, causing personal injury.

### Luggage compartment storage box



There are storage boxes on the left and right sides of luggage compartment.

The maximum weight of storage box is 10 kg.

# Luggage curtain



Pull the luggage curtain to the slots of point A and point B to secure it, and confirm if it is secured properly.

#### Carrier



Roof carrier is used to load cargo which can bear 75 kg goods. Overweight will cause carrier, body roof and other components to be damaged, the various problems caused by overweight are not within the claims.

# CAUTION

- · Do not overload the roof carrier.
- Do not exceed total length or total width of the vehicle when roof carrier is used for loading cargo.
- Before driving, make sure that cargos are securely fastened on the roof carrier.
- Be careful not to scratch the roof surface, place a blanket or other protector between cargo and roof if necessary.

### WARNING

- Apply loads evenly. Improper loading may cause deterioration of steering or braking control, which may cause serious injury or even death.
- Loading cargo on roof carrier will make the centre of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate vehicle correctly.

### 3-11. Power Outlet

# Power Outlet

# Front power outlet



Front power outlet is located on the lower front part of auxiliary fascia console.

Power outlet can be used only when vehicle power is switched to ACC/ON mode.

### Rear power outlet



Rear power outlet is located on the left of luggage compartment.

Power outlet can be used only when vehicle power is switched to ACC/ON mode.

### **CAUTION**

- To prevent the fuse from being blown, do not use electrical equipment with high power (120 W or more).
- To prevent the battery from depleting, do not use the power outlet longer than necessary when the engine is not running.
- Do not insert anything or allow any liquid to get into the outlet other than an appropriate plug, as this may cause electrical failure or short circuits.

### USB Port

### Front USB port



USB port is located on the lower front part of auxiliary fascia console.

USB port " ": It is the Type-C interface.

USB port " ": It can be used for reading U disc, phone-link and charging the electrical equipment with low power, such as phone etc.

# Rear USB port




Rear USB port can be used for charging the electrical equipment with low power, such as phone etc.

USB port is located under the rear air outlet of centre armrest.

# 3-12. Sun Visors, Vanity Mirrors and Ticket Clips

# Sun Visors, Vanity Mirrors and Ticket Clips

### **Sun Visors**

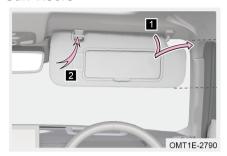

Horizontally move the vanity mirror sliding plate to use the vanity mirror.

- 1 Flip the sun visor down.
- 2 Detach the hook and turn it outward to shade sidelight.

# **Vanity Mirrors**



Turn up the vanity mirror cover plate.

The corresponding vanity mirror light will come on when opening the vanity mirror.

# **Ticket Clips**



Ticket clips are provided with the sun visors.

Fold down the sun visor for use.

# 3-13. Bonnet

# Opening/closing the bonnet



Step 1: Pull bonnet release lever, and the bonnet will pop up slightly; Pull it again, and the bonnet pops up slightly again.

Step 2: Lift the bonnet up and lift and support the bonnet under action of the air spring.

Step 3: Lower the bonnet and close it until the latch is locked;

Step 4: After closing the bonnet, lift it slightly to confirm it is closed properly.

# ⚠ CAUTION

- Before closing the bonnet, check if you have not left any tools, rags etc. in the engine compartment.
- When closing the bonnet, do not press it by hand, otherwise it may be deformed.
- Make sure that bonnet is closed before driving, otherwise accidents and personal injury may occur.

### 3-14. Boot Door

#### Power Boot Door

For your convenience, power boot door can be opened/closed in a variety of ways.

# Smart key remote control

While vehicle power is switched to OFF mode, long press boot door opener button on smart key, power boot door will be opened/closed.


### Driver side switch



With central control lock unlocked, long press " " switch, directional indicator lights will come on and power boot door will be opened/ closed.

When the power boot door is moving, press this switch to suspend the action.

### Boot door exterior switch

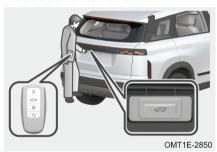

Method 1: With central control lock unlocked, approach the back of vehicle and press exterior switch, on the boot door, directional indicator lights will come on and power boot door will be opened/closed.

Method 2: With central lock locked, approach the back of vehicle while carrying smart key and press exterior switch on the boot door, directional indicator lights will come on and power boot door will be opened/closed.

# **@** READ

When vehicle power supply is switched to ACC/ON mode and the centre control lock is locked, unlock the centre control first, and then open it through the external switch.

### **Boot door interior switch**



When the power boot door opens, press " " switch to close it

When the power boot door is moving, press "  $\iff$  " switch to suspend the action.

# **Boot door opening height**



Method 1: When the power boot door is open, adjust it to your desire height; long press " " switch until the vehicle gives a light prompt, and the power boot door opening height is set successfully.



Method 2: Turn vehicle power to ON mode, set the opening height by Audio System - Vehicle Centre - Vehicle Settings.

# 

If the boot door opening is too low, the boot door opening height cannot be set.

# Boot door jam protection function

If the boot door encounters resistance (such as children, luggage, etc.), boot door operates in the opposite direction until it is fully opened/closed, which is effective in preventing child injury and vehicle damage.

# Smart key sensing (if equipped)



While vehicle power is switched to OFF mode or vehicle is started remotely, four doors are closed, approach to the back (red area) of vehicle when carrying smart key on your person and wait 3 seconds, after directional indicator lights come on, take a step back (green area), power boot door opens.

# **PAD** READ

- Smart key sensing boot door opening needs to be set in audio system (for details, refer to "Audio System").
- Only sensing opening is available for power boot door, sensing closing is not available; There is beep sound when opening and closing power boot door.
- Please be careful to avoid touching power boot door sensing opening function. After entering red area, leave within 2 seconds or leave green area immediately during directional indicator light reminding, or press boot door opener button on smart key otherwise, stop sensing boot door opening function. For details, refer to "Smart Key".

# CAUTION


- If the boot door fails to operate correctly, please go to a authorized service centre for inspection and repair in time.
- When the boot door opens, do not pull electric support rod laterally, which may cause damage to related parts.
- Before opening the boot door, be sure to note that there should be nothing in the opening range, which could result in scratching the boot door.
- When the boot door is opened to the highest position, it cannot be pushed or supported by hand to higher place, as this may cause damage to related parts.
- Before driving, make sure that the boot door is closed properly, otherwise it may cause accidents and damage to related parts.
- When closing boot door by hand, operate gently, do not operate with brute force, which may damage motor and module.
- When closing the boot door, make sure that nobody will be caught. If closing is interrupted, close it again.
- When washing car with car washing device or high pressure cleaner, please make sure that smart key is not within the detection area of power boot door to prevent boot door from opening unexpectedly.
- When going uphill or downhill, due to change in the centre of gravity, the boot door may not open or close. This is normal. Open or close it by hand.
- When ambient temperature is low, power boot door support rod may not support boot door automatically. In this case, lift boot door manually to open it. If boot door is frozen or covered by snow, do not open it forcibly. Turn on heater after engine starts, and do not open the boot door until the temperature in vehicle rises. If it door must be opened in an emergency, wait until ice melts and freezing position is unfrozen to open it.

### **↑** WARNING

- Although the vehicle is equipped with jam protection function, do not activate jam protection function on purpose to avoid accidental injury.
- Before driving, the boot door must be closed, otherwise it may cause accidents and damage to related parts.
- When opening the power boot door, please be careful to avoid injury. Please make sure there is nobody within opening range of boot door. Failure to do so may cause personal injury.

# Boot Door Emergency Opening

Boot door cannot be opened when battery is depleted or under similar conditions. In this case, the boot door can be opened with emergency device switch.

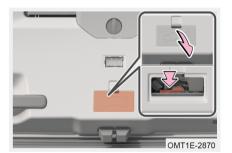

Step 1: Stop the vehicle as safely as possible;

Step 2: Fold the rear seatback;

Step 3: Get in the rear of vehicle and open emergency device cover;


Step 4: Press the emergency switch and then push the boot door to open it.

### 3-15. Fuel Tank Cover

# **Fuel Tank Cover**



Step 1: After the vehicle is unlocked, push the fuel tank cover and it will pop up;

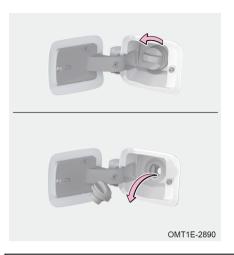

Step 2: Turn fuel filler cap counterclockwise to remove it;

Step 3: After refueling, turn fuel filler cap clockwise until a "click" sound is heard:

Step 4: Close fuel tank cover.

# **@** READ

Fuel may pollute environment. Therefore, any spilled fuel should be collected and disposed by a professional.

### CAUTION

- A slight whooshing sound may be heard when the fuel tank cover is opened. This is normal.
- Never add diesel to fuel tank.
- If fuel overflows during refueling, wipe it off immediately to avoid damage to vehicle paint surface.
- After fuel filler cap is tightened firmly, loosen your hand and the cap will turn slightly in the opposite direction. This is normal.
- To prevent damage to the cap, apply force only in the direction of rotation. Do not pull or pry it.
- During use, if fuel tank cover is not closed, drive vehicle to a safe area and stop, then close the cover again!

# ↑ WARNING

- Before refueling, turn ENGINE START STOP switch off and close all doors and windows.
- Make sure that the fuel filler cap is tightened securely to prevent fuel spillage, causing an accident.
- Because petrol is extremely flammable, smoking is prohibited when refueling, and there must be no other sparks or open flames.
- Do not remove the fuel filler cap quickly when opening it. In hot weather, if cap is removed suddenly, high-pressed fuel vapor may be ejected from the filler neck and cause personal injury.
- Do not inhale vaporized fuel, as the fuel contains substances that are harmful for the health.
- After exiting the vehicle and before opening the fuel tank cover, touch an
  unpainted metal surface to discharge any static electricity. It is important to
  discharge static electricity before refueling because sparks resulting from
  static electricity can cause fuel vapors to ignite while refueling.
- Do not attempt to continue to refuel after the fuel gun is automatically turned off! Otherwise, the fuel tank may be too full, causing fuel to overflow the fuel tank, which can easily cause fire, explosion and serious injury.

# DRIVING VEHICLE

| 4-1. | Vehicle Power Mode                                  |
|------|---|
|      | ENGINE START STOP<br>Switch134                      |
| 4-2. | Starting and Turning off<br>Engine                  |
|      | Normal Starting and Turning off135                  |
|      | Starting and Turning off in Emergency136            |
|      | Petrol Particulate Filter (PPF) 137                 |
|      | Adaptive Engine Control<br>System138                |
| 4-3. | Transmission  |
|      | Automatic Transmission 138                          |
| 4-4. | Intelligent Timely All-wheel-<br>drive System (AWD) |
|      | Intelligent Timely All-<br>wheel-drive System       |

|              | (AWD) (If Equipped) 141                             |
|--------------|---|
|              | Driving Mode (AWD Models)142                        |
| 4-5.         | Steering System                                     |
|              | Electric Power Steering<br>System (EPS)147          |
| <b>4-</b> 6. | Brake System  |
|              | Electric Parking Brake System (EPB)148 AUTO HOLD150 |
|              | Vacuum Booster 152                                  |
|              |   |
|              | Brake 153   |
| 4-7.         | SRS Airbags   |
|              | SRS Airbags154                                      |
|              |   |

### 4-1. Vehicle Power Mode

### ENGINE START STOP Switch

When the system detects the legal smart key and the brake pedal is released, press the ENGINE START STOP switch to switch the power mode of vehicle (each time the ENGINE START STOP switch is pressed, the mode is switched once).



OFF mode: All electrical appliances turn off

ACC mode: Part of electrical appliances can be used.

ON mode: All electrical appliances can be used.

START mode: When vehicle power source is turned to ACC/ON mode, depress the brake pedal and transmission gear is in P. The power of vehicle is switched to START mode and the engine can be started by pressing the ENGINE START STOP switch.

### 

- If ENGINE START STOP switch is not pressed properly, vehicle power mode can not be switched on and the engine may not be started.
- Do not place smart key on to the "key" mark, because if there is sufficient power in the battery, it may trigger an instrument alarm ("Smart key not detected", "Verify successfully, start ready") and cause confusion to the driver.

# CAUTION

- When engine is not running, switch the vehicle power mode to OFF mode to prevent the battery from depleting.
- When engine is running, if smart key is removed, engine will not turn off automatically, anti-theft horn sounds 6 times and meter displays "Smart Key Not Detected".
- When engine is running, if shift lever is shifted to R/N/D, turn off the engine
  and vehicle power will be switched to ACC mode other than OFF mode.
  Shift the shift lever to P, vehicle power will be switched to ON mode, and
  press ENGINE START STOP switch again to switch it to OFF mode.

# Auto power off function

When engine is not running, if vehicle power is switched to ON mode for 1 hour or more, vehicle power will be automatically switched to OFF mode (the

shift lever of a vehicle with automatic transmission will be shifted into P), this function cannot completely prevent battery from being discharged.

# 4-2. Starting and Turning off Engine

## Normal Starting and Turning off

#### Before starting engine

- Step 1: Check surroundings of vehicle before getting in;
- Step 2: Adjust seat position, seatback angle, head restraint height and steering wheel angle;
- Step 3: Adjust angles of the inside and outside rear view mirrors;
- Step 4: Turn off any unnecessary lights and electrical appliances;
- Step 5: Fasten the seat belts;
- Step 6: Confirm that the parking brake is applied;
- Step 7: Shift the shift lever to P;
- Step 8: Vehicle power switches to ON mode, check if malfunction indicator and other indicators on meter are normal; if they are abnormal, contact authorized service centre immediately for inspection and repair.

## Starting engine



Smart key is carried on your person or put it into vehicle, and it can be detected normally:

Step 1: Shift the shift lever to P;

Step 2: Vehicle power switches to ACC/ON mode, depress brake pedal, and indicator comes on in green at the same time;

Step 3: Press ENGINE START STOP switch to start the engine.

# **⚠** READ

When operating ENGINE START STOP switch, one short, firm press is enough.

# After starting engine

Engine idle speed is controlled by electronic control system. When engine is started, high speed can help to increase engine temperature, this is normal. After engine temperature increases, speed will automatically drop down to normal speed. If not, please contact authorized service centre for inspection and repair.

# **⚠** WARNING

Exhaust gas contains harmful substances which may lead to a serious health hazard when inhaled. Use the following methods to avoid inhaling exhaust gas:

- Do not run the engine for a long time in an unventilated area, such as in a garage, etc.
- When running engine in a ventilated with vehicle stopped, switch air conditioning to outer circulation, and set high blower speed.

#### **Turning off engine**



Step 1: Stop the vehicle and apply parking brake;

Step 2: Shift the shift lever to P;

Step 3: Press the ENGINE START STOP switch;

Step 4: Check that engine is turned off.

# CAUTION

- · Do not depress accelerator pedal before engine is turned off.
- After driving at high speed for a long time, engine temperature will be high.
   Do not turn off engine immediately when stopping vehicle. Allow the engine to idle for several minutes, and then turn off engine after its temperature drops. Otherwise, engine may be damaged.

# Starting and Turning off in Emergency

# Starting engine in emergency

When smart key battery is low or signal is seriously interrupted, engine start stop function will not work normally. In this case, start engine according to following steps:



Step 1: Lay smart key onto the key marking of auxiliary fascia console cup holder (as shown in figure) with front side facing up; do not depress brake pedal at this time;

Step 2: Switch vehicle power supply to ACC/ON mode, depress the brake pedal;

#### Step 3: Press ENGINE START STOP switch to start the engine.

Note: Vehicle power is switched to ACC mode, when the engine cannot be started by depressing brake pedal, long press ENGINE START STOP switch for 15 seconds or more, system will ignore brake pedal signal and engine also can start at the same time (it is not recommended to use this function to start driving again unless special circumstances occur).



#### **CAUTION**

Do not place smart key on to the "key" mark, because if there is sufficient power in the battery, it may trigger an instrument alarm ("Smart key not detected", "Verify successfully, start ready") and cause confusion to the driver.

#### Turning off engine in emergency

When vehicle systems are normal during traveling, if engine has to be stopped in case of an emergency, perform as follows:

Method 1: Shortly and continuously press ENGINE START STOP switch 3 times or more within 2 seconds.

Method 2: Press and hold ENGINE START STOP switch for 3 seconds or more.

## Petrol Particulate Filter (PPF)

PPF can capture particulate emissions from exhaust gas to reduce the effect of particulate emissions of vehicle. When particulate emissions from the PPF is accumulated to a certain extent, the system will regenerate PPF with a specific strategy.

Avoid engine idling for a long time when green indicator " on instrument cluster comes on. Increase the vehicle speed (vehicle speed is no less than 37 mph (60 km/h) until the indicator goes off in the case of safety and compliance. Yellow indicator " on instrument cluster comes on, indicating that particulate emissions captured by PPF have reached to its limit, please contact authorized service centre for inspection and repair.

- Observe the following precautions during daily driving:
- 1. Avoid driving for short distance frequently.
- 2. Avoid idling for a long time or frequently.
- 3. Avoid running the engine at low speed and high throttle for a long time or frequently.



#### WARNING

Do not stop, idle for a long time at areas covered by dry leaves, dry grass or other inflammables. The exhaust pipe is at high temperature when engine is running or just after vehicle is stopped, which may lead to fire.

# Adaptive Engine Control System

If the battery terminal is removed and reconnected, the vehicle power is switched to ON mode, and vehicle power will be switched to OFF mode after waiting for 15 s before starting the engine.

Abnormal phenomena (such as, engine shaking or unsmooth starting off) may occur in early driving stage, which is a normal phenomenon that engine control system is learning to adapt to engine again.

#### 4-3. Transmission

#### Automatic Transmission

The automatic transmission belongs to the electronically controlled hydraulic automatic transmission with manual and automatic shift modes.



#### Operation method

Step 1: Depress the brake pedal completely, then shift the shift lever from P to D;

Step 2: Release the parking brake manually or automatically and release the brake pedal to drive the vehicle slowly.

# **@** READ

Press P button on shift lever to shift to P. Push the shift lever forward and backward to shift to other positions (R, N, D).

# Gear position introduction

During the operation, the driver can choose the automatic mode (P, R, N, D) and the manual mode M (+, -). The selected gear position will display the corresponding gear information on the information display area in instrument cluster.

Automatic mode: When the transmission gear is in D, vehicle upshift and downshift automatically according to speed. All are done without manual intervention.



Manual mode: When the transmission gear is in D, press and hold the M switch to enter manual mode M (+, -), push forward to upshift by one gear and push backward to downshift by one gear.

The following information will help you understand purpose and operation procedures of different gears to make a right choice according to actual demand during operation.

| Gear Range         |   | Function  |  |  |
|--------------------|---|---|--|--|
| P (Park)           |   | This is park position. Drive wheels are mechanically locked. Engine can be started.   |  |  |
| R (Reverse)        |   | This is a reverse position. Reverse lights will come on and parking radar system will operate.  |  |  |
| N (Neutral)        |   | This is a neutral position. It is used for short time idling stop.  |  |  |
| D (Forward Drive)  |   | This is a forward driving position. Automatically shift up and down among all forward drive gears according to engine load and vehicle speed. |  |  |
| M (Manual<br>mode) | + | Push shift lever toward + once, transmission will raise one gear.   |  |  |
|                    | - | Push shift lever toward - once, transmission will lower one gear.   |  |  |

# **↑** CAUTION

- In manual mode, when the speed does not change, Kick-down operation is allowed, and automatic up-shifting is not allowed.
- Never shift in P position when the vehicle is not stopped steadily. This may lead to abnormal sound or damage to the transmission.
- When engine stalls, do not coast vehicle in N. Otherwise, the transmission will be damaged.
- Do not shift the shift lever out of D while the vehicle is moving forward. Otherwise, the transmission may be damaged seriously.
- Do not shift the shift lever out of R while the vehicle is moving backward. Otherwise, the transmission may be damaged seriously.
- When shifting the shift lever out of P, it is necessary to depress the brake pedal first to stop the vehicle steadily, and then perform shifting among each gear position. Otherwise shifting mechanism will be damaged.
- When vehicle malfunctions occur due to insufficient battery and even depressing the brake pedal or shifting out of P is impossible, please contact a authorized service centre immediately for inspection and repair.
- In manual mode, when engine speed reaches to the highest speed, it shifts up automatically; when engine speed is excessively low, it shifts down automatically; when vehicle brakes and slows down, it shifts down automatically.
- In manual mode, up-shifting and down-shifting operations must be performed by pushing shift lever according to engine speed and vehicle speed. If the requirements are not met, the transmission will not perform the gear shifting operation.
- When the vehicle is parked on a slope, the parking brake must be applied first, and then the shift lever is shifted into P. After starting on a slope, first shift the shift lever out of P, then release parking brake for driving.

# ⚠ WARNING

- Never tow the vehicle for a long distance or at high speed. Raise drive wheels or disconnect propeller shaft when towing.
- When the transmission is in N, make sure parking brake is applied or brake pedal is depressed, otherwise an accident may occur.

#### Fail-safe mode

When malfunction occurs in transmission system, fail-safe mode will be automatically activated. Simultaneously, a yellow indicator " " on the instrument cluster will come on and transmission cannot operate normally. The vehicle will slow down and be driven at low speed.

# ↑ CAUTION

Long distance driving is not allowed in fail-safe mode. Otherwise, transmission may be damaged, go to authorized service centre for inspection and repair immediately.

#### **Driving mode (2WD models)**



System is ECO mode by default when engine starts. Rotate driving mode knob between SPORT mode, ECO mode or NORMAL mode. You can choose according to different road conditions.

Improve vehicle fuel economy in ECO mode; Improve vehicle handling, controllability and power performance in SPORT mode.

- NORMAL mode: Standard mode controls power and fuel consumption mode to ensure stable power and good fuel economy.
- SPORT mode: Sport mode allows vehicle handling, controllability and power performance to enhance, enhancing vehicle sport characteristics.
- ECO mode: Economic mode controls engine speed with proper gear position to reduce unnecessary fuel consumption.

# 4-4. Intelligent Timely All-wheel-drive System (AWD)

Intelligent Timely All-wheel-drive System (AWD) (If Equipped)

Intelligent timely all-wheel-drive system distributes engine power to all four wheels at the same time.

Intelligent timely all-wheel-drive system is suitable for snowy, sand, muddy and off-road. Different engine power is automatically distributed to the front and rear wheels, and this creates some advantages, for example, it will increase traction when slipping and make acceleration more stable.

## **↑** CAUTION

- For temporary malfunction, " # " yellow indicator on instrument cluster remains on; For permanent malfunction, " # " red indicator on instrument cluster remains on, instrument cluster displays "4WD system is malfunctioning, please contact service centre" at the same time.
- When 4WD system is malfunctioning, electronic stability program system will sound an alarm, only ABS is retained.
- When "\vec{\times}" yellow indicator on instrument cluster remains on, the vehicle will be driven with 2WD state to protect your normal driving.

## Driving Mode (AWD Models)

The vehicle is equipped with 7 driving modes: ECO/NORMAL/SPORT/Snow /Mud/Sand/Off-road, and 4WD system operates intelligently in all modes to automatically switch between 2WD and 4WD. You can also set the driving mode manually according to judgment for road conditions, Off-road will help you get out of trouble in complicated road conditions.



Rotate driving mode knob or set driving mode in unit head, the corresponding mode icon on instrument cluster will comes on accompanied by voice reminder to prompt you that driving mode is switched successfully.

- NORMAL mode: Standard mode controls power and fuel consumption mode to ensure stable power and good fuel economy.
- SPORT mode: Sport mode allows vehicle handling, controllability and power performance to enhance, enhancing vehicle sport characteristics.
- ECO mode: Economic mode controls engine speed with proper gear position to reduce unnecessary fuel consumption.
- Snow mode: Snow mode is suitable for hard but smooth road surface, including snow, ice, grass, gravel road, etc.
- Mud mode: Mud mode is suitable for muddy and uneven road surfaces with a smooth and shallow mud layer or rut.
- Sand mode: Sand mode is suitable for driving in soft and dry sand, beach or desert.
- Off-road mode: Off-road mode improves the acceleration performance, enhancing and the vehicle trafficability. Suitable for mountain off-road and the vehicle out of trouble.

#### rttli READ

- In Snow/Mud/Sand/Off-road mode, idling stop-start system is turned off by default
- When the windows and moon roof glass are open, off-road dirt can splash onto interior devices and cause damage to the vehicle. When driving in off road mode, be sure to keep the windows and moon roof glass closed.
- Adaptive Cruise Control System (ACC) accelerates gently in the vehicle ECO / Snow / Mud / Sand mode, while Adaptive Cruise Control System (ACC) accelerates faster in the vehicle SPORT / Off-road mode.

# ⚠ CAUTION

- When electronic stability program system is turned off, even if Snow/Mud/ Sand/Off-road mode is selected, the vehicle skid limiting ability and get out of trouble ability is reduced.
- Do not drive the vehicle in sand or muddy roads for a long time or let tyres in slippery state for a long time, overheat protection function of 4WD system may be triggered under these operations, "#" yellow indicator on instrument cluster remains on, exit 4WD state and switch to 2WD to protect drive train; Please stop the vehicle to dissipate heat as soon as possible under the condition of safety and wait for a few minutes until the overheat protection function is exited (it is recommended to wait for a few minutes after the alarm is eliminated, so that the temperature of the 4WD system can be lower, and the performance can be better restored) before entering 4WD system again. Please contact authorized service centre if the alarm cannot be eliminated for a long time.

#### Stuck vehicle

The vehicle may continue to sink if incorrect operation is performed when repeatedly driving back and forth to get out of stuck, at this time, ask for external rescue.

- When wheel does not rotate smoothly
- 1. Shift the shift position to R;
- Carefully depress accelerator pedal and move backward along the original lane:
- Carefully dig out all wheels and then make sure that no other parts are buried in the sand.
- Repeatedly driving back and forth to get out of stuck
- 1. Straighten the steering wheel;
- 2. Move the vehicle backward until wheels start to slip;
- 3. Immediately shift to 1st gear and drive forward until wheels start to slip again;

4. Repeatedly perform this backward and forward driving operation until rotations of wheels are enough to move the vehicle backward and forward repeatedly to get out of stuck.

# **MARNING**

- Do not allow wheels to slip for a long time, doing so may cause the vehicle to continue to sink.
- Do not stay in front of or behind the vehicle, especially when trying to drive a stuck vehicle.
- If a stuck vehicle suddenly moves, it may run over someone who stays in front of or behind the vehicle.
- A slipping wheel may cause rocks, branches, pieces of wood or other objects under the wheel to accelerate sharply, which could cause fatal injuries.

#### Before off-road driving

Before off-road driving, it is necessary to learn how to operate the vehicle in different off-road situations and how to safely pass through uneven off-road areas. Off-road driving requires different ability and behavior than driving on the road. The safety of driver and passenger depends on knowledge, skill and caution of driver.

# **↑** WARNING

- · Off-road driving always avoids bias driving on slopes.
- Always make the speed and driving style consistent with the current offroad situation.
- Carefully explore the route on foot before driving into an unknown off-road area
- Do not drive too fast (especially when turning) or perform extreme driving operation.
- Always match the speed and driving style to load, visibility, off-road and weather conditions.
- Be sure to drive at the appropriate speed according to the actual off-road conditions, road conditions, traffic and weather.
- In the event of a turnover, a person who unfastens seat belt may be more likely to die than a person fastening seat belt.
- Luggage and other items being transported on the roof will further raise the centre of gravity, increasing the risk of turnover.
- A vehicle with a high centre of gravity has a greater risk of turnover than a "normal" passenger vehicle that is not suitable for off-road driving during driving.
- Always straighten front wheels if the vehicle is lifted. If the vehicle contacts with the road in an impact manner, the vehicle may roll over.
- Cruise control system is used for road driving and is not suitable for offroad driving at all, the vehicle may even be dangerous if the system is used for off-road driving.
- Always perform off-road driving with special care and foresight. Excessive speed or mishandling may result in serious injury and damage to the vehicle.
- Do not drive over river levee, ramp or slope at excessive speed. This may
  cause the vehicle to lift, making it impossible to turn and lose control of the
  vehicle.
- Do not choose an unsafe route or put driver and occupants in danger due to adventure. When there are doubts about the safety of a route, go back and choose another route.
- Even if it seems easy for off-road driving, it can actually be difficult and dangerous, and may put the driver and occupants at risk. It is best to explore off-road area on foot beforehand.
- Off-road area that does not seem dangerous can be fraught with danger.
  Pits, ditches, deep pits, deep valleys, obstacles, shallow banks, and loose
  muddy ground are often not easily identified and are completely or partially
  covered by water, grass, or tree branches scattered on the ground. Explore
  off-road area on foot if necessary.

## **↑** WARNING

- Do not leave the vehicle through a door facing downhill if the vehicle is stopped sideways on a slope. The centre of gravity created by the vehicle and its load (occupants and load) may shift, causing the vehicle to roll over and down the slope. Leave the vehicle steadily through the door facing uphill every time.
- Off-road area that does not seem dangerous can be fraught with danger.
  Pits, ditches, deep pits, deep valleys, obstacles, shallow banks, and loose
  muddy ground are often not easily identified and are completely or partially
  covered by water, grass, or tree branches scattered on the ground. When
  driving through this off-road area, causing accidents, serious injuries and
  vehicle failures.

#### After off-road driving

- 1. Remove the towing eyelet and tyre chains if necessary.
- 2. Turn off off-road mode.
- 3. Remove heavy dirt from radiator grille and vehicle deck board.
- 4. Check the engine compartment and check if the dirt affects engine operation.
- Clean directional indicator lights, lighting devices, license plate and all window glasses.
- 6. Check tyres, shock strut and axles for damage, and remove large dirt, stones and foreign objects embedded in the tyre pattern.
- 7. Check the vehicle deck board and remove all objects stuck in brakes, wheels, chassis, exhaust devices and engine, such as branches, leaves or wooden blocks. If damage or leakage is found, please contact authorized service centre immediately.

# ⚠ WARNING

- Objects stuck under the vehicle deck board are dangerous. After each offroad driving, it is necessary to check if there is any object stuck under the vehicle deck board.
- Do not drive if there are objects stuck in the deck board, brakes, wheels, chassis, exhaust devices or engine.
- Flammable materials such as dry leaves or branches may catch fire when they come into contact with hot components. A fire may cause serious injury.
- The stuck objects may cause damage to fuel pipes, brakes, seals, and other chassis components. It may lead to accidents and cause the vehicle to run out of control.

# 4-5. Steering System

## Electric Power Steering System (EPS)

#### Introduction

Electric Power Steering System (EPS) uses the torque generated by motor as power source of steering system, instead of a hydraulic pump driven by the engine.

#### Electric Power Steering System (EPS) self-learning

If the vehicle battery is powered off and reconnecting or starting, due to the initialization of electric steering system angle, the yellow indicator " instrument cluster flashes, turn the steering wheel left and right to the limit position to complete the angle reset, and the yellow indicator " !" on instrument cluster turns off.

## **Electric Power Steering System (EPS) indicator**

When there is fault in electric power steering system (EPS), red indicator " on instrument cluster comes on.

## 🕮 READ

The steering force mode can be correlated with the driving mode. After disassociation, steering force can be set to COMFORT/SPORT separately. For details, refer to "Audio System".

# **A** CAUTION

- Frequent handling and rotation of steering wheel over long periods of time may damage the mechanism in the electric power steering system (EPS).
- It is forbidden to turn the steering wheel frequently and quickly at idle speed to prevent the system from overheating. If the system overheats, heavy steering will occur, which is normal. Stop rotating the steering wheel and switch the vehicle power to OFF/ACC mode until the system cools down.

# **MARNING**

After electric power steering system (EPS) is disabled, although the vehicle still has the conventional steering capability, it should be driven with caution. At this time, please go to the authorized service centre for inspection and repair as soon as possible.

## 4-6. Brake System

## Electric Parking Brake System (EPB)

#### Introduction

Electric Parking Brake System (EPB) is a technology that integrates temporary braking during driving and long-time braking after stopping, and implements parking brake by electronic control. This technology replaces the traditional handbrake.

## **Usage method**

■ Applying parking brake manually



When vehicle power is switched to ON mode, or engine starts and vehicle is stopping, pull up the electric parking brake button, " (P)" red indicator in instrument cluster and electric parking brake button indicator remains on, indicating parking brake function has been turned on.

After vehicle power is switched to OFF mode or the shift lever is in P, parking brake function can be applied automatically by Electric Parking Brake (EPB) system.

## ■ Releasing parking brake manually



With engine starts or vehicle power is switched to ON mode, depress the brake pedal and press electric parking brake button manually, "(P)" red indicator in instrument cluster and electric parking brake button indicator will turn off, indicating parking brake function has been released

# ■ Releasing parking brake automatically

Fasten driver's seat belt and close driver side door. Depress accelerator pedal with shift lever in D or R on flat road to release electric parking brake automatically, and "(P)" red indicator in instrument cluster goes off.

When vehicle stops on a slope with shift position in D/R, parking brake can be released automatically by deeply depressing accelerator pedal until driving force is greater than slipping force.

Fasten driver's seat belt and close driver side door. When the vehicle is shifted from P to D/R on flat road, electric parking brake is released automatically, and "(©)" red indicator on instrument cluster goes off.

## **P**READ

- When towing vehicle, it is necessary to release parking brake, and transmission is in neutral.
- Turn vehicle power to OFF mode, electric parking brake system automatically applies parking brake.
- When shifting the shift position from other gears to P, electric parking brake applies automatically, and "(P)" red indicator on instrument cluster comes on.

#### ⚠ CAUTION

- When EPB is malfunctioning, yellow indicator in instrument cluster remains on, please drive slowly to authorized service centre for inspection and repair as soon as possible.
- When performing automatic releasing of electric parking brake, fasten the driver's seat belt and close the driver side door. Failure to do so may cause the automatic releasing conditions of parking brake cannot be satisfied.
- When enabling and releasing electric parking brake, "whooshing" sound may be heard from rear part of vehicle. This is the working sound emitted by parking brake and is normal.
- While depressing brake pedal for releasing or applying parking brake, brake pedal may push slightly up or down, just depress the brake tightly.
- Electric parking brake cannot be released when battery is discharged, and jumper cables can be used to start the engine. For details, refer to "Jumpstarting".
- If vehicle coasts after stopping within a short period, system will increase parking force automatically to hold it for safety. When brake force increasing, system makes operation sound. This is normal.
- Engine starts or the vehicle power is switched to ON mode, when parking brake can not be released manually by depressing brake pedal, you can depress accelerator pedal and press the electric parking brake button to release parking brake, it is only used when parking brake can not be released manually by depressing brake pedal, pay attention to safety when using. Please go to authorized service centre for inspection and repair as soon as possible.

# **↑** WARNING

- To avoid accidental vehicle movement, in auto hold state, confirm shift position before depressing accelerator pedal to start off.
- To avoid accidental vehicle movement, when stopping or leaving the vehicle, after EPB system is operating, "(P)" red indicator on instrument cluster and electric parking brake button indicator goes off after they come on for a certain time, check if "(P)" red indicator on instrument cluster and electric parking brake button indicator come on to ensure that electric parking brake is properly applied.

#### **Emergency braking function**

If foot brake fails, pull up the electric parking brake button continuously to forcibly apply brake by parking brake. In this process, "(P)" red indicator in instrument cluster blinks. Release the button to exit emergency braking.

# ↑ WARNING

- Use this function cautiously during normal driving. When driving, passengers should not touch button accidentally. Otherwise, it may cause an accident.
- When emergency braking function is activated, it will drone. This is normal.
- When applying emergency braking, electric parking brake will apply brake at constant deceleration which is deviated from driver's desired deceleration and braking distance will be different.
- When foot brake fails or brake pedal is blocked, emergency braking function can be used in an emergency. ESP system and its components cannot exceed road traction physical limit, turning on emergency braking function when driving on curved road, dangerous road, heavy traffic road or in severe weather may lead in drifting, side-slipping or pulling over, be careful not to cause an accident.

#### AUTO HOLD

#### Introduction

AUTO HOLD is used to prevent vehicle from rolling when vehicle is stationary and starts off.

# **Usage method**

■ Auto hold function enabling conditions

Engine is started, driver side door is closed properly and driver seat belt is fastened.



#### ■ Turning on auto hold function

Turn vehicle power supply to ON mode, slide down from the top right edge of the audio system screen, turn on auto hold switch, auto hold function can be turned on when auto hold conditions are met, and then the system enters auto hold mode, white auto hold indicator in instrument cluster remains on

#### ■ Activating auto hold function

When auto hold function is turned on, depress brake pedal, shift lever in D, vehicle is changed to stationary state from movement, auto hold function is activated, "(((a))" green indicator in instrument cluster remains on.

Depress brake pedal when vehicle is stationary, and the auto hold function is turned on at the same time and the condition of auto hold is met, then auto hold function is activated, "(((a))" green indicator in instrument cluster remains on.

#### ■ Turning off auto hold function

When the auto hold function is turned on, press the auto hold button to turn off auto hold function. The indicator on the auto hold button turns off, and white auto hold indicator in instrument cluster turns off, indicating that the vehicle has exited the auto hold function.

When auto hold function is activated, press auto hold button to turn off auto hold function, "((a))" green indicator in instrument cluster and indicator on auto hold button turn off, indicating that vehicle has exited auto hold function and switched to parking brake function.

#### ■ Auto hold release function

Way to release auto hold is the same as that of electric parking brake, including manual release and automatic release.

# **@** READ

- The interior designs are different depending on the configuration of the vehicle. Please refer to the actual vehicle.
- According to the configuration of the vehicle, the auto hold indicator displays different. Please refer to the actual vehicle.

# **↑** CAUTION

- When auto hold function is malfunctioning, yellow indicator in instrument cluster remains on, please drive slowly to authorized service centre for inspection and repair as soon as possible.
- Turn on auto hold switch after vehicle starts, if driver door is not closed or driver side seat belt is not fastened, auto hold system cannot be entered.
- After auto hold function is turned on, auto hold system will automatically stop the vehicle after the vehicle comes to a complete stop from motion state by foot brake, but the shift position is still in D or R. It is recommended to shift to N for short parking and shift to P for long parking.
- When auto hold function is turned on, open driver side door or unfasten driver side seat belt to exit auto hold function, close the door or fasten the belt again to turn on the function again.
- When auto hold function is activated, unfasten driver side seat belt or open driver door to switch auto hold to electric parking.
- · Turn off auto hold function before driving into car wash.
- Always park vehicle correctly according to safety regulations and take care to avoid hurt yourself and pedestrians.
- If accelerator pedal is depressed very slowly, auto release of auto hold delays. This is normal.

# **↑** WARNING

To avoid vehicle accidentally moving, in the state of auto hold, confirm shift position before depressing accelerator pedal to start.

# Vacuum Booster

The vacuum booster is controlled by engine vacuum and it works only when the engine is running. Therefore, do not coast your vehicle with engine off.

# READ


Brake control system is different depending on the configuration of the vehicle. Please refer to the actual vehicle configuration.

# **⚠** WARNING

Do not coast your vehicle with engine off while driving downhill. To achieve better braking effect, shift to low gear before driving downhill.

If the vacuum booster does not work because vehicle is being towed or malfunctioning, brake pedal should be depressed more firmly than usual to compensate booster braking effect. In normal temperature, we recommend allowing the engine to idle for 15 seconds after the vehicle starts, if the temperature is lower, the time is longer. This is to allow it to guickly heat and to activate the three-way catalysts and improve waste gas conversion efficiency. It can also help restore the brake vacuum if the vehicle has been parked for a long time. We advise idling the engine for 15 seconds each time you start the vehicle.

#### **Brake**

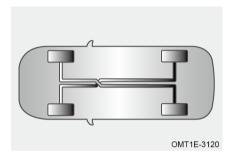

The brake system adopts X type arrangement, double circuit brake system; The system is a hydraulic system with two independent subsystems. If subsystems fails, the other system can still perform brake function. However, the brake pedal should be depressed more firmly than usual and braking distance the and the brake system increase. malfunction indicator remains on.

#### WARNING

Do not drive vehicle under conditions in which only one brake system works. Please go to authorized service centre as soon as possible.

# Brake system malfunction indicator

When there is fault in brake system, red indicator "" on instrument cluster remains on. When there is fault in brake system, check the brake fluid level, add brake fluid when it is lower than MIN line. If reason is unclear, go to authorized service centre immediately.

# Precautions for brake system

Be sure to read the following precautions when using the brake system:

- 1. If there is a continuous shaking or vibration to the steering wheel while braking, please go to authorized service centre for inspection and repair immediately.
- 2. When driving downhill, shift to a low gear to make full use of engine braking effect and avoid continuous use of brakes. Failure to do so may the brakes to overheat, making braking distances longer and in serious cases may mean a temporary loss in brake effectiveness.
- 3. The brake system will make some noises sometimes during operation, which is normal, but if you hear metal friction or a whistling sounds over a period of time, the brake linings may be seriously worn, and you must go to a authorized service centre for replacement immediately.


- 4. The new brake linings must be break-in to reach optimal brake effect. Braking effect in the first 124 miles (200 km) is not optimal. In this case, depress brake pedal more firmly to compensate braking effect.
- 5. A wet brake may cause abnormal vehicle deceleration or pull to one side when braking. Depress brake pedal slightly to test effectiveness of brake. After driving through deep water, keep a safe vehicle speed and depress brake pedal slightly until braking function is restored.
- 6. Wear condition of brake linings largely depends on its working conditions and driving style. For vehicles mainly used in city traffic, frequent starting and stopping will make working condition of brake linings worsen. Therefore, please go to authorized service centre according to specified maintenance mileage to check thickness of brake linings or replace it as needed.

## 4-7. SRS Airbags

## SRS Airbags

In severe frontal/side collision the SRS airbags deploy and work together with seat belts to protect occupants in vehicle. SRS airbags can distribute impact force more evenly to upper parts of occupants' body, so their body move slowly even stop, thus reducing the risk of passenger and driver injury. Once an SRS airbag is deployed, doors will automatically unlock, and hazard lights will illuminate.

# **Location of SRS Airbags**

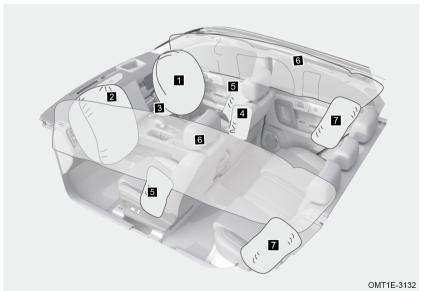

- 1 Driver airbag
- 3 Driver knee airbag
- 5 Front side airbag
- **7** Rear side airbag (if equipped)

# 2 Front passenger airbag

- 4 Front middle airbag
- 6 Curtain side airbag

# Airbag (SRS) Introduction

■ Driver airbag / front passenger airbag

In an event of a severe frontal collision and the airbag deployment conditions are met, both driver airbag and front passenger airbag work together with seat belts to help reduce injuries to the head or chest of driver and front passenger caused by hitting the interior component.

#### ■ Front side airbags

In an event of a severe side collision and the airbag deployment conditions are met, front side airbags can help protect the torso of the front seat occupants.

#### ■ Driver knee airbag

If the airbag crash sensors receive a frontal impact of greater than moderate force, the knee airbag deploys immediately to reduce impact to the driver's legs.

■ Rear side airbags (if equipped)

In an event of a severe side collision and the airbag deployment conditions are met, rear side airbags can help protect the torso of the rear seat occupants.

■ Curtain shield airbags

In an event of a severe side collision and the airbag deployment conditions are met, curtain shield airbags can help protect primarily the head of occupants in the outer seats.

# ■ Front middle airbag

In an event of a severe side collision and the airbag deployment conditions are met, front middle airbag can help protect primarily the head of driver and front passenger.



The SRS airbag works together with seat belt to protect safety of driver and passengers. However, airbag is not a substitute for seat belt. In addition, the SRS airbag will deploy only when the collision degree of vehicle reaches the design condition In some collisions, seat belts are the only protective device. Wearing a seat belt during a collision can help reduce the risk of hitting objects inside the vehicle or being thrown out of the vehicle, and effectively protect the drivers and passengers. Therefore all people in vehicle should wear seat belts correctly. SRS airbags and seat belts can provide protection only for adults but are not designed to protect infants and young children.

The SRS airbag will generate considerable force at the moment of deployment. In order to avoid injury caused by deployment of the SRS airbag, the driver and occupants must adopt the correct sitting posture, correctly wear the seat belt and adjust their seat position, never get too close to the SRS airbag, such as sitting on the edge of the seat or tilting the body forward. Make sure that the arms are sufficiently away from the vehicle side to avoid injury during deploying.

# ↑ CAUTION

- The SRS airbag cannot protect the lower part of the occupant's body.
- The SRS airbag will quickly contract after deploying, which can ensure that forward vision of driver is not blocked.
- The related parts of SRS airbag will generate heat after deploying. Do not touch the related parts of SRS airbag immediately to avoid injury.
- The SRS airbag is a non-reusable device. Once the SRS airbag is deployed, the related parts of SRS airbag must be replaced.
- If the areas where the SRS airbags are stored, such as the steering wheel and instrument panel are damaged or cracked, please go to authorized service centre for replacement as soon as possible.
- The deployment and contraction of the SRS airbag is completed in a short period of time, and cannot protect against the impact of a second impact that may occur subsequently.
- The SRS airbag is neither designed for rear collisions, slight frontal collisions, nor for vehicle rolling over, and it does not work when the vehicle is braked in an emergency.
- The SRS airbags release some smoke and dust after deploying. For people with asthma or other respiratory problems, respiratory system could be stimulated. Therefore, all people in vehicle should get out as soon as possible, or open windows to breathe fresh air and seek medical treatment if necessary.

# **↑** WARNING

- The seat cover should not block side airbags and front middle airbag during using, as in the event of an accident, the side airbags and front middle airbag will not pop up after inflating, which will reduce protection for passengers.
- A soft, dry cloth or cloth dampened with water must be used to clean the SRS airbag. In order to avoid any fluid into the SRS airbag, otherwise it may seriously affect the normal function of SRS airbag.
- If there is water in vehicle, the SRS airbag may be damaged. Even if there
  is no collision at this time, it may cause the airbag to deploy accidentally.
  Turn off the engine immediately and disconnect the negative battery cable.
  Do not try to start the engine. Please contact authorized service centre for
  inspection and repair immediately.
- Make sure driver and front passenger always sit upright. Leaning into the
  path of front middle airbag can prevent the airbag from deploying properly
  and increases your risk of injury.
- Do not attach accessories on or near the front middle airbag. They can interfere with the proper operation of the airbag, or hurt someone if airbag inflates.
- · Do not open the lid of front centre armrest box while driving.
- Do not cover or replace the driver's seatback cover without consulting authorized service centre. Improperly replacing or covering driver's seatback cover can prevent front middle airbag from properly deploying during a side impact.

# SRS airbag indicators

The " \* " red indicator on instrument cluster remains on when it is malfunctioning, which is used to alert the driver that SRS airbag is malfunctioning. Please go to authorized service centre for inspection and repair as soon as possible.


# SRS airbag operating conditions

Deployment conditions of the SRS airbag do not depend on driving speed of vehicle, but depend on the object, collision direction and vehicle speed. SRS airbags may not deploy when the impact of collision is absorbed or dispersed into the body; However, the SRS airbag can sometimes operate depending on the impact condition in an accident. Therefore, deployment conditions of the SRS airbag should not be judged according to the damaged condition of the vehicle.

Even if the SRS airbag is not deployed, a collision may damage the SRS airbag in the vehicle. SRS airbags may not operate properly if damaged, and therefore will not be able to protect you and other passengers in the event of another collision, which may result in accidents and personal injuries. In order to ensure that the SRS airbag can deploy properly in an event of collision,

please go to authorized service centre for inspection and repair as soon as possible.

■ Conditions under which SRS airbag may deploy other than a collision

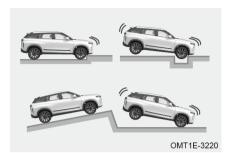

The driver airbag, front passenger airbag, front side airbags, curtain shield airbags and front middle airbag may also deploy if a serious impact occurs to the underside of your vehicle.

■ Conditions under which SRS airbag may deploy in a collision



In general, in an event of frontal collision, the driver airbag, front passenger airbag and driver knee airbag will deploy if the deceleration of vehicle exceeds the designed threshold level.




The vehicle is subjected to a strong side impact, and the side collision sensors detect an impact severe enough to cause the side airbags, curtain shield airbags, and front middle airbag to deploy.


■ Conditions under which SRS airbag may not deploy during a collision



The driver airbag, front passenger airbag and driver knee airbag will usually not deploy if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision.

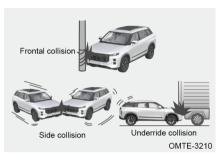

The driver airbag, front passenger airbag and driver knee airbag may not deploy if the front of vehicle hits a telegraph pole, goes under a truck, or if the vehicle is involved in an sideways collision.

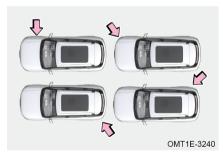

The side airbags, curtain shield airbags and front middle airbag may not deploy if the vehicle is subjected to a collision from side, the rear part of the rear tyre or a side collision at certain angles to the vehicle.



The side airbags, curtain shield airbags and front middle airbag may not deploy if the vehicle is subjected to a front or rear collision, turnover or low speed side collision.

#### Precautions for SRS airbag



Alwavs keep SRS airbag deployment path clear. lt is forbidden to place anything (such as mobile phone) between the occupant and the SRS airbag and fix or place any objects on or near the SRS airbag cover: If there is an object between occupant and SRS airbag, the SRS airbag may not deploy according to design path, or the SRS airbag may push object to occupant's body, causing serious injury or even death.



Do not sit on the edge of the seat or lean against the dashboard.



Do not allow a child to stand in front of the front passenger airbag unit or sit on the knees of front passenger.



Do not lean against the door, A pillar, B pillar or C pillar.

Do not allow anyone to kneel on the passenger seat toward the door or put their heads or hands outside the vehicle.



Do not attach anything to or lean anything against the areas such as the instrument panel, steering wheel and lower portion of the instrument panel. These items can become projectiles when driver airbag or front passenger airbag deploys.



Do not attach anything to areas such as the door, windshield glass, side door glass, A pillar, B pillar, C pillar, roof side rail and assist grip.

Do not strike or apply excessive force to the area of SRS airbag components. Otherwise, it may cause SRS airbag malfunction.

#### Replacement of SRS airbag component

The related parts of the SRS airbag must be replaced 10 years from the date of vehicle purchase. In order to make sure that the SRS airbag can ensure your safety, please always go to authorized service centre to replace related parts of the SRS airbag within the specified time.

Make sure that the new owner knows the SRS airbag configuration and the replacement date of SRS airbag in this vehicle when the vehicle is sold.

# Modification and disposal of SRS airbag components

Do not dispose of the vehicle or operate the following components without permission of the authorized service centre, otherwise accidents and personal injuries may occur:

- Modification of vehicle suspension system.
- · Modification of vehicle front bumper, etc.
- Modification of side doors or door protective panel and B-pillar protective panel, etc.
- Installation, removal, disassembly and repair of airbags (SRS).
- Repair, modification, removal or replacement of steering wheel, instrument cluster, instrument panel and seats.

# DRIVING ASSIST

| 5-1. | Speed Limit Assist System (SLA)                            |      | Blind Spot Detection<br>(BSD) System  |
|------|--|------|---|
|      | Speed Limit Assist<br>System (SLA)165                      |      | Blind Spot Detection (BSD) System 184   |
| 5-2. | Cruise System  |      | Rear Cross Traffic Alert (-<br>RCTA) System186  |
|      | Adaptive Cruise Control<br>System (ACC) 166                | 5-9. | Rear Cross Traffic<br>Braking (RCTB) System 186   |
|      | Active Speed Limit   |      | Door Open Warning System187   |
|      | System   |      | Rear Collision Warning System   |
| 5-4. | Idling Stop-start System                                   |      | Automatic Emergency<br>Braking System (AEB) / Front   |
|      | Idling Stop-start System 174 Hill Descent Control System   |      | Collision Warning System (FCW)  |
|      | (HDC) Hill Descent Control System (HDC)                    |      | Automatic Emergency<br>Braking System (AEB) /<br>Front Collision Warning<br>System (FCW)188 |
| 5-5. | Lane Departure Warning System (LDW) Lane Departure Warning | 5-10 | Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)                     |
|      | System (LDW) 179   |      | Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)                     |
| 5-6. | Lane Departure<br>Prevention System (LDP)                  |      |   |
|      | Lane Departure Prevention System (LDP)181                  | 5-11 | Intelligent Avoidance<br>System   |
| 5-7. | Emergency Lane<br>Keeping (ELK) System                     |      | Intelligent Avoidance<br>System   |
|      | Emergency Lane<br>Keeping (ELK) System 183                 | 5-12 | .Drive Away Information<br>System   |
|      |  |      | Drive Away Information System 195   |

# DRIVING ASSIST

| 5-13 | Tyre Pressure Monitoring System (TPMS)     |      | .Head Up Display (HUD)<br>System                      |    |
|------|--|------|---|----|
|      | Tyre Pressure Monitoring System (TPMS) 196 |      | Head Up Display (HUD)<br>System (If Equipped) 20      | 07 |
| 5-14 | Driver Monitoring<br>System (DMS)          |      | Braking Force Control<br>System                       |    |
|      | Driver Monitoring System (DMS) 198         |      | Electronic Stability<br>Program System (ESP) 20       | 08 |
| 5-15 | Parking Assist System Around View Monitor  |      | Anti-lock Brake System (ABS) 2                        | 10 |
|      | System (AVM) 199                           |      | Extended Function 2                                   | 12 |
|      | Parking Radar System 204                   | 5-19 | .Data Privacy   |    |
| 5-16 | .Multi-Collision Brake System (MCB)        |      | Driver Drowsiness and<br>Attention Warning<br>(DDAW)2 | 13 |
|      | Multi-Collision Brake                      |      | Advanced Driver                                       | 10 |
|      | System (MCB) 207                           |      | Assistance System (ADAS)2                             | 13 |
|      |  |      | Emergency call (eCall) 2                              | 14 |
|      |  |      |   |    |

# 5-1. Speed Limit Assist System (SLA)

## Speed Limit Assist System (SLA)

SLA detects speed limit sign information on road in front and combines the information with speed limit information of navigation system, and use the final speed limit information to remind the driver to pay attention to the various current road speed limit regulations in the form of image, sound, etc., to keep legal speed and observe local traffic laws.



After SLA detects speed limit sign information on road in front and combines the information with speed limit information of navigation system, " indicator in instrument cluster remains on, if the speed exceeds current speed limit, it will have sound prompt or visual warning.

#### **Function limit**

- SLA may not be able to recognize in following situations:
- Faded signs.
- · Signs on winding roads.
- Rotated or damaged signs.
- High signs on highway.
- Signs that is covered fully or partly, or that the position can not be found easily.
- Signs covered by frost, snow, dust fully or partly.
- · Navigation is in a faulty state.
- GPS positioning signal is poor or interfered.
- Poor lighting conditions or low visibility.
- Navigation map not covered or data outdated.
- Signs with complex semantics or easy confusion.

# **@** READ

SLA can be set in audio system. For details, refer to "Audio System".

#### 5. DRIVING ASSIST

## **↑** WARNING


- SLA based on camera function is affected by weather and light, so the function is not appropriate for all conditions.
- Speed limit assist system is only a driving assistance function and cannot completely replace driver's vision. Obstructed cameras or radar, incorrect or missing speed limit information on the map, difficult road conditions and bad weather may all prevent this feature from working properly. In any case, drivers should take the initiative to pay attention to their own speed and road speed limit, and control their driving speed.

## 5-2. Cruise System

# Adaptive Cruise Control System (ACC)

ACC can maintain the speed set by driver and can also follow the vehicle at a set safe distance.

## Adaptive Cruise Control System (ACC) button

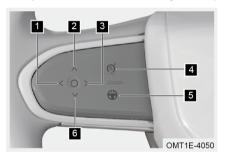

- LEFT button: Reduce the following distance.
- 2 UP button: Resume the ACC, increase speed value of ACC or ASL.
- RIGHT button: Increase the following distance.
- Turn ASL (active speed limit) ON/ OFF.
- Short press to turn ACC ON/OFF; Long press to switch between ACC and TJA/ICA modes.
- DOWN button: Enter the ACC, decrease speed value of ACC or ASL.

# **@** READ

- When there is a vehicle in front of your vehicle in the same lane, and driving speed is not higher than vehicle set speed, ACC will control the vehicle to follow vehicle ahead.
- When there is no vehicle in front in the same lane, or there is a vehicle in front in the same lane and driving speed is higher than set speed, your vehicle will drive at the set speed.

## Adaptive cruise control system (ACC) activation conditions

The following conditions must be met at the same time, ACC can be activated:

- Vehicle speed is higher than 9 mph (15 km/h), or system recognizes a target vehicle ahead.
- Brake pedal is not depressed (during driving).
- · Driver door is closed.
- · Driver seat belt is fastened.
- Transmission gear position is in D position.
- · Parking brake is not applied.
- · ESP is turned on.
- · ESP is not activated.
- · ABS is not activated.
- · Hood is not opened.
- · ASL function turns off.
- · Engine is running.
- · AEB is not activated.
- TCS is not activated.
- Vehicle speed is not higher than 99 mph (160 km/h).
- HDC is not active or standby.
- Vehicle not rolling backward.
- Trailer is not connected.

# Usage method

# ■ Entering ACC

Turn vehicle power to ON mode, the system enter pre-cruising state after activation conditions are met, and "" indicator in instrument cluster remains on:

Method 1: During pre-cruising state, if vehicle speed is higer than 9 mph (15 km/h), or less than 9 mph (15 km/h) and front target vehicle exists, press DOWN button to set current speed as cruise speed and enter cruising state, and " indicator in instrument cluster remains on; if vehicle speed is less than 9 mph (15 km/h), press DOWN button to set 9 mph (15 km/h) as cruise speed, and " indicator in instrument cluster remains on.

Method 2: In the current ignition cycle, after ACC exits, press the UP button to set the previous cruise speed as cruise speed and enter the cruising state, and ""\" indicator in instrument cluster remains on.

#### 5. DRIVING ASSIST

#### **仰 READ**

- ACC will exit when the ASL function is turned on. Only after the driver actively turns off the ASL function, ACC can enter the pre-cruising state again when the activation conditions are met.
- When there is a vehicle in the front of your vehicle at the same lane, and driving speed is no higher than vehicle set speed, ACC will control the vehicle to follow vehicle ahead.
- When there is no vehicle in the front of your vehicle at the same lane, or there is a vehicle and driving speed is higher than vehicle set speed, the vehicle drives at the set speed.
- When applying parking brake and vehicle stands still and front target exists, press the DOWN button, instrument cluster will prompt "Please depress accelerator pedal to activate adaptive cruise control system (ACC)", then driver needs to depress accelerator pedal slightly to active ACC according to the prompt.
- The system may not be available under special conditions (such as desert roads).

## ■ Exiting adaptive cruise control

When one or more of the following situations occur in cruising process, ACC will exit:

- · Depress brake pedal.
- · Driver door is opened.
- Driver seat belt is not fastened.
- Apply the parking brake.
- ESP operates.
- ABS operates.
- AEB operates.
- ESP is not turned on.
- Transmission gear position is in a position other than D.
- Driver continuously depresses accelerator pedal and exceeds the set speed for more than 15 minutes.
- · Press the exit button.
- · Hood is opened.
- Engine stops running.
- TCS operates.
- Vehicle speed is higher than 102 mph (165 km/h).
- · HDC is activated or standby.
- Vehicle rolls backward.

- · Brake temperature is too high.
- Standwait following front target is over 10 minutes.

After the above conditions that can exit function resume, press the UP button, enter cruising state and resume set speed before exiting.

#### ■ Speed setting

Press UP button in cruising process, set vehicle speed will increase by 1 mph (1 km/h); Long press UP button in cruising process, set vehicle speed will increase by 5 mph (5 km/h); when speed exceeds 49 mph (80 km/h), set vehicle speed will increase by 10 mph (10 km/h).

Press DOWN button in cruising process, set vehicle speed will decrease by 1 mph (1 km/h); Long press DOWN button in cruising process, set vehicle speed will decrease by 5 mph (5 km/h); when speed exceeds 49 mph (80 km/h), set vehicle speed will decrease by 10 mph (10 km/h).

#### **P**READ

- For ACC, the lowest speed setting is 9 mph (15 km/h) and the highest speed setting is 99 mph (160 km/h).
- Speed will be lower than set speed when driving uphill, speed will be higher than set speed slightly when driving downhill.

#### Following distance

Press the LEFT button or RIGHT button in cruising process, adjust following distance which is divided into five levels.

# **@** READ

- Following distance changes based on speed and increases with speed improving.
- In minimum clearance mode, the distance between the vehicle and vehicle ahead will quite small during following at low speed. For safety, select maximum clearance mode to follow vehicle ahead on slippery road.
- During following vehicle ahead and decelerates, ESP continuously performs brake and motor will generate operation sound when rotating, this is normal and please drive at ease.

# **⚠** WARNING

- The driver must control vehicle, operate as needed in the whole driving process to avoid danger.
- Please note that any drive behavior must conform all traffic regulations.
- Because the function of ACC/AEB/LDW/LDP/ELK/TJA relies on ESP for safety, if the ESP function is turned off, temporary malfunction light may appear on the meter to indicate that the function cannot be used in the current state (not ADAS system failure). In order to continue to use functions of ADAS, turn on ESP switch again, the function will recover.

#### Overtaking

Depress accelerator pedal to overtake set speed in cruising process. After accelerator pedal is released, the control state will return to previous state. During overtaking, if the vehicle is too close to vehicle ahead, instrument cluster will pop up "Please take over the vehicle by driver" accompanied with urgent warning sound to remind driver to avoid.

#### **Curve speed control**

ADAS system can automatically decrease the speed when vehicle enters curve in cruising process, which help driver to drive through curve safely.

# ⚠ WARNING

- The driver must control vehicle, drive through curve as slowly as possible in the whole driving process.
- While entering a curve, due to limitation of detection target for radar probe, vehicle ahead on the same lane may not be detected in time, which requires the driver to be ready to take over the control of the vehicle at any time.

#### Stopping and starting function

During following vehicle ahead in ACC mode, when driver door is closed and seat belt is fasten, vehicle ahead decelerates to stop, the vehicle also decelerates to stop, after stopping:

- If vehicle ahead starts within 3 seconds, the vehicle also starts automatically.
- If vehicle ahead stops for more than 3 seconds and starts within 10 minutes, driver need to depress accelerator pedal slightly to drive off after vehicle ahead starts.
- When vehicle stops within 10 minutes, driver unfasten seat belt or open driver door, EPB will be actived automatically and vehicle stands still.
- When vehicle stops for more than 10 minutes, the vehicle will exit ACC, and EPB will be activated automatically and vehicle stands still.

# ⚠ WARNING

During following vehicle ahead, always pay attention to whether the instrument cluster displays the vehicle target in front. If the instrument cluster does not display the target in front, it means that target in front of ACC has been lost, the vehicle will start to accelerate according to set speed.

# Precautions for adaptive cruise control

- ACC can not violate laws of physics and has certain limitations. Driver must always keep control of the vehicle and be fully responsible for the vehicle.
- If the vehicle is extremely close to vehicle on adjacent lanes, ACC may select the vehicle as following target.

- ACC cannot respond to crosswise vehicles, oncoming vehicles, pedestrians, bicycles, animals and stationary special-shaped objects.
- When vehicle speed is not greater than 43 mph (70 km/h), ACC can recognize stationary vehicle and perform deceleration to stop; When vehicle speed is above 43 mph (70 km/h), ACC can recognize stationary vehicle, but cannot ensure smooth deceleration until stopping. The driver needs to take over on time.
- When stopping vehicle briefly in ACC mode, driver must confirm that there
  are no obstacles or other traffic participants such as pedestrians, bicycles
  and animals in front of the vehicle.
- When ACC function is malfunctioning, " yellow indicator in instrument cluster comes on. At this time, please go to authorized service centre for inspection and repair as soon as possible.
- During ACC controls vehicle, never inadvertently step on accelerator pedal, otherwise, ACC will not apply brake to vehicle, driver should always be ready to brake actively to ensure the safety of the vehicle.
- ACC has a limited brake time reaction; if vehicle ahead occurs sudden brake, another vehicle cuts in front of the vehicle, the vehicle cuts behind a preceding vehicle, ACC may not respond or react to vehicle ahead too slow, in this case, driver should take over the vehicle control in time.
- Driver should adjust the following distance from vehicle ahead based on traffic flow and weather condition and is responsible for ensuring the vehicle can stop safely at any time. In inclement weather (rain, snow, fog, etc.), ACC may not recognize a vehicle ahead. In this case, ACC should be turned off.
- ACC is suitable for use on highways and roads in good condition. It is not recommended for use on urban roads, narrow roads, mountain roads, hills, tunnels, etc. If using ACC on curves, target vehicle ahead may be lost or target selection is delayed in ACC mode due to limitation of sensor detection range, in this case, ACC will control vehicle to accelerate to set speed.
- During the process of following the vehicle ahead to stop, ACC may not be
  able to recognize the end of the vehicle, but the lower or upper part of
  vehicle (such as rear axle of truck that has higher chassis, upper part of
  lower flatbed trailer). In these cases, system cannot ensure a proper
  stopping distance or even lead to collision. Therefore, driver must keep a
  watch on vehicle and be ready to take over vehicle control anytime during
  this process.
- Two sensors of radar and camera are installed in the front area of vehicle and behind windshield. Please note that view of sensor should not be covered by pollutants, and front or surrounding areas should not be modified or decorated with license plate frames, etc. When sensor is completely covered by snow, ACC function will exit. System performance may be reduced or its function fails due to sensor vibration or collision. In this case, please go to authorized service centre for recalibration of sensors as soon as possible.

Precautions mentioned above do not cover all circumstances that may affect system normal operation. System function may fail to bring the expected effect due to other reasons. Driver must always take full responsibility for vehicle control anytime.

## Active Speed Limit

#### Introduction

Driver drives vehicle at set limit speed.

#### Usage method

#### ■ Entering active speed limit

Method 1: Turn vehicle power to ON mode and press " " button to enter pre-speed limit state, and " indicator in instrument cluster remains on;

Method 2: With engine not started or vehicle speed < 19 mph (30 km/h), press the DOWN button to enter speed limit state, and " indicator in instrument cluster remains on, default set vehicle speed is 19 mph (30 km/h);

Method 3: In speed limit process, if vehicle speed is within 19 - 124 mph (30 - 200 km/h), press the DOWN button to set current speed as limit speed to enter speed limit state, and "indicator in instrument cluster remains on.

#### ■ Exiting active speed limit

Press " \( \oldsymbol{O} \)" button to exit speed limit state, enter pre-cruising state, and " indicator in instrument cluster remains on.

Press " " button to exit speed limit state, and " indicator in instrument cluster goes off.

## ■ Speed setting

Press the UP button in speed limit process, increase vehicle speed.

Press the DOWN button in speed limit process, decrease vehicle speed.

## Overtaking

In speed limit process, in order to overtake or in other operation condition, fully depress accelerator pedal to enter pre-speed limit state, and "" indicator in instrument cluster remains on.

After overtaking, if vehicle speed is more than previous set limit speed, it enters pre-speed limit state and "" indicator in instrument cluster remains on.

After overtaking, if vehicle speed is less than previous set limit speed, it enters speed limit state and "" indicator in instrument cluster remains on.

#### Intelligent Speed Control System

When the vehicle is in cruising state (ACC or TJA/ICA), Speed Control Function (SCF) system detects the speed limit sign information on the road ahead and integrates the speed limit information of navigation system. When pressing the DOWN button during speed limit prompt pop-up, speed limit value of Speed Limit Assist System (SLA) is used as the cruise target speed, cruise control state for the vehicle can improve safety and reduce the risk of speeding/penalty points, and reduce the burden on the driver.

#### **PAD** READ

- Intelligent speed control system can be set in audio system. For details, refer to "Audio System".
- If the driver does not confirm during the first pop-up window, no more popup window will be shown until the new speed limit sign appears (the new speed limit sign is not the same as the previous one).

## **⚠** CAUTION

Intelligent speed control system is only a assist driving function and cannot completely replace the driver's visual and active braking. The normal operation of this function may be affected by factors such as blocked front camera or radar, incorrect or missing map speed limit information, complex road conditions and bad weather and other conditions. In any case, the driver should actively pay attention to and control the vehicle speed, rather than relying on the system control.

## ■ Activation conditions of intelligent speed control system

The following conditions must be met at the same time to activate intelligent speed control system:

- · SLA is turned on.
- 19 mph (30 km/h) ≤ Speed limit value of SLA ≤ 99 mph (160 km/h).
- The speed limit value of SLA is lower or 6 mph (10 km/h) higher than the cruising set speed of the vehicle.
- · ACC is activated.

## Overtake Assist (OTA) Function Overview

When ACC function is active and the vehicle is following the preceding vehicle, and driver turns on the indicator, the overtake assist (OTA) function will be activated, the vehicle automatically accelerates to approach the preceding vehicle to assist the driver in changing lanes.

OTA function operating speed range: > 43 mph (70 km/h).

#### Functional activation conditions:

- ACC active, and vehicle is following the preceding vehicle.
- · Driver turns on the left or right indicator.
- There is another lane in the direction of turning indicator.
- The target lane is not blocked by other vehicles.
- · Current vehicle speed is lower than ACC set speed.
- The lane line on the side of the target lane are not solid.

#### ■ Function exit conditions:

- While the indicator is on, and lane changing conditions not met for more than 6 seconds.
- Ego vehicle completes lane change.
- The distance to the preceding vehicle is too close.
- The target lane is blocked by other vehicles.
- After OTA activated, lane change is not completed within 15 seconds.
- · Driver turns on the indicator in the opposite direction.
- Current vehicle speed is greater than or equal to ACC set speed.

#### Other restrictions:

- During OTA activation, the vehicle speed cannot exceed the ACC set speed.
- During the lane change process, the distance between to the target in front of the adjacent lane can not be too close.
- Only after one side's OTA function exits for more than 2 seconds, the other side's OTA function can be activated.

#### 

The OTA function only provides additional longitudinal acceleration when the driver intends to change lanes, and does not replace or assist the driver in lateral control. The driver needs to independently operate the steering wheel to complete the lane change.

## 5-3. Idling Stop-start System

## Idling Stop-start System

When the vehicle encounters a traffic light or other conditions when it needs to stop during driving, the idling stop-start function will shut down the engine. When it detects startup requirement, the engine will automatically start. This function can improve vehicle fuel economy and reduce exhaust contamination and noise when stopping to wait.

When idling stop-start system works normally, if the followings are met, engine stops when stopping and idling. And when it is necessary to start off, it start

engine automatically. Operation of idling stop-start system does not affect driver safety and the normal operation of other systems in vehicle (Air conditioning system, brake system and audio system etc. are not affected). In some cases, to ensure safe driving and comfort, idle start-stop system will be temporarily disabled, which is normal. When the start-stop condition is met, start-stop function will be restored automatically, please use securely.

#### Idling stop-start system switch



Turn vehicle power to ON mode, slide down from the top right edge of the audio system screen, click idling stop-start switch, idling stop-start system turns off; click idling stop-start switch again, idling stop-start system turns on.

#### 

Idling stop-start system will be memorized. Last operating status of driver will be memorized by default after vehicle is powered on next time.

#### Idling stop-start system auto stop activation conditions

- Bonnet is closed.
- Vehicle is fully stopped.
- Non-high altitude area (below 2800 m).
- · Accelerator pedal is released completely.
- Driver door is closed.
- · Driver seat belt is fastened.
- · Vehicle is not in sudden brake.
- Battery capacity requirement is met (not less than 70%).
- Shift lever is in D / M position.
- Vehicle is not on a steep slope (slopes less than 10% for uphill and downhill).
- There is no fault in stop-start system.
- · Depress the brake pedal.
- · ACC is not turned on.
- AEB signal is not activated.
- The drive chain allows the engine to stop.
- The engine water temperature allows automatic shutdown (engine water temperature is higher than  $48^{\circ}$ C).

- Brake vacuum status allows automatic shutdown.
- · The status of stop-start function main switch in ON.
- Steering wheel angle is not in a large angle steering state (less than 270°).
- After the vehicle starting or large angle steering, the speed has reached 4 mph (8 km/h) or more.
- If the battery negative cable has been disconnected, the vehicle must stand for more than 4 hours after connection.
- Ambient temperature is not less than 3℃.
- Air conditioning comfort is allowed (For example, the requirements of defogging, cooling and heating are met).

## Idling stop-start system auto start activation conditions

- Driver door is closed.
- Driver seat belt is fastened.
- Bonnet is closed.
- · There is no fault in stop-start system.
- The drive chain allows the engine to start.
- The status of stop-start function main switch in ON.

When the above conditions and any of the following start conditions are met, engine will start automatically:

- A / C requests trigger start.
- Starts when the accelerator pedal is depressed in D / M / R gear.
- Engine is started when the shift lever is shifted to R.
- Engine is started when the steering wheel is turned at an angle of more than 30°.
- The status of stop-start function main switch is switched from ON to OFF.
- When the shift lever is in N and brake pedal is not depressed, engine is started after brake pedal is depressed.
- When the shift lever is in P and brake pedal is not depressed, engine is started after brake pedal is depressed.
- When the shift lever is in N and brake pedal is not depressed, engine is started after shift lever is moved to D / M.
- With the brake pedal not released or not completely released after stopping, it starts when shifting from P / N to D / M.
- When the shift lever is in D / M and brake pedal is held depressing after engine stops, engine is started after brake pedal is released.

Note: When AUTO HOLD function is activated, engine is not started after releasing the brake pedal, and engine is started after depressing the accelerator pedal.

#### Idling stop-start system indicator

When the conditions are met, " (A) " green indicator in instrument cluster remains on

When the start conditions safely are not met or idling stop-start system is turned off, "A" yellow indicator in instrument cluster remains on.

When there is a fault, "A" yellow indicator in instrument cluster blinks.

#### (III) READ

When idling stop-start system judges that the safety conditions are not met (such as, open a door while engine stopping), start engine manually by user, and "A" yellow indicator in instrument cluster comes on again. At the same time, "Start engine manually" is displayed on instrument cluster. At this time, there is no problem in system, please use securely.

#### **Function limit**

- In some cases, to ensure safe driving, the system will automatically start engine without any operation from the driver, including the following:
- Vehicle is rolling away (vehicle speed is higher than 1 mph (2 km/h)).
- · Insufficient battery is detected.
- · Insufficient brake vacuum is detected.
- Auto stop time is more than 3 minutes.
- Starts when the engine water temperature exceeds the limit value.

## 🕮 READ

If engine start and stop is triggered several times in a short time, the starter may overheat and the system will enter the starter hot protection state. At this time, auto stop will be disabled, which is not a malfunction. After driving for a period of time, after system determines starter temperature is safe, engine auto stop function recovers by itself.

## 5-4. Hill Descent Control System (HDC)

Hill Descent Control System (HDC)

#### Introduction

HDC can help vehicle drive on steep roads safely under controlled conditions. After HDC is turned on, when vehicle is driving down a steep slope, for vehicle with automatic transmission, speed control range is 10 - 21 mph (10 - 35 km/h). When initial speed is lower than the minimum speed, vehicle will control at the minimum speed by default. The current control vehicle speed can be increased or decreased in a given speed range by depressing accelerator or brake pedal.

#### **Usage method**



With vehicle power in ON mode, slide down from the top right edge of the audio system screen to display the shortcut menu screen.

#### ■ Turning on HDC

With vehicle power in ON mode and vehicle speed reaches 37 mph (60 km/h) or less, press HDC switch on the audio system to turn on HDC, and " " green indicator in instrument cluster remains on.

#### ■ Turning off HDC

- When HDC is on, press HDC switch, HDC turns off, "

  green indicator on instrument cluster turns off.
- When driving speed is higher than 37 mph (60 km/h), HDC turns off.

#### Hill Descent Control (HDC) system indicator

When the system is activated, "@" green indicator remains on.

When there is a fault, " yellow indicator goes off.

## **⚠** CAUTION


- The speed range at which HDC is turned on is below 37 mph (60 km/h).
- When HDC is working, the ABS will start automatically if there is a tyre lock.
- Before entering steep road, set HDC so that driver can operate steering wheel without distraction.
- When HDC is working, if any wheel loses contact with ground, the braking force will be distributed to the wheel with higher adhesion coefficient.
- HDC actively applies braking force through the operation of electronic stability program system. There will be a hydraulic operation sound when the system is working, which is a normal phenomenon. When the electronic stability program system fails, the HDC cannot be turned on. Please go to authorized service centre for inspection and repair as soon as possible.
- When HDC is working, the driver needs to be ready to take over the control
  of vehicle at any time for safety, because the system may be overheated or
  electronic stability program system may fail in addition to being turned off
  by the button during operation. At this time, the system will automatically
  exit the control, and the driver needs to substitute the HDC to control the
  vehicle speed in time.

## 5-5. Lane Departure Warning System (LDW)

#### Lane Departure Warning System (LDW)

LDW detects lane line by front view multi-function camera. The system sends an alarm when wheel rolls over lane line and vehicle departs from its lane.

#### Introduction

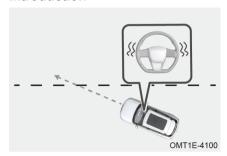

When vehicle speed is no less than 40 mph (65 km/h) and lane line is recognized, LDW enters standby status.

When vehicle speed is no less than 40 mph (65 km/h) and the vehicle departs from one lane line, LDW is activated.

When vehicle speed decreases from 40 mph (65 km/h) to 37 mph (60 km/h), LDW enters limit status.

#### 

LDW ON / OFF and sensitivity adjustment can be set in audio system. For details, refer to "Audio System". System will memorize customer operation by default after LDW function is turned on / off by customer.

## **↑** CAUTION

- Lane line captured by camera: It can detect white solid line, white dotted line, yellow solid line, yellow dotted line and double solid line lanes.
- The system may not operate in cold and bad weather conditions, rain, snow, fog or strong contrast lighting can affect the sensor.
- The system will only work normally on the roads with two clear lane lines.
- · The system may not operate when driving on cement road.
- The system may not operate when driving in road construction area.
- The system may not operate when driving on flooded or muddy roads.
- The system may not work when driving on sharp turns or narrow roads.
- When only single-sided lane line is detected by LDW, the system alarm stability decreases.
- If sensor is disturbed, the system may not work.
- Sensors may misidentify temporary construction markings on the road, etc. and give false alarm by mistake.
- If your vehicle suspension kit is not approved by us, LDW may not work properly.
- Keep front view multi-function camera free from obstructions, such as bird droppings, insects and ice.

## **MARNING**

- Lane assist system just offers assistance to you. It may not work properly under all driving conditions, weather conditions, traffic conditions or road conditions.
- The driver must control vehicle, operate as needed in the whole driving process.

## Lane departure warning system (LDW) indicator

When LDW enters pre-activating mode, " gray indicator in instrument cluster remains on.

When LDW enters activating mode, "!@" green indicator in instrument cluster remains on.

When LDW operates, " green indicator in instrument cluster blinks.

When LDW is malfunctioning, " or "yellow indicator in instrument cluster remains on.

#### **Function limit**

- LDW system can operate only when vehicle speed is more than 40 mph (65 km/h) or higher than 102 mph (165 km/h). The system may not work properly in the following conditions:
- · ESP is not turned on.

- · When changing lanes.
- · When turning with high speed.
- · When depressing accelerator pedal with excess force.
- When depressing brake pedal with excess force.
- · When turning on hazard warning light.
- · When turning on departure side turn signal light.
- · When driving on roads with tight curves.
- When lane line is too thin, broken, blurred or departure side has no lane line.


## 5-6. Lane Departure Prevention System (LDP)

#### Lane Departure Prevention System (LDP)

#### Introduction

The system monitors the relative position of the vehicle and the lane sideline in real time, controls the lateral movement of the vehicle when the vehicle is about to deviate from the lane, and assists the driver to keep the vehicle in the original lane.

#### **Activating LDP**

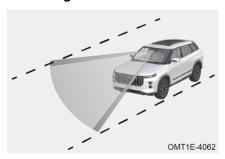

When vehicle speed is no less than 40 mph (65 km/h) and lane line is recognized, LDP enters standby status.

When vehicle speed is no less than 40 mph (65 km/h) and the vehicle departs from one lane line, LDP is activated.

When vehicle speed decreases from 40 mph (65 km/h) to 37 mph (60 km/h), LDP enters limit status.

#### READ

LDP ON / OFF can be set in audio system. For details, refer to "Audio System".

## Lane departure prevention system (LDP) indicator

When the system is on or restrained, "/=\" gray indicator in instrument cluster remains on.

When the system is pre-activated or activated, " green indicator remains on.

When there is a fault, "/=\" yellow indicator in instrument cluster remains on.

#### **Function limit**

- LDP may not work properly in the following conditions:
- · ESP is not turned on.
- · When changing lanes.
- · When turning on turn signal light.
- · When braking with excess force.
- · When steering angle speed is too high.
- LDP can recognize when the driver does not operate steering wheel for a while
- Steering wheel is operated by driver when LDP applies corrective steering intervention.
- Under the following situations, do not use LDP. Failure to do so may cause an accident, resulting in death or serious injury:
- If sensor is disturbed, the system may not function.
- The system can operate only when vehicle speed is more than 40 mph (65 km/h) or higher than 102 mph (165 km/h).
- Lane departure prevention system may not operate when driving in road construction area.
- Lane departure prevention system may not operate when driving on flooded or muddy roads.
- Lane departure prevention system may not operate when driving on sharp turns or narrow roads.
- Lane departure prevention system can only operate normally on the roads with two clear lane lines.
- If your vehicle suspension kit is not approved by us, the system may not work properly.
- Sensors may misidentify temporary construction markings on the road, etc. and give false alarm by mistake.
- The system may not operate in cold and bad weather conditions, rain, snow, fog or strong contrast lighting can affect the sensor.

## CAUTION

- Driver performs an active control when meeting a tighter curve.
- Driver performs an active control when meeting some conditions such as lane increase, lane merger, etc.
- Driver performs an active control when meeting complex traffic environment (such as intersection, heavy traffic road).

#### **↑** WARNING

- Lane assist system just offer assistance to driver. It may not work properly under all driving conditions, weather conditions, traffic conditions or road conditions.
- The driver must control vehicle, monitor management lane assist system and operate as needed in the whole driving process.
- During driving, it is strictly prohibited the driver to hand off steering wheel.

#### 5-7. Emergency Lane Keeping (ELK) System

## Emergency Lane Keeping (ELK) System

The driver assistance function Emergency Lane Keeping (ELK) include three sub functions, which are Road Edge Detection (ELK-re), Oncoming Detection (ELK-oc) and Overtaking Detection (ELK-ot). The Emergency Lane Keeping Road Edge (ELK-re) providessteering support for the driver to prevent hitting the edge of the road. The Emergency Lane Keeping Oncoming (ELK-oc) provides steering support for the driver to avoid the ego lane departure, which could lead to collision with on-coming traffic on neighbor lane. The Emergency Lane Keeping Overtaking (ELK-ot) provides steering support for the driver to avoid collision with overtaking traffic on neighbor lane, when driver has indicated orstarted to move in the neighbor lane.

#### Operating instructions

When vehicle speed is no less than 31 mph (50 km/h) and lane line is recognized, ELK-ot enters standby status.

When vehicle speed is no less than 40 mph (65 km/h) and lane line is recognized, ELK-re/EL-oc enters standby status.

When vehicle speed decreases from 31 mph (50 km/h) to 24 mph (45 km/h), ELK-ot enters limit status. When vehicle speed decreases from 40 mph (65 km/h) to 37 mph (60 km/h), ELK-re/ELK-oc enters limit status.

## **@** READ

Emergency Lane Keeping (ELK) ON / OFF can be set in audio system. For details, refer to "Audio System".

#### **Function limit**

- The system can operate only when vehicle speed is lowerthan 80 mph (130 km/h). Under the following situations, the system may not correctly identify traffic conditions:
- · On winding mountain roads.
- · In severe weather conditions.

- There are some special buildings on the roadside (such as high or scattered road guardrail).
- · When rain, snow, ice, fog or dust blocks the sensor.
- Narrow objects such as bicycles may not be recognized.
- Lane departure prevention system can only operate normally on the roads with two clear lane lines.
- If your vehicle suspension kit is not approved by us, the system may not work properly.
- Sensors may misidentify temporary construction markings on the road, etc. and give false alarm by mistake.
- The system may not operate in cold and bad weather conditions such as rain, snow or fog and strong contrast lighting can affect the sensor.

#### WARNING

- Never use a system that is not properly calibrated.
- To ensure the safety of driving and riding, all the passengers must wear seat belts.
- If the sensor is blocked, the system cannot be operated. Clear the sensor where possible.
- This system is only a driving assistance system, do not rely solely on this system and drive carefully at all times.
- To ensure the normal operation of the system, it is necessary to keep the sensors in the bumper clean, free of snow and ice, and not covered by other objects.
- If this system does not work properly, turn off the system immediately, please go to authorized service centre for inspection and repair as soon as possible.

## 5-8. Blind Spot Detection (BSD) System


## Blind Spot Detection (BSD) System

BSD system is used to monitor presence of moving vehicles in left and right rear areas of your vehicle and inform driver related information to remind the driver for driving safety and lane-changing safety. This system extends Lane Change Assist (LCA) system and Rear Cross Traffic Alert (RCTA) system, Rear Cross Traffic Braking (RCTB) system etc.

## WARNING

The BDS system only offers assistance to the driver. It may not work properly under all driving conditions, weather conditions, traffic conditions or road conditions.

## Activating Blind Spot Detection (BSD) system / Lane Change Assist (LCA) system

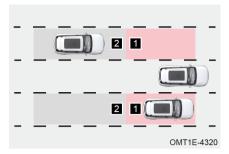

When speed increases to 9 mph (15 km/h) or more, BSD system enters activating; When speed is decreases from more than 9 mph (15 km/h) to 10 mph (10 km/h), BSD system enters pre-activating.

- Detection area of BSD system.
- 2 Vehicle approaches detection area of BSD system.

Level I: If a vehicle enters detection area and meets alarm conditions, level alarm I is triggered." yellow indicator on rear view mirror remains on, "green indicator in instrument cluster remains on.

Level II: On base of level I, turn on the indicator light in the same side. After level alarm II is triggered, "g," yellow indicator on rear view mirror blinks, "g," yellow indicator in instrument cluster blinks, alarm sounds.

#### 

- BSD can be set in audio system. For details, refer to "Audio System".
- Turn vehicle power to ON mode, BSD system turns on by default.

## **⚠** CAUTION


- Blind Spot Detection (BSD) system may detects stationary objects on or near a road (such as guardrails, tunnels, side walls, and parked vehicles) to turn on warning light.
- When towing or attaching accessories to rear of vehicle (such as a bicycle carrier), turn off BSD system. Otherwise, radar radio waves will be affected, causing system work abnormally.
- When lots of snow or ice accumulates on rear bumper and near radar sensor, or if drive on snowy road for a long time, BSD system may not work.

## Blind Spot Detection (BSD) system indicator

During operation, level alarm I " green indicator in instrument cluster remains on; level alarm II " yellow indicator in instrument cluster blinks.

When there is a fault, "gellow indicator in instrument cluster remains on.

#### Rear Cross Traffic Alert (RCTA) System

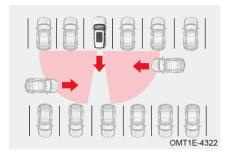

Shift the shift position to R and vehicle speed is less than 9 mph (15 km/h), rear traffic crossing anticollision system is activated; In other gear positions, system is in standby status.

When a target vehicle is approaching from left rear/right rear and alarm conditions are met, left/right outside rear view mirror "and "indicator blinks to inform driver there is a target vehicle approaching and risk of collision exists.

#### ( READ

Rear cross traffic alert system can be set in audio system. For details, refer to "Audio System".

#### Rear Cross Traffic Braking (RCTB) System

RCTB function sounds alarm to driver and assists in braking when encountering vehicles or pedestrians crossing the road when exiting a vertical/inclined parking space. RCTB function can help driver avoid collisions with vehicles or pedestrians crossing the road, especially if the driver's view is blocked by vehicles parked next to them.

#### **Activation conditions for RCTB**

- · All doors are closed.
- Steering wheel angle is less than the threshold.
- Vehicle speed is lower than 9 mph (15 km/h).
- · Vehicle is in reverse gear.

## **READ**

Reverse emergency braking can be set in audio system. For details, refer to "Audio System".

#### **↑** WARNING

- RCTB is a driving assistance function, which cannot violate laws of physics and has certain limitations. Driver must always keep control of the vehicle and be fully responsible for the vehicle.
- Certain scenarios will affect and weaken the detection of sensor, the system may perform unnecessary warning and braking, or fail to detect all obstacles
- The area around sensor must not be modified in any way, it is recommended to turn off Rear Cross Traffic Braking (RCTB) System after modification, otherwise the system may perform brake unnecessarily.

## Door Open Warning System

Door open warning system is used to detect the approaching vehicles and bicycles behind in both adjacent lanes through sensor, and send an alarm if there is a risk when opening door, to remind the driver and passenger that do not open the door at this time.

Activation conditions for door open warning function: In any gear position, vehicle is stationary.

#### ■ Front door warning

When there is a vehicle entering the detection area and the alarm conditions are met, if front door on corresponding side is not opened, the outside rear view mirror " indicator on corresponding side remains on; If front door is opened, the outside rear view mirror " indicator on corresponding side blinks accompanied with sound alarm.

## ■ Rear door warning

When there is a vehicle entering the detection area and the alarm conditions are met, if rear door on corresponding side is not opened, the door indicator on corresponding side remains on; If rear door is opened, the door indicator on corresponding side blinks accompanied with sound alarm.

## 

Door open warning can be set in audio system. For details, refer to "Audio System".

## **↑** CAUTION

- Door open warning system will be kept in operating condition (except for arming) within 5 minutes after vehicle is powered off. After unlocking from outside, door open warning system will also change to operating condition after any door is opened and closed.
- Do not open doors when indicator on outside rear view mirror or indicator on door is blinking, and open doors after confirming that there is no vehicle behind and it is safe.
- When distance between vehicle behind and your vehicle is short, an alarm will also be given if speed of vehicle behind is low and collision time between vehicle behind and your vehicle is less than specified value.
- When distance between vehicle behind and your vehicle is long, an alarm will not be given if speed of vehicle behind is high and collision time between quickly approaching vehicle behind and your vehicle exceeds specified value.

#### Rear Collision Warning System

After rear collision warning system is turned on, vehicle will send an alarm to remind driver when there is a vehicle approaching rapidly behind and there is a risk of collision with the vehicle.

Activation conditions: The vehicle shift position is not in R and the vehicle speed is 9 mph (15 km/h) or more.

## **@** READ


Rear collision warning can be set in audio system. For details, refer to "Audio System".

# 5-9. Automatic Emergency Braking System (AEB) / Front Collision Warning System (FCW)

Automatic Emergency Braking System (AEB) / Front Collision Warning System (FCW)

When ESP is turned on, and vehicle is about to hit a vehicle or VRU (pedestrian, cyclist, motorcycle) ahead, AEB and FCW work together, sounding an alarm to remind driver. If driver cannot respond quickly enough, vehicle will brake automatically, reducing loss from collision.

## **Activating AEB / FCW**

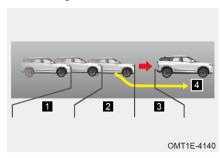

- Start pre-warning before impacting.
- 2 Start braking partly before impacting.
- 3 Start emergency braking before impacting.
- 4 If driver reacts correctly (for example, avoid a collision by steering), the following emergency braking is canceled.

## **@** READ

AEB/FCW system is on by default. Automatic emergency braking system and forward collision warning system can be set in audio system. For details, refer to "Audio System".

## **⚠** CAUTION

- Operating speed range of FCW is mph 6 49 mph (10 80 km/h) for static target; Operating speed range of FCW is 6 - 80 mph (10 - 130 km/h) for moving longitudinal target; Operating speed range of FCW is 6 - 37 mph (10 - 60 km/h) for VRU.
- Operating speed range of partially braking is 52 80 mph (85 -130 km/h) only for moving longitudinal target.
- Operating speed range of AEB is 3 37 mph (5 60 km/h) for static target;
   Operating speed range of AEB is 3 80 mph (5 130 km/h) for moving longitudinal target;
   Operating speed range of AEB is 3 37 mph (5 60 km/h) for VRU.
- Operating speed range of FCW with ego vehicle turning is 3 18 mph (5 -30 km/h) for crosswise target.
- Operating speed range of AEB with ego vehicle turning is 3 18 mph (5 30 km/h) for crosswise target; Operating speed range of AEB with ego vehicle turning is 3 18 mph (5 30 km/h) for oncoming target.
- Driver needs to ensure that driver's seat belts have been fastened, driver door is closed. Failure to do so, AEB does not work.
- Turn on ESP, FCW, AEB, otherwise, FCW and AEB do not work.
- " > " yellow indicator in instrument cluster remains on, please go to authorized service centre for inspection and repair as soon as possible.
- Driver need to take over vehicle because vehicle does not keep stationary state when vehicle is braked automatically to stopped.
- During AEB is activated, driver quickly rotates steering wheel or depresses accelerator pedal firmly, AEB will exit.
- The system may not be available under special conditions (such as desert roads).

## **↑** WARNING

- The driver must control vehicle and operate as needed during the whole driving process to avoid danger.
- AEB only offers assistance to the driver. It may not work properly under all driving conditions, weather conditions, traffic conditions or road conditions.
- The vehicles that can be detected by AEB include passenger vehicles, buses, trucks. For some vehicles, such as such as cement tank trucks, special vehicles with higher or lower chassis, AEB has certain limitations in detecting.
- Automatic emergency braking system (AEB) can only play its best role when it detects characteristics consistent with normal walking, such as person's head, arm swing, leg swing, etc.
- AEB will work when it detects body and bicycle contour information as well as normal cycling movements; AEB does not detect an oncoming cyclist as target.
- AEB is not always capable of detecting vehicles, cyclists or pedestrians, and the system may generate unnecessary braking automatically or do not work for a variety of reasons; AEB is only a driving assist system to reduce severity of collision, it is not always possible to completely avoid collision in the speed range.

#### Precautions for automatic emergency braking system (AEB)

- AEB has certain limitations. Driver must always keep control of the vehicle and be fully responsible for the vehicle.
- Driver controls speed and the distance from vehicle ahead according to weathers, road surface conditions, traffic conditions, etc.
- AEB does not react to animals.
- System performance may be greatly limited for obstacles that cut into the lane quickly, targets that are detected after the vehicle changes lanes, and targets in curves.
- Fasten all seat belts and secure all loads to avoid danger when AEB is triggered.
- When AEB is malfunctioning, " yellow indicator in instrument cluster remains on, please go to authorized service centre for inspection and repair as soon as possible.
- When inspecting the vehicle using a drum tester, FCW and AEB should be turned off.
- When installing non-full size spare tyre, it is recommended that customer turns off FCW and AEB, and replace full-size tyres of original vehicle in time.
- In some special circumstances, AEB may perform unnecessary warning and braking, such as crossing the track of the road, entering an underground car park turning, etc. Some circumstances will affect and weaken sensor

detection, things like a tunnel, light of incoming vehicle, reflection of slippery road.

• Two sensors of radar and camera are installed in the front area of vehicle and behind windshield; Please note that view of sensor should not be covered by debris, and front or surrounding areas should not be modified or decorated with license plate frames, etc. Especially, when sensor is completely covered by snow, system function will be exited. AEB performance may be reduced or its function fails due to sensor vibration or collision. In this case, please go to authorized service centre for recalibration for sensors as soon as possible.

Precautions mentioned above do not cover all circumstances that may affect AEB normal operation. AEB function may fail to bring the expected effect due to other reasons. Driver must always assume full responsibility for vehicle control anytime.

5-10. Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)

Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)

#### Introduction

TJA / ICA detects land line through the front view camera to perform vertical and horizontal control for vehicle, providing driving assist and reducing driver's workload under monotonous driving environment or busy traffic.



Activate/deactivate function: When TJA/ICA is in pre-activating or activating state, short press TJA/ICA switch to activate/deactivate TJA/ICA.

Mode switching function: When ACC is in pre-cruising or cruising state, or when TJA/ICA is in pre-activating or activating state, long press TJA/ICA switch to switch between ACC and TJA/ICA modes.

If the TJA/ICA activation conditions are not met at this time, the " $\oplus$ " gray indicator on instrument cluster remains on; if the TJA/ICA activation conditions are met at this time, the " $\oplus$ " green indicator on instrument cluster remains on.

TJA is used when speed is less than 37 mph (60 km/h): Vehicle will be kept near lane centre. If no lane line is detected, the vehicle follows vehicle ahead as driving target. If neither lane line nor target vehicle is detected, TJA will be turned off.

ICA is used when speed is 37 mph (60 km/h) to 80 mph (130 km/h): Vehicle will be kept near lane centre. If no lane line is detected, ICA will be turned off regardless of whether there is a target vehicle ahead.

## Traffic Jam Assist System (TJA)/Integrated Cruise Assist System (ICA) Indicator

When it is pre-activated, "\$\text{\Theta}" gray indicator on instrument cluster remains on.

When it is activated, "The green indicator on instrument cluster remains on.

When there is a fault, "

"vellow indicator on instrument cluster remains on."

#### **Function limit**

TJA / ICA may not work properly in the following conditions:

- · ESP is not turned on.
- · Any exiting condition for ACC exists.
- · Overly narrow or wide lanes.
- Too small lane curve radius.
- Lane line is not detected.
- · Driver rotates steering wheel actively.
- · Hands off steering wheel.
- Turn signal light is turned on.
- · Hazard warning light is turned on.
- · Vehicle is standstill.
- · Accelerator pedal is depressed.
- · Brake pepal is depressed.

## **⚠** WARNING

- TJA / ICA just offers assistance to you. It may not work properly under some driving conditions, weather conditions, traffic conditions or road conditions.
- The driver must control vehicle, operate as needed in the whole driving process.
- The system may not be available under special conditions (such as desert roads).
- Because the function of ACC/AEB/LDW/LDP/ELK/TJA relies on ESP for safety, if the ESP function is turned off, temporary malfunction light may appear on the meter to indicate that the function cannot be used in the current state (not ADAS system failure). In order to continue to use functions of ADAS, turn on ESP switch again, the function will recover.

## Recommended to use Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)

When the Traffic Jam Assist system (TJA)/Integrated Cruise Assist system (ICA) monitors that the vehicle speed is higher than 37 mph (60 km/h), the current road line is clear and continues to exist, and the Adaptive Cruise Control system (ACC) is in cruising state, the " " green indicator on instrument cluster remains on. After a certain period of time, a pop-up screen on instrument cluster prompts "The road conditions are good, it is recommended to turn on intelligent cruise control".

## Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA) Exit Reminder

When TJA/ICA exits from activating state, the system sends an alarm sound and a pop-up screen on instrument cluster prompts "Intelligent cruise control has exited, please pay attention" to inform the driver that the function has exited.

When the intelligent cruise control exit reminder is set to on in the audio system, the instrument cluster will pop up reminder when TJA system and ICA system exit; When Intelligent cruise control exit reminder is turned off, the instrument cluster will not pop up the reminder when the system exits.

## Intelligent Evasion System for Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)

The vehicle is controlled by the TJA/ICA system in normal driving condition when the self-vehicle overtakes the right/left side of the truck, and the self-vehicle overtakes the vehicle.

When the TTC (Collision Time) is less than the set threshold, it will deviate from the center of the lane by a certain distance from within the lane.

When the target vehicle disappears from the front radar detection area, after maintaining an offset driving for a period of time, the vehicle is under the control of the TJA/ICA system. Drive back near the center of the lane.

## Precautions for Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA)

For using TJA / ICA, please read the following precautions carefully:

- TJA / ICA is a driving assist system, has certain limitations. Driver must always keep control of the vehicle and be fully responsible for the vehicle.
- Longitudinal control of TJA / ICA is performed by ACC, lateral control of TJA / ICA is performed by LKA, all precautions for ACC and LKA are also applicable to the system.
- TJA / ICA does not provide automatic driving function and does not allow hand off driving. Driver prepares control vehicle anytime to ensure safety under the conditions of turning, crossing, merging into one lane and vehicle ahead cutting.

- TJA / ICA performance is affected by weather, illumination and lane line definition, with significant performance degradation or even loss of function in the case of backlight, sunset, nighttime, road surface covered by snow and ice, and unclear lane lines due to surface worn.
- When TJA / ICA is malfunctioning, "
   "yellow indicator in instrument cluster comes on, at this time, TJA / ICA function fails, please go to authorized service centre for inspection and repair as soon as possible.

Precautions mentioned above do not cover all circumstances that may affect system normal operation. System function may fail to bring the expected effect due to other reasons. Driver must always assume full responsibility for vehicle control anytime.

### 5-11. Intelligent Avoidance System

#### Intelligent Avoidance System

#### Introduction

Under active control of Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA) (i.e. driving in the lane), when the vehicle speed is 37 - 80 mph (60 - 130 km/h) and is about to overtake a larger vehicle (such as a truck, bus) in the adjacent lane, the system controls the vehicle to move laterally appropriately to keep it away from the large vehicle until overtaking is completed.

## **READ**

Intelligent avoidance system can be set in audio system. For details, refer to "Audio System".

## 5-12. Drive Away Information System

## Drive Away Information System

#### Introduction

Drive away information system allows user to relax and focus on other things other than driving when the vehicle is in line at traffic light-controlled intersections or congested roads, and assists the driver to resume driving in time when the traffic environment changes.

- If the vehicle is waiting in line at traffic light-controlled intersections or congested roads, when the following conditions are met, the system will sound an alarm and instrument cluster will display that the vehicle ahead is moving, which can remind the driver to resume driving:
- · Detect that a vehicle ahead is leaving.
- · The vehicle is stationary.
- ACC is not activated.

#### **PAD** READ

- Drive away information system can be set in audio system. For details, refer to "Audio System".
- When the vehicle is waiting in line, if another vehicle gets between the vehicle and the vehicle ahead, drive away information system abandons the original vehicle target and selects the new vehicle as the new target.

#### 5-13. Tyre Pressure Monitoring System (TPMS)

Tyre Pressure Monitoring System (TPMS)

#### Introduction

TPMS is an active safety configuration and can monitor pressure and temperature of tyre in real-time and the information can be checked through information display area. When tyre pressure is too low or temperature is too high, tyre pressure monitoring system alarms.



When the driving speed of vehicle is higher than 19 mph (30 km/h) and the continuous driving time is more than 45 s, the instrument cluster can display the tyre pressure and temperature values in real time.

When speed is more than 15 mph (25 km/h) for period of time, tyre pressure and temperature values will be displayed on instrument cluster in real-time; Vehicle power is turned from OFF mode to ON mode (without power-off), tyre pressure and temperature values will also be displayed on instrument cluster.

When speed is more than 15 mph (25 km/h), if TPMS has not received radio-frequency signal from one or more sensors after several minutes, system malfunction warning." yellow indicator on instrument cluster will come on.

## **@** READ

Common radio interference sources include vehicle power, driving recorder, air purifier, entrance guard card, remote control, cell phone base station, TV tower, etc.

## Low pressure warning

When tyre pressure is below a certain value and speed is no lower than 15 mph (25 km/h) for a period of time, system will send a low pressure warning,

corresponding wheel symbol will blink, current tyre pressure value will be displayed and "!" yellow indicator in instrument cluster will remain on.

When vehicle power is turned to ON from OFF and tyre pressure is below a certain value, system will send a low pressure warning, corresponding wheel symbol will blink, current tyre pressure value will be displayed and "!" yellow indicator in instrument cluster will remain on.

When low pressure warning occurs, please inflate the tyre to specified value as soon as possible. After the vehicle is driven at a speed no less than 15 mph (25 km/h) for a period of time, low pressure warning will be automatically canceled

#### **P**READ

- Low tyre pressure will increase fuel consumption and aggravate tyre wear.
   Serious tyre wear may cause a risk of tyre blowout.
- When tyre pressure is too low, inspect causes of air leakage. Contact the authorized service centre for inspection and repair as soon as possible as needed.

#### High temperature warning



When tyre temperature is higher than 85° C and speed is no less than 15 mph (25 km/h) for a period of time, system will send a high temperature warning, corresponding wheel symbol will blink, current tyre temperature value will be displayed and " !! " yellow indicator in instrument cluster will remain on.

When vehicle power is turned from OFF to ON mode, if tyre temperature on instrument cluster is higher than  $85^{\circ}$ C, system will send high pressure warning.

When vehicle power is turned to ON from OFF and tyre temperature is higher than 85°C, system will send a high temperature warning, corresponding wheel symbol will blink, current tyre temperature value will be displayed and "!" yellow indicator on instrument cluster will remain on.

When high temperature warning occurs, after tyre temperature is lower than 80°C and the vehicle is driven at a speed no less than 15 mph (25 km/h) for a period of time, high temperature warning will be automatically canceled.

## **↑** CAUTION

- When warning for high temperature, stop driving at once to cool down tyres naturally. Otherwise, accidents may be caused.
- When tyre temperature is too high, it cannot be cooled by pouring cold water, as this may damage the tyre, causing an accident.
- When tyre temperature is too high, please contact the authorized service centre for inspection and repair as soon as possible as needed.

#### **Function limit**

TPMS may send system malfunction warning in the following conditions:

- Configuration learning of tyre pressure monitoring system is not performed after replacing wheels (spare tyre included).
- Sensor may be affected due to electromagnetic shielding caused by installing tyre chains, affecting proper operation of TPMS.
- Tyre pressure sensor or other components have been damaged, please contact the authorized service centre for inspection and repair as soon as possible as needed.
- TPMS may not operate due to radio interference; And it may be interfered temporarily due to strong electromagnetic radio signals with same frequency (433 MHZ).
- TPMS may not work properly due to interference of electronic equipment (over standard equipment) installed on vehicle, resulting false alarm.

## 5-14. Driver Monitoring System (DMS)

## Driver Monitoring System (DMS)

DMS (Driver Monitoring System) uses the infrared camera arranged in the cabin to monitor driving status of driver in real time and collects the face image of driver (such as yawning, eyes closed, nodding, etc.) and line-of-sight area information in real time, judging the driver status in real time. The camera only captures the face of driver, does not capture the rest of the vehicle. The entire face information captured will not be used for personal identification and will not be stored. The system is enabled by default.

#### Main function

- 1. Determine if driver is fatigued by monitoring facial expression, eye closure, blinking frequency, etc. of driver. When detecting that driver is in a state of fatigue, pop-up window will display on instrument cluster and an alarm sounds:
- 2. Determine where the driver is looking and if the driver is distracted by tracking driver line-of-sight. When the driver is detected to be distracted, pop-up window will display on instrument cluster and an alarm sounds;

3. The system is enabled by default every time the vehicle is started, and can be turned off manually on head unit screen. After each power-on, the system will perform self-check, when the camera is blocked or system is malfunctioning, the corresponding prompt will display on instrument cluster.

## ⚠ CAUTION

- DMS can be set in audio system. For details, refer to "Audio System".
- When driver monitor system is activated, "" indicator on the meter comes on; when driver monitor system is abnormal, "" indicator on the meter comes on. Please go to authorized service station for inspection and repair as soon as possible.
- When the vehicle speed is higher than 6 mph (10 km/h), driver monitor system will sound an alarm when the system detects that driver is in a fatigued driving state.
- When the vehicle speed is greater than 12 mph (20 km/h), driver monitor system will sound an alarm when the system detects that driver is distracted or does not respond to the reminder.

## **↑** WARNING

Driver fatigue monitoring system is only an auxiliary tool. In any case, the driver should be responsible for the safety of the vehicle. Fatigue and distracted driving are strictly prohibited. He/she must always concentrate on driving carefully.

## 5-15. Parking Assist System

## Around View Monitor System (AVM)


#### Introduction

AVM system collects the surrounding view image of the vehicle through four cameras and displays the surrounding view and land guideline by audio head unit, providing safety and easy parking for driver.

## **Camera layout**



Installation position of front camera: located at intake grille of front bumper.

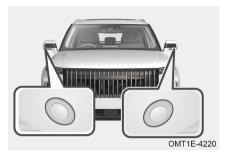

Installation position of left / right cameras: located at the bottom of left / right outside rear view mirrors.



Installation position of rear camera: located on center part above rear license plate.

#### Usage method



#### ■ Entering around view monitor

Turn vehicle power to ON mode, and vehicle speed is 18 mph (30 km/h) or less:

Shift the shift lever to R position to enter AVM system.

Click around view monitor switch on the audio system to enter AVM system.

It enters AVM system when turning with large angle (it is necessary to turn on activate around view monitor when turning in around view monitor setting).

It enters AVM system when turning on left / right turn signal lights (it is necessary to turn on activate around view monitor when operating turn signal lights in around view monitor setting).

#### Exiting around view monitor

When speed is more than 18 mph (30 km/h), it exits the AVM system.

After turning vehicle power to OFF mode, it exits the AVM system.

When AVM system is entered by receiving parking radar obstacle distance signal, move shift lever to N / P position or there is no obstacle distance information, after delaying 15 seconds, it exits the AVM system.

When AVM system is entered by R position, move shift lever out from R position to exit the AVM system after delaying 15 seconds.

When AVM system is entered by around view monitor switch, click the switch again to exit the AVM system.

When AVM system is entered by left / right turn signal lights, turn off left / right turn signal lights to exit the AVM system.



#### CAUTION

The AVM system provides driving assistance convenience, but the object in the image does not reflect the actual size and obstacle distance. Compared to the actual image, the image has a little delay and blind spot. Therefore, the panoramic view function is not a substitute for driver's operation and judgment. Driver should pay attention to the surroundings and drive safely during turning on / off and using the function.

#### Switching view



#### 1 Close button

When gear position is not in R, it is possible to exit AVM system using close button.

#### 2 2D view button

Unilateral view of front / rear / left / right + splicing view and unilateral view can be switched.

#### 3 3D view button

Click the specific view angle button around the bird's-eye view of vehicle to switch the corresponding 3D view. 3D view can be switched to any view angle by sliding.

4 Setting button

Click to pop up the setting item menu.

5 Wide angle view button

Perform distortion correction on front/rear views and splice them into a wide angle view.

#### 6 Wheel side view button

Wheel side view + splicing view and wheel side view can be switched.

Note: Please refer to the actual vehicle for all display images.


#### 

The AVM system is very helpful for parking and safety driving. It is recommended that you should be familiar with this function in advance in an open and convenient area.

### CAUTION

- Do not scratch the lens when cleaning dirt or snow on the camera surface.
- Before using AVM system, make sure to extend outside rear view mirrors and close the back door firmly.
- The object distance seen from the AVM system is different from the actual distance.
- · Do not place any object on the camera of AVM system.
- The AVM system has been calibrated professionally before leaving the factory. Any removal / installation and changes on camera installation position and angle without permission may affect the function and effect of AVM system.
- The AVM system provides driving assistance convenience, but the object in the image does not reflect the actual size and obstacle distance. Comparing with the actual image, the image has a little delay and blind spot. Therefore, the panoramic view function is not a substitute for driver's operation and judgment. Driver should pay attention to the surroundings and drive safely during turning on / off and using the function.

#### System setting

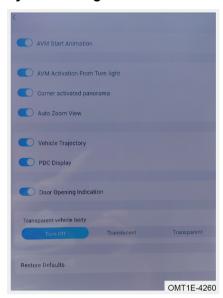

[AVM Start Animation]: When driver enters the AVM system for the first time by AVM button, panoramic view starting screen will be displayed.

[AVM Activation From Turn Light]: When left / right turn signal light switch is turned on, 3D view of rear left side or rear right side of vehicle will be displayed.

[Corner acticated panorama]: When steering wheel angle is more than 190°, 3D view of rear left side or rear right side of vehicle will be displayed.

[Auto Zoom View] Enter nearby view automatically based on obstacle distance.

[Vehicle Trajectory]: Move shift lever to R to enter around view monitor, load static / dynamic lane guideline and wheel track line.

[PDC display]: Turn on parking radar display.

[Door Opening Indication]: Remind the status of engine compartment, moon roof, four doors and luggage compartment.

[Transparent vehicle body]: Set transparency of the vehicle model.

[Restore Defaults]: Reset default settings.

## **⚠** CAUTION

When the AVM system is turned on, the host displays the AVM system interface. When the host detects that the system or one or more cameras are malfunctioning, the corresponding single-side view and bird's-eye view will appear black screen display and corresponding text or icon prompts. At this time, the AVM system may not be used normally, and the black screen fault may occur in the following scenarios:

- Do not use high-pressure water or steam to rinse the camera sensor area, otherwise water or steam will enter the camera and condense on the lens, causing blurred images or even causing a short circuit in the camera, resulting in a black screen phenomenon in the camera image.
- Do not tap or bump the camera in any way. Severe tapping and bumping may cause the camera position to deviate or the device to be damaged, which may cause the camera interface to appear misaligned or black screen.
- Non-professionals should not disassemble camera equipment. If there is a
  poor connection between the vehicle and the rear view camera display
  system, the camera may appear black screen.
- If the black screen occurs in the camera during heavy rain, please check whether water enters the camera installation position. If water enters through the gap of the connector, a short circuit may occur in the around view monitor, which may cause the camera screen to go black.
- When other electrical equipment is working at full load, the rear view camera display system may be affected by voltage fluctuations, which may cause the camera screen to go black. You can try to disconnect other electrical equipment and restart the vehicle to restore the normal use of the camera function.

The above scenario does not fully cover all the situations where the AVM system has a black screen display fault. In order to ensure the normal use of the function, when the system has a black screen fault, go to the local aftersales service center as soon as possible for inspection and repair.

## Parking Radar System

#### Introduction

Parking radar system is a radar detection device, adopts radar sensors to detect if there are obstacles in front / rear of vehicle and distance from obstacles. The driver is prompted by the audio system, sound alarm, etc., so as to assist the driver to park safely and easily.



Turn vehicle power to ON mode, slide down from the top right edge of the audio system screen, click parking radar button, parking radar system turns on; when shift lever is not in R, click parking radar button again to exit.

#### **Usage method**

Turn vehicle power to ON mode, press parking radar switch on audio system or shift lever is moved to R position, parking radar system is activated, each time the parking radar system is activated, if the parking radar system is normal, it alarms for 0.5 s, parking radar system status indicator comes on and system starts detecting distance at the same time; When a radar sensor detects an obstacle, audio system will display distance from obstacle (red, yellow, green areas) accompanied by alarm sound.

When vehicle is traveling forward and the reversing radar system is activated, when vehicle speed is > 9 mph (15 km/h), the reversing radar system front and rear sensors stop working. If vehicle speed is < 9 mph (15 km/h), the parking radar system does not recover, the parking radar system can be turned on / off by pressing parking radar switch.

Note: If there are malfunctions in parking radar system, it will sound 2s in long tone, and then keep displaying failure information until it is solved.

## 印 READ

- Monitoring distance is the shortest vertical distance between obstacle and radar sensor.
- Under activating state of front radar, when applying parking brake or shift lever is in P position, audio head unit will only display arc information, and audio head unit prompt does not sound.
- For models with 6 sensors, move shift lever to R position to activate parking radar system (whether or not parking radar system is turned on before moving shift lever to R position), parking radar system still operates when shifting to other positions.

#### CAUTION

- For obstacles out of the detection range, radar sensors do not give a warning.
- When moving, be aware that the reverse radar sensors on the other side may get close to other obstacles.

#### **Function limit**

Parking radar system may not work normally in the following conditions:

- · When vehicle is on a steep slope.
- · When driving in snow or in rain.
- · Low objects such as rocks, etc. cannot be detected.
- Objects that are higher than bumper cannot be detected.
- Thin objects such as wires, fences and ropes, etc. cannot be detected.
- When vehicle is equipped with a high frequency radio or antenna is in use.
- When radar sensor surfaces are frozen, they will not detect any obstacle.
- When radar sensors are covered by dirt, snow or mud, they may not detect obstacles.
- Objects that easily absorb ultrasonic waves such as soft snow, cotton, sponge, etc. cannot be detected.
- When there is noise near the vehicle, such as vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- If obstacles are detected by multiple radar sensors, the distances between each radar sensor and obstacles are displayed on audio head unit simultaneously, and system sounds according to nearest obstacle.

#### Cleaning radar sensor



When washing vehicle, use a soft cloth or water (low water pressure) to wash off foreign matter such as snow, mud, and dust on the surface of the radar sensor.

High pressure water flow such as water guns or large external forces may cause damage to the radar sensors. Do not pinch or impact the radar sensors, as this may cause radar sensor to fail to operate normally.

If the buzzer does not sound when reversing, please check the followings:

- If there is foreign matter on the surface of radar sensor.
- Radar sensors cannot detect wires and fences. Check if radar sensor surface is frozen.
- If the vehicle has been parked for a long time in hot or cold weather.
- If cause cannot be found, please contact authorized service centre for inspection and repair as soon as possible.

## 5-16. Multi-Collision Brake System (MCB)

## Multi-Collision Brake System (MCB)

When the multi-collision brake system detects that the vehicle has collided, the electronic stability program system performs active braking, and decelerates the vehicle to prevent the vehicle from being collided again. In the process of braking, it can still maintain control of the vehicle, which can further ensure the safety of yourself and passers-by.

#### **Function limit**

Under the following conditions, multi-collision brake system may not operate correctly:

- · When there is a malfunction in the airbag system.
- · When there is a malfunction in the electronic stability program system.
- · When the electronic stability program system is turned off.

# 5-17. Head Up Display (HUD) System


## Head Up Display (HUD) System (If Equipped)

Head Up Display (HUD) System can project driving information (such as vehicle speed, driving mileage), navigation information, driving assistance system and other information on front windshield, which is an effective visual area within the driver's field of vision, so that the driver can see the vehicle information when driving normally without lowering head.



When head up display is turned on, a virtual image is formed in front of driver's field of vision to display the corresponding vehicle speed, driving mileage and other information.

#### 5 DRIVING ASSIST

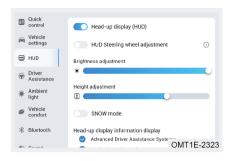

After head up display system is set to turn on in head unit, the following settings can be perform: Steering wheel adjustment HUD on/off, brightness adjustment, height adjustment, snow mode on/off, HUD information display (ADAS / Navigation) and restore default.

## 

It is recommended that the driver uses the snow mode in snowy conditions or when the visibility is not very good.

# ⚠ CAUTION

- In some special weather conditions (such as rain, snow, strong sunlight), head up display information may be unclear or disturbed.
- When the head up display position is blocked, the head up display system cannot be used.
- The front windshield film may affect the brightness of the head up display information.
- If the driver wears polarized sunglasses, there is a risk of not being able to see the head-up display information.

# 5-18. Braking Force Control System

Electronic Stability Program System (ESP)

#### Introduction

ESP keeps vehicle stability when oversteering or understeering. When oversteering or understeering is detected, system applies brake to one or more wheels to enhance control of vehicle stability. ESP also extends some functions (such as ABS and EBD, etc.) to ensure the lateral stability when vehicle driving.

## Usage method



Turn vehicle power supply to ON mode, slide down from the top right edge of the audio system screen, click ESP OFF switch to turn off ESP; click ESP OFF switch again to turn on ESP.

#### READ

- · When driving vehicle for the first time, ESP is on by default.
- ESP cannot be turned off during operation.

## Electronic stability program system (ESP) indicator

When ESP is turned off, "\$\frac{1}{2}" yellow indicator in instrument cluster remains on. When ESP is operating, "\$\frac{1}{2}" yellow indicator in instrument cluster blinks.

When ESP is malfunctioning, "  $\begin{subarray}{ll} \end{subarray}$  " yellow indicator in instrument cluster remains on.

# **@** READ

Replacing the non-full size spare tyre will cause the electronic stability program system (ESP) abnormal alarm, it will automatically return to normal when driving 0.6214 miles (1 km) after replacing the normal size tyre.

# **↑** WARNING

- When ESP is malfunctioning, please go to authorized service centre for inspection and repair as soon as possible.
- Even when ESP is working, high speed driving, sharp turns or poor road conditions can cause accidents.
- ESP function does not completely ensure that you can take over vehicle if it has lost control due to various extreme situations. Even with ESP, always follow laws and regulations to avoid accidents.
- The function of driver assistance relies on ESP for safety. If ESP is turned
  off, many functions of driver assistance will not be available, temporary
  malfunction light may appear on the instrument cluster to indicate that the
  function is not available (not driver assistance system failure). In order to
  continue to use the driver assistance function, turn on ESP function again,
  the driver assistance function will recover.

#### 5. DRIVING ASSIST

#### **Function limit**

Under the following conditions, Electronic Stability Program System (ESP) needs to be turned off:

- · When driving with tyre chains.
- · When starting vehicle on power tester.
- · When driving on roads with deep snow or loose gravel.


# 仰 READ

To improve vehicle traction when driving on sand or gravel, it is recommended to turn ESP off.

# Anti-lock Brake System (ABS)

#### Introduction

ABS can prevent wheel from being locked in excessive braking or braking on a slippery road, avoiding vehicle sideways slippage or vehicle drifting and keeping vehicle stability.

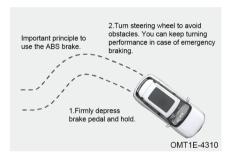

ABS does not function during normal braking and it will be turned on immediately only during sudden braking (brake pedal pulsates with noise, ensuring brake performance and steering performance, if the space is enough, the vehicle can also avoid obstacles). Never release brake pedal in this case.

# ↑ CAUTION

- · Always drive carefully and make sure to decelerate during turning.
- When ABS is malfunctioning, please go to authorized service centre for inspection and repair as soon as possible.
- Although ABS can ensure the best braking effect, braking distance will vary largely due to road conditions.

# ⚠ WARNING

- Also, ABS cannot eliminate risks arising from close-following driving, driving through water, turning quickly or driving on poor road surfaces and cannot avoid accidents caused by inattentive or inappropriate driving.
- ABS cannot ensure that brake distance can be shortened in any situations.
   When vehicle is equipped with tyre chain, on sand or snow covered roads,
   vehicles with ABS may require a longer braking distance compared to
   vehicles without ABS.

## Anti-lock brake system (ABS) indicator

When there is a fault in ABS, " yellow indicator in instrument cluster remains on



#### ↑ WARNING

When ABS indicator and brake system indicator remain on at the same time, park your vehicle on a safety place far away from major traffic and go to authorized service centre for inspection and repair immediately.

#### **Function limit**

- ABS will make operation sound in following conditions:
- Rebounding sound of brake pedal.
- Impacting sound between suspension and vehicle body due to emergency braking.
- Operation sound of motor, solenoid valve and return pump in hydraulic unit.
- · Operation sound of solenoid valve when EBD is intervened in braking.
- Buzz will be heard for a short time after vehicle is powered on or starting engine, indicating system self-test is performed.
- Always maintain a safe distance from vehicle ahead in the following situations.
- · When driving on rough roads.
- When driving on roads with potholes or uneven surfaces.
- When driving with tyre chains.
- When driving on dirt, gravel or snow-covered roads.



#### CAUTION

Tyre size and tread pattern wear will seriously affect ABS performance. Replacement tyres should have same size, load capacity and structure as original one. When a tyre is faulty, it is recommended to replace with a original brand at a authorized service centre.

#### WARNING

- · When driving on rainy days, properly control the vehicle speed, because if the wheel spins or slips, ABS will cannot control the vehicle.
- Although ABS can help to control vehicle, make sure to drive carefully, maintain a moderate speed and keep safe distance from preceding vehicles. There are certain limitations in vehicle stability and steering wheel operation effect even ABS operates.

#### Extended Function

## Electric Brake Force Distribution System (EBD)

EBD automatically adjusts braking force distribution ratio of front and rear axles according to axial load transfer difference caused by braking to improve braking efficiency. In addition, EBD works together with ABS to improve braking stability. Also, when braking round a corner, brake force of inside and outside wheels can be adjusted to improve braking stability.

## **Emergency Brake Assist (EBA) System**

EBA system is used to shorten the braking distance in emergency braking. In an emergency, driver usually brakes in time, but generally does not apply the maximum braking force, thus lengthening braking distance. In this case, EBA system will operate: When driver depresses brake pedal rapidly in an emergency with insufficient force, EBA system quickly increases brake pressure to maximum level, making anti-lock brake system to short braking distance more quickly and effectively.

## **Traction Control System (TCS)**

During starting off or rapidly acceleration, drive wheels may slip. In case of a slippery road such as snowy or icy road, direction could get out of control and cause a dangerous situation. When TCS detects that driven wheel speed is lower than drive wheel speed (a kind of wheel slip symptom) using sensor, it sends a signal to adjust ignition timing, reduce throttle opening, downshift or brake wheels so that wheel no longer slips.

# Uphill Assist System(HAC)

HAC system can prevent vehicle from moving backward when starting off on uphill. After vehicle is stationary, HAC system adopts longitudinal acceleration sensor to determine if the vehicle is on a slope. When vehicle starts from stationary state on a slope to drive or reverse upwards, HAC system automatically operates. When starting off, after driver releases brake pedal, system maintains previous braking pressure for 2 to 3 seconds to hold the vehicle. As increasing of drive torque, brake pressure reduces gradually, avoiding accidents caused by moving backward when starting off on a slope.

# Brake Assist System (BAS)

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation.

# **Brake Override System (BOS)**

When the accelerator and brake pedals are depressed at the same time, the engine output may be restrained.

#### Start Assist

Torque output when vehicle starts off is increased to easily start off.

# 5-19. Data Privacy

Chery Automobile Co., Ltd. (hereinafter referred to as "we" or "us") is the manufacturer responsible for privacy by design (PbD) of your vehicle.

# Driver Drowsiness and Attention Warning (DDAW)

Our vehicle's Driver Drowsiness Alert Warning (DDAW) system works to detect signs of driver fatigue. It does this by monitoring a range of parameters within a recent time window, including the proportion of time your eyes are open, blink rate, direction of gaze, length of gaze, yawning, as well as vehicular parameters such as speed, gear position, car door status, steering wheel angle, and direction of turn. The system uses this information to make a comprehensive judgement about driver fatigue and issue alerts as necessary.



#### CAUTION

Please be aware that the data collected by the DDAW system is required by regulations, collected for immediate processing, and is not stored. According to the regulations, DDAW will be enabled by default. The collected data is used for algorithmic recognition and discarded immediately after use. All data is processed within the vehicle and does not leave the vehicle.

## Advanced Driver Assistance System (ADAS)

In order to implement the drive assistance function, the car side will use the vehicle's front, flanks, and rear cameras to collect image data on the road during driving or after parking, image data surrounding the vehicle to complete drive assistance function. The camera recordings use the vehicle's external cameras to learn how to recognize things like lane lines, street signs and parking signs and traffic light.



#### CAUTION

Please be aware that the processing data within our system is designed for immediate use and analysis. We do not store any of the data that is processed. This data is necessary for legitimate interests and also to fulfil legal and other official requirements.

### 5. DRIVING ASSIST

## Emergency call (eCall)

In the event when you are in a traffic accident or you press the SOS button for roadside assistance, the eCall system on the in-vehicle terminal will provide your vehicle location, contact information and additional required information to the Public Safety Answering Point (PSAP) which is set up by government authority. The collection and sharing of these data comply with the requirements of laws and regulations, which only includes GPS, speed, directions of your vehicle, the time when you trigger the eCall, the eCall status, Vehicle Identification Number (VIN), vehicle model, power type and Recorded voice data.

# ↑ CAUTION

We collect this data to fulfil our legal obligations outlined in vehicle security regulations.

# IN CASE OF AN EMERGENCY

| 6-1. | Emergency Call Function                     |  |  |
|------|---|--|--|
|      | ECALL216                                    |  |  |
| 6-2. | Basic Knowledge of Vehicle<br>Emergency     |  |  |
|      | Hazard Light216                             |  |  |
|      | Reflective Strip217                         |  |  |
|      | Warning Triangle217                         |  |  |
|      | Spare Tools218                              |  |  |
| 6-3. | Vehicle Emergency Handling                  |  |  |
|      | If You Have a Flat Tyre<br>While Driving218 |  |  |
|      | If Engine Coolant Temperature is High 223   |  |  |

|      | If Battery is Flat224                       |
|------|---|
|      | If Your Vehicle Cannot<br>Start Normally226 |
| 6-4. | Towing                                      |
|      | Towing Vehicle226                           |
|      | Installing Towing Eyelet 228                |
|      | Emergency Towing 229                        |
| 6-5. | Fuse  |
|      | Fuse Box                                    |
|      | Checking Fuse231                            |
|      | Replacing Fuse231                           |
|      |   |

#### 6. IN CASE OF AN EMERGENCY

## 6-1. Emergency Call Function

#### ECALL



Manual activation: When required to report a serious accident, or require emergency help, long press the SOS button for 2 seconds.

Automatic activation: In case of an accident, which requires airbags to be activated, the vehicle will automatically contact emergency services and communicate standard information to a Public Safety Answering Point (PSAP).

### **印 READ**

- Information communicated to the PSAP includes: vehicle type, number of seated passengers detected in the vehicle, GPS coordinates, and the VIN.
- Emergency call services are not available in all countries or regions.
- Emergency call only operates over a mobile network with an adequate signal.

# 6-2. Basic Knowledge of Vehicle Emergency

# Hazard Light



In case of vehicle failure or traffic accident etc., please turn on the hazard lights to warn other vehicles, so as to avoid the secondary accident.

Press hazard light switch, directional indicator lights flash and the directional signal light indicator on instrument cluster flashes at the same time; Press the switch again, directional indicator lights and directional signal light indicator will go out.

#### r READ

- The hazard lights can still work when the vehicle power is turned to OFF mode.
- The hazard lights are automatically activated when the airbag is operating.



#### **CAUTION**

To prevent battery from being depleted, do not turn on the hazard lights more than necessary when the engine is not started.

## **Emergency braking alarm function**

When brake pedal is depressed in emergency at higher speed, the lights and directional signal light indicator on instrument cluster flash quickly; Release the brake pedal, press the hazard light switch or turn the vehicle power to OFF mode, the directional indicator lights and directional signal light indicator on instrument cluster will stop flashing.

## Reflective Strip



The reflective strip is placed into the glove box.

In case of vehicle failure or traffic accident etc., wear the reflective strip with reflective strip facing outwards. It can warn other vehicles to avoid secondary accidents.


# Warning Triangle



Warning triangle is located on the boot door panel, turn the retaining clamp counterclockwise to remove it

In case of vehicle failure or traffic accident etc., the reflective property of warning triangle can warn other vehicles to avoid secondary accidents.

#### 6. IN CASE OF AN EMERGENCY

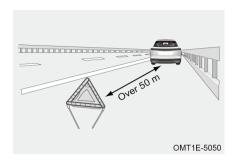

Place the warning triangle at a distance of more than 50 m behind the vehicle on a normal road.

Place the warning triangle at a distance of more than 150 m behind the vehicle on the highway.

Place the warning triangle at a distance of over 150 m behind the vehicle in rain or when steering.

# Spare Tools



- 1 Jack
- 2 Wheel bolt wrench
- 3 Towing eyelet (if equipped)
- 4 Jack rocker

## 6-3. Vehicle Emergency Handling

# If You Have a Flat Tyre While Driving

If a tyre goes flat during driving, slow down gradually, grip the steering wheel with two hands and keep driving straightly. Stop vehicle to a safe place away from the traffic road.

- 1. Preparations before replacing flat tyre.
  - Step 1: Stop vehicle on solid, level ground;
  - Step 2: Apply parking brake and shift the shift lever to P;
  - Step 3: Turn vehicle power to OFF mode, and turn on hazard lights;
  - Step 4: Have everyone get out of vehicle, pull over and stay away from traffic;
  - Step 5: Wear reflective strip, and place the warning triangle 50 m 150 m behind the vehicle (depending on actual condition).



Do not continue driving with a flat tyre. Driving even a short distance can damage the tyre beyond repair.

## **PAD** READ

The vehicle is equipped with full size spare tyre or non-full size spare tyre, the replacement method for both tyres is the same.

## 2. Take out the spare tyre.



Step 1: Open boot door, remove the luggage compartment carpet;



Step 2: Rotate fixing device of spare tyre counterclockwise to remove it, and then take out spare tyre.

## 3. Remove the flat tyre.



Step 1: Put a block under the tyre diagonally opposite to flat tyre to prevent vehicle from rolling.

| Flat Tyre         | Wheel Block Position     |  |
|-------------------|--------------------------|--|
| Front left wheel  | Behind rear right wheel  |  |
| Front right wheel | Behind rear left wheel   |  |
| Rear left wheel   | Behind front right wheel |  |
| Rear right wheel  | Behind front left wheel  |  |

#### 6. IN CASE OF AN EMERGENCY




Step 2: Fit wheel bolt wrench to wheel bolt of flat tyre, set the handle on left side, hold the end of wrench handle and push it downward, loosen each bolt of flat tyre about one-half turn;

## CAUTION

When removing wheel bolts with the wrench, be careful not to drop them as they can be damaged easily.

# ⚠ WARNING

Do not loosen the bolts completely. Otherwise, wheel may be ejected out because of the vehicle pressure, causing personal injury.

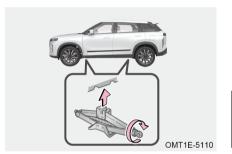

Step 3: Place jack on firm and level ground, turn jack handle clockwise by hand, making the notch of jack contact with the correct jacking-up point.

# READ

Jack the vehicle to a proper height at which tyre can be replaced.

# ⚠ WARNING

Never put any part of body under the vehicle when vehicle is jacked up to avoid personal injury.



Step 4: When the notch of jack contacts correct jacking-up point, fit jack rocker into jack, and then fit wheel bolt wrench into jack rocker, and turn the wheel bolt wrench clockwise to jack up the vehicle;




Step 5: Remove the wheel bolts of flat tyre counterclockwise with the wheel bolt wrench, and remove the flat tyre.

# $\triangle$

#### **CAUTION**

Place the flat tyre on ground with rim facing upward, so as to avoid scratching the rim surface.

4. Install the spare tyre.

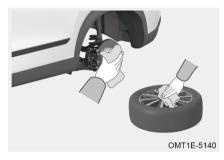

Step 1: Remove any attachments from mounting surface. Make sure wheel hub well contacts with wheel surface, and install spare tyre;



Step 2: When installing wheel bolts, screw into all wheel bolts clockwise by hand. Then straighten the spare tyre, and pretighten all wheel bolts with wheel bolt wrench;


#### CAUTION

Do not apply oil or grease on wheel bolts.



Step 3: Make sure all persons around the vehicle stay in the safe area, fit jack rocker into jack, and wheel bolt wrench into jack rocker, and turn wheel bolt wrench counterclockwise to lower the vehicle;

#### 6. IN CASE OF AN EMERGENCY

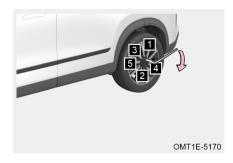

Step 4: Using wheel bolt wrench, tighten bolts in sequence shown in illustration. Repeat the process 2 to 3 times to ensure that wheel bolts are tightened in place;

Step 5: Stow the flat tyre and place jack, warning triangle and spare tools in original place;

Step 6: If the pressure of spare tyre is insufficient, drive vehicle slowly to the nearest authorized service centre to inflate the tyre to correct pressure.

# ⚠ WARNING

- Drive at specified speed of 49 mph (80 km/h) or less with a spare tyre, it is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.
- Tighten wheel bolts to 150 ± 12 N·m (M12) or 180 ± 18 N·m (M14) after replacing the spare tyre. Drive slowly to the nearest authorized service centre (advised distance: ≤ 49 miles (80 km)) to replace with a standard tyre. Otherwise, the wheels may fall off due to loose bolts.
- Be careful when driving over uneven road surfaces.
- Spare tyre is designed only for emergency use and should be used only for very short periods. It should never be used for long drives or extended periods.
- Remember that the spare tyre provided is specifically designed for use with your vehicle. Do not use your spare tyre on another vehicle.
- Do not use more than one spare tyres simultaneously.
- Replace the spare tyre with a standard tyre as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

## If Engine Coolant Temperature is High

If the engine coolant temperature is high during driving, and engine coolant temperature gauge approaching H area or red indicator " • on instrument cluster comes on, please stop vehicle to a safe place away from the traffic road.



- Step 1: Stop vehicle on solid, level ground;
- Step 2: Apply parking brake and shift the shift lever to P;
- Step 3: Turn off A/C system (Water dripping from air conditioning after use is normal);
- Step 4: Turn vehicle power to OFF mode after idling for several minutes, and turn on hazard lights;
- Step 5: Before opening the bonnet, check whether there is steam or coolant overflow or leakage. Only open the bonnet when there is no steam or coolant overflow or leakage, otherwise, burns may occur;
- Step 6: Check the coolant level. If it is normal, it may be caused by the failure of radiator fan. Please contact authorized service centre for inspection and repair immediately;
- Step 7: Check the coolant level. If it is low, please contact authorized service centre for inspection and repair immediately.



If the coolant level is low, water can be used temporarily, please go to authorized service centre to replace coolant as soon as possible.




#### **CAUTION**

If engine overheats, please contact the authorized service centre for inspection and repair immediately.

## If Battery is Flat

## **Jump-starting**

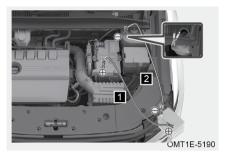

Step 1: Turn vehicle power to OFF mode, and connect jumper cables:

- 1 Connect one end of positive cable to positive terminal (+) of battery of discharged vehicle, and the other end to the positive terminal (+) of battery on rescue vehicle.
- 2 Connect one end of negative cable to negative terminal (-) of battery on rescue vehicle, and the other end to unpainted metal part of discharged vehicle.

Step 2: Start the engine of rescue vehicle, slightly increase engine speed and maintain for approximately 5 minutes to temporarily charge the battery of discharged vehicle:

Step 3: If the discharged vehicle is still unable to start, check whether the jumper cable is connected normally, and then charge the battery:

Step 4: Once the engine is started on discharged vehicle, remove jumper cables in the reverse order of connection (negative cable first and then the positive cable).

#### CAUTION

- Do not jump start unless you are sure that the battery voltage for jumper starting is 12 to 13 V.
- If the battery lacks power, please go to authorized service centre for inspection and repair as soon as possible.
- The negative terminal of battery on rescue vehicle should not be directly connected to negative terminal of battery on discharged vehicle.
- · When connecting and removing jumper cables, ensure that they do not become entangled in fan, belt, etc.
- Ensure that the jumper cables are properly connected and keep a certain distance between terminals, to prevent the jumper cables from touching each other or touching other metal parts of the vehicle.
- Before turning off vehicle power or locking the vehicle, make sure that the electrical appliances of vehicle are turned off, to prevent the vehicle from being unable to start normally due to battery power loss.

## ↑ WARNING

- · The specified jumper cables should be used.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.
- If you are unsure about how to follow the procedure, we strongly recommends that you seek help from professional serviceman or at a authorized service centre.

## Replacing battery



Step 1: Vehicle power is turned to OFF mode:

Step 2: Open the bonnet:

Step 3: Remove the negative (-) battery terminal cable:

Step 4: Remove the positive (+) battery terminal cable;

Step 5: Remove the battery holder and the battery;

Step 6: Install a new battery that has the same specification as the used one; Step 7: Install the new battery properly in the reverse order of removing.

# ENVIRONMENTAL PROTECTION

Battery contains acid which is poisonous and corrosive. Please deal with it according to the local regulations and provisions regarding environmental protection.

#### **CAUTION**

While removing battery, be careful to avoid the metal tool contacting with both battery terminals or touching the positive (+) battery terminals and body at the same time.

#### ↑ WARNING

- · Do not leave battery within the reach of children.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.
- · Always wear gloves and safety glasses during operation, as battery contains acid which is poisonous and corrosive. Do not lean on the battery.
- If acid spills on your skin or clothes, the liquid must be neutralized with alkaline water (such as: soap) immediately, and then wash it with clean water. Get emergency medical attention immediately if necessary.

#### 6. IN CASE OF AN EMERGENCY

## If Your Vehicle Cannot Start Normally

If your vehicle cannot start normally, first make sure you have followed the correct starting procedures and check if fuel is sufficient.

- Starter speed is too low, but vehicle cannot start normally
- Step 1: Check if battery terminals are tight and clean;
- Step 2: Turn on headlights. If the light is dim, it indicates that the battery is discharged. Please try jump starting;
- Step 3: Try to start engine again, if it still cannot start normally, the starting system may be malfunctioning. Please contact authorized service centre for inspection and repair immediately.
- Starter speed is normal, but vehicle cannot start normally
- Step 1: Turn vehicle power to OFF or ACC mode, try to start the engine again;
- Step 2: If the engine still cannot be started normally, it may cause excessive fuel in cylinder due to repeat starting. Turn vehicle power to OFF mode, try to start engine again after a few minutes;
- Step 3: Try to start engine again, if it still cannot start normally, please contact authorized service centre for inspection and repair immediately.

# ↑ CAUTION

- To avoid damage to the starter, starting operation should not exceed 15 seconds each time.
- If vehicle becomes difficult to start or stalls frequently, please go to authorized service centre for inspection and repair as soon as possible.


# 6-4. Towing

# Towing Vehicle

Towing must comply with local laws about towing.

Before towing the vehicle, release parking brake (for emergency releasing electric parking, refer to "Brake System"), and shift the shift lever to N.

## Correct towing methods

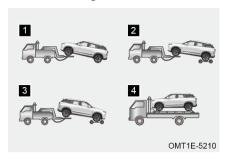


- For front-wheel drive vehicles: Tow with a wheel lift-type truck from front, and secure the vehicle firmly.
- 2 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a wheel lift-type truck from front, use a towing dolly under the rear wheels, and secure the vehicle firmly.
- 3 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a wheel lift-type truck from behind, use a towing dolly under the front wheels, and secure the vehicle firmly.
- 4 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a flatbed truck, secure the vehicle firmly.

## $\triangle$

#### \ CAUTION

- It is recommended to use flatbed truck for 4WD vehicles.
- Use a flatbed truck if the vehicle's wheels or axle are damaged.
- Ensure that there is a proper clearance between the wheels not lifted and ground. Otherwise, the bumper and chassis of towed vehicle will be damaged during towing.

# Wrong towing methods

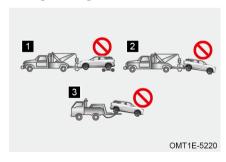

- Tow with sling-type truck sling from front of the vehicle
- 2 Tow with sling-type truck sling from rear of the vehicle whilst front wheels are on the ground
- 3 Tow with wheel lift-type truck sling from rear of the vehicle whilst front wheels are on the ground

# A

#### **CAUTION**

Do not tow with a sling-type truck to prevent body damage.

## Installing Towing Eyelet

## Front towing eyelet



Step 1: Use a screwdriver with its tip taped to remove the front towing eyelet hole cover;

Step 2: Install towing eyelet into eyelet hole in a clockwise direction. Then tighten it firmly with wheel bolt wrench.

## Rear towing eyelet



Step 1: Use a screwdriver with its tip taped to remove the rear towing eyelet hole cover.

Step 2: Install towing eyelet into eyelet hole in a clockwise direction. Then tighten it firmly with wheel bolt wrench.

# ⚠ CAUTION

- Only use specified towing eyelet. Otherwise, vehicle may be damaged.
- Towing rope or towing bar can be installed only when towing eyelet is installed in place.
- Drive the vehicle slowly and smoothly when towing. Impact due to excessive tension may damage the vehicle.

# **MARNING**

Make sure that towing eyelet is installed securely. Otherwise, the towing eyelet may come loose when towing, which may cause an accident, resulting in death or serious injury.

## Emergency Towing

If flatbed truck is not available during towing, your vehicle may be temporarily towed using a towing hook. This should only be attempted on hard surfaced road for short distances at low speed.

When using towing hook, driver must seat in towed vehicle to operate steering wheel and brake pedal, and vehicle wheels, drive train, axle, steering system and braking system must be in good condition.

Before emergency towing, release parking brake (for details of emergency releasing electric parking, refer to "Brake System"), shift the shift lever to N. and turn vehicle power to ACC or ON mode.

#### CAUTION

- Do not perform emergency towing for long periods of time.
- Secure a towing cable, chain or lever to the vehicle towing eyelet.
- Never tow a vehicle heavier than this vehicle, otherwise the vehicle may be damaged.
- · Both drivers must be familiar with the towing process, otherwise they cannot carry out towing work.
- Tow vehicle as straightly ahead as possible, do not tow vehicle from side to avoid damaging vehicle.
- · If engine is not started, assist system will not work, therefore, braking and steering will be more difficult than usual. So, please operate carefully.
- We strongly recommends that you seek help from professional serviceman or authorized service centre.
- · If towed vehicle still cannot move, do not forcibly continue towing to avoid secondary damage to vehicle. We strongly recommends that you seek help from professional serviceman or authorized service centre.

#### WARNING

- To avoid personal injury, people other than driver should stay away from the vehicle when it is towed.
- · When towing vehicle, avoid sudden start-off or erratic driving maneuvers which would apply excessive force on the towing eyelet, cable, chain or lever. The towing eyelet, cable, chain or lever may break and cause vehicle damage or serious personal injury.

#### 6. IN CASE OF AN EMERGENCY

## 6-5. Fuse

#### Fuse Box

Fuses are used to protect electrical components and circuits to avoid short circuit or overload. If fuse is blown, the protected components and systems will not work properly.

## Front compartment fuse box



Step 1: Vehicle power is turned to OFF mode.

Step 2: Disconnect the negative battery terminal cable.

Step 3: Remove front compartment fuse box cover to inspect or replace fuse.

## Instrument panel fuse box



Step 1: Vehicle power is turned to OFF mode.


Step 2: Disconnect the negative battery terminal cable.

Step 3: Remove instrument panel lower right protector to inspect or replace fuse.

## **₩** READ

- Check suspected fuses according to the fuse and relay box layout.
- To prevent damage to the vehicle, be careful when removing/installing the instrument panel lower right protector. Please contact authorized service centre as necessary.
- The fuse box must be clean, keep it away from dampness when opening, as dirt and moisture may damage the electrical system.

# Checking Fuse

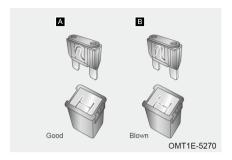

- A Good fuse.
- Blown fuse.



If the fuses are blown, they must be replaced.

## Replacing Fuse



Step 1: Vehicle power is turned to OFF mode.

Step 2: Check fuses according to the fuse and relay box layout.

Step 3: Pull the suspected fuse out by a fuse remover.

Step 4: Check if the fuse is blown. If you are not sure whether the fuse has blown, replace the suspected fuse with spare fuse that has the same amperage rating. You can see the amperage rating on the schematic diagram inside the fuse box cover.

# 🕮 READ

If the spare fuse is unavailable, you can use a fuse with same specification. It is better to purchase a set of spare fuses and put them in vehicle for emergency use.

# **A** CAUTION

- Do not modify any fuses or fuse boxes.
- Only install a fuse that has the same amperage rating as used one. Never replace a fuse with a wire, even as a temporary replacement. Otherwise, this may cause serious damage to electrical appliances, or even fire.

# MAINTENANCE

| 7-1. | Repair and Maintenance        |   | Checking Radiator and   |     |  |
|------|-------------------------------|---|-------------------------|-----|--|
|      | Repair and Maintenance 234    |   | Condenser               | 240 |  |
|      | Authorized Service            |   | Checking Drive Belt     | 240 |  |
|      | Centre is at Your Service 234 |   | Checking Tyres2         | 241 |  |
|      | Safety Check235               | i | Tyre Rotation2          | 243 |  |
| 7-2. | Normal Maintenance            |   | Checking Battery2       | 243 |  |
|      | Normal Maintenance 236        |   | Checking Air            |     |  |
|      | Checking Oil Level 237        |   | Conditioning Filter     |     |  |
|      | Checking Transmission         |   | Checking Windshield     |     |  |
|      | Fluid Level                   |   | Washer Fluid            |     |  |
|      |                               |   | Checking Wiper Blades 2 | 244 |  |
|      | Checking Brake Fluid Level    |   | Technical Data          | 245 |  |
|      | Checking Coolant Level 239    | ı |                         |     |  |

#### 7. MAINTENANCE

## 7-1. Repair and Maintenance

## Repair and Maintenance

There are two types of repair and maintenance: one is normal maintenance, which can be done by the customers; the other is scheduled maintenance, inspection and repair, which needs to be completed by a qualified service and repair station.

For the details of regular maintenance, inspection and repair methods, please refer to "Regular Maintenance" in this section; Regular maintenance can be helpful for you to find and eliminate potential dangers in time to prevent malfunctions. Scheduled maintenance of your vehicle is essential. Please strictly follow the maintenance schedule to perform maintenance, ensuring that your vehicle maintains the best performance and good operating conditions, thus effectively extending the service life of the vehicle.

Please use the recommended fluid, or your vehicle may be damaged.

#### Authorized Service Centre is at Your Service

#### Authorized service centre

In servicing this vehicle, the use of approved parts and accessories will ensure that the original vehicle specification is maintained and that the vehicle continues to comply with all certification requirements, as well as meeting Government regulations relating to vehicle safety and environmental controls.

Authorized service centre offers a professional service. For vehicle service, please remember that your authorized service centre knows your vehicle best, and has the professional technicians and OEM parts to complete the job to the highest standard.

# **® ENVIRONMENTAL PROTECTION**

Used engine oil, brake fluid, coolant, batteries and tyres should only be disposed of by qualified waste disposal agencies or after consultation with manufacturers, and should not be taken out with household waste or disposed of into the communal drainage system.

# Service arrangements

When go to authorized service centre for vehicle service, make sure to carry all required documents. Not all the work to be performed is covered by the warranty. For detailed expenses, consult your service advisor. Keep a service record on your vehicle. Usually, this record can provide valuable reference information.

Prepare a list sheet covering vehicle malfunctions and specific service items. If you have had an accident or any item serviced is not included in the service records, let your service advisor know.

If you list many service items and you must get your vehicle on the day, communicate with your advisor to rank the items by priority.

## Safety Check

It is better to perform a safety check before driving vehicle, which will improve vour driving safety and enjoyment.



#### WARNING

While inspecting vehicle, do not start the vehicle.

#### Daily check

Check whether paint surface is scratched, light shade is damaged, body is tilted, wheel bolts are missed or loosened, water/oil leakage occurs, door/ bonnet/boot door/glass is damaged.

Check that engine oil level, brake fluid level, coolant level and windshield washer fluid level is normal.

Check cold tyre pressure and conditions (such as: wear, swelling, aging cracks, mechanical damages, etc). Also check the spare tyre.

Check whether seat belt buckles fasten securely. Make sure belts are not worn or frayed.

Check whether lighting of lights is normal.

Check whether meter indicators are normal.

## Monthly check

Clean vehicle surface, inside of engine bonnet (dust on surface of radiator and condenser, and remaining oil of engine body), vehicle interior and luggage compartment.

Check assembly, pipes, hoses and tanks for leaks; Check whether battery and cable are corroded and loosened: Check whether circuits are damaged. loosened or disconnected: Check that no water/oil leakage has occurred.

Check whether air condition is operating properly.

Check whether parking brake is operating properly.

Check whether spare fuses and spare tools (such as: jack, wheel bolt wrench, etc.) are equipped.

# READ

Used engine oil, brake fluid, coolant, batteries and tyres can be disposed only by qualified waste disposal agencies, or consult supporting manufacturers for disposal of them. It is not permitted to dispose of them with household waste or discharge them into public drainage system.

#### 7. MAINTENANCE

#### 7-2. Normal Maintenance

#### Normal Maintenance

Be sure to follow the correct maintenance procedures provided in this section if you perform do-it-yourself maintenance.

This section only lists the simple maintenance instructions which can be performed by customers. However, there are still many items that have to be maintained by qualified technicians with special tools.

## ↑ CAUTION

- Check for any tools or cloths that may have been left behind before closing the bonnet.
- Do not drive vehicle with the air filter removed, otherwise, excessive engine wear could occur.
- Correctly add fluid to the appropriate level. If some fluid splashes onto the vehicle, be sure to immediately wash it off with a wet cloth, to avoid damage to the painted surface.

# **⚠** WARNING

- If the engine is very hot, do not open the coolant reservoir cap to prevent scalding injury.
- When the engine is running, keep hands, clothing and tools away from engine drive belts and cooling fan.
- Do not smoke near fuel filler or battery, otherwise, it may cause sparks or open flames, resulting in a fire.
- There is a high voltage in the electronic ignition system. Do not touch these components while the engine is running or the vehicle power is turned on.
- Right after driving, engine, radiator, exhaust manifold and cylinder head will be very hot, so never touch them. Prevent any loose clothing from getting caught in the fan and causing personal injury because the cooling fan may automatically start and run at any time.

## Checking Oil Level

## Checking engine oil




With the engine stalling and cooled down, check the oil level with the dipstick.

Step 1: Warm up the engine and then stop the vehicle on a level ground. Wait for approximately 5 minutes after turning off engine;

Step 2: Open the engine bonnet, pull the dipstick out and wipe it with a clean cloth;

Step 3: Insert the dipstick to the bottom uniformly and slowly;

Step 4: Leave the vehicle as is for approximately 3 seconds, pull the dipstick out again and check if oil level is correct.

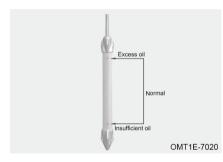

Put a cloth under the dipstick to avoid oil spilling onto engine or vehicle body.

Do not check the oil level immediately after the engine warms up, and wait until the oil returns into the bottom of engine.

## Adding engine oil



Step 1: Turn the engine oil filler cap counterclockwise to open it;

Step 2: Use the funnel to add a small amount of engine oil several times and check the oil level with a dipstick again;

Step 3: When the level reaches within the correct range, turn the engine oil filler cap clockwise to tighten it.

#### 7. MAINTENANCE

## **® ENVIRONMENTAL PROTECTION**

Do not discard the waste engine oil and filter in household waste, down the drain or spill on to the ground. Otherwise, it will cause serious environmental pollution. Please handle it according to the local regulations regarding to environmental protection.

# ↑ CAUTION

- Do not overfill oil, or it may cause damage to engine.
- Only recommended engine oil can be used. Otherwise, all the direct or indirect loss incurred are at customer's own risk.
- If oil is accidentally spilled on the surface of the engine during filling of oil, clean the spilled oil with canvas and other tools before tightening the engine oil filler cap.
- The engine oil filler cap cannot be inverted after removal, to prevent misjudgment caused by oil back flow or the oil flowing through seal ring will overflow automatically after reassembly, resulting in an illusion of oil leakage from the engine oil filler cap.

# Checking Transmission Fluid Level

Checking, adding and replacing of transmission fluid should be done by professionals. Please contact the authorized service centre.

# Checking Brake Fluid Level



Brake fluid level should be between the "MIN" and "MAX" marks. If the level is at or below the "MIN" mark, add brake fluid and contact the authorized service centre for inspection and repair immediately.

# CAUTION

- As the brake fluid is highly absorbent, do not leave the brake fluid reservoir cap open for a long period of time.
- Only recommended brake fluid can be used. Otherwise, all the direct or indirect loss incurred are at customer's own risk.
- If some brake fluid splashes onto the painted surface of vehicle body, be sure to clean it with a wet sponge or wash it off with water to avoid corroding the parts or painted surface.

#### WARNING

Never allow brake fluid to contact your skin or eyes. If the brake fluid splashes into your eyes, or on your skin, flush the area immediately with a great quantity of water. Get emergency medical attention immediately if necessary.

## Checking Coolant Level

## Checking coolant



When engine is cold, the coolant level should be between the "MIN" and "MAX" marks. If the level is at or below the "MIN" mark, add coolant and contact the authorized service centre for inspection and repair immediately.

## Adding coolant

Step 1: When the engine is cold, open the coolant reservoir cap, and add coolant until reaching "MAX" mark;

Step 2: Start and run the engine to a normal temperature. Observe the coolant level in the reservoir all the time, if the level falls below "MIN" mark, add coolant to an appropriate level in time until the coolant level does not fall down again;

Step 3: Turn off engine and check if coolant level is correct after engine cools down. If not, repeat above operations until level is normal;

Step 4: Install the coolant reservoir cap in place.



#### CAUTION

- If coolant level falls rapidly, check radiator, water pipe and water pump for leakage.
- · Only recommended coolant can be used. Otherwise, all the direct or indirect loss incurred are at customer's own risk.
- · Do not use inferior quality coolant, because the engine becomes excessively hot as running and inferior coolant cannot provide sufficient cooling and corrosion protection.
- In cold areas, it is necessary to replace with 100% stock solution of antifreeze.

#### 7. MAINTENANCE

# **↑** WARNING

- When engine is warmed up or becomes hot, the cooling system will be under high pressure. In this case, never open the coolant reservoir cap, otherwise, the escaping steam may cause scalding injury.
- The coolant is poisonous, so pay extreme caution not to spray the liquid on any part of the vehicle, human body or ground when adding coolant. If the coolant accidentally gets onto your skin or into eyes, please wash the affected area with a great quantity of water. Get emergency medical attention immediately if necessary.

# Checking Radiator and Condenser

After the vehicle runs for a period of time, the front surface of condenser and radiator could be blocked with some insects, leaves and other objects, which could affect the performance of air conditioning and cooling system, resulting in air conditioning operating improperly and cooling system overheating. It is necessary to clean radiator and condenser at that time.

Condenser: Clean the condenser by blowing compressed air from rear to front through the radiator when the engine is turned off and cools down.


Radiator: It is recommended to clean the radiator surface every year. With engine turned off and cooled down, use compressed air or water to clean the radiator fins and blow off the insects and leaves, etc. Air and water pressure should not exceed 150 kPa. Otherwise, the radiator fins could be damaged.

# CAUTION

- The material of radiator fins has good thermal conductivity, which is used to cool the coolant; Do not brush the fins, or it may cause damage to the fins, affecting the cooling effect.
- Do not spray water on the hot radiator while the engine is hot, otherwise, the generated high temperature steam may result in personal injury. Clean radiator when the engine is turned off and cools down.

# Checking Drive Belt

Drive belt will be extended after using for a period of time, and the belt tension is not enough, which may damage the vehicle, so it is necessary to regularly check the belt tension.

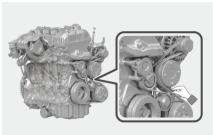

OMT1E-7060

Step 1: Vehicle power is turned to OFF mode;

Step 2: Twist the belt with your fingers to check the rotation angle of belt:

Step 3: If rotation angle is more than 90°, please go to authorized service centre for inspection and repair.

## ↑ WARNING

When checking the drive belt tension, turn off the engine and cool it down to ensure that the engine belt is static.

## Checking Tyres




Check the tyre tread by tread wear mark. When tread wear reaches its limit, tread will be in the same plane as the wear band. If such condition occurs, the tyre performance and safety will be seriously impacted, and replacement is necessary.

# **® ENVIRONMENTAL PROTECTION**

Always discard a used tyre carefully. It should be handled according to the local regulations regarding to environmental protection.

- Observe the following precautions. Failure to do so may lead to an accident, resulting in death or serious injury:
- 1. Do not use tyres that were used on another vehicle.
- 2. Do not mix tyres with remarkably different tread wear.
- 3. Do not use tyres if you do not know how they were used previously.
- 4. Do not mix tyres from different manufacturers, of different models or tread patterns.
- 5. Do not mix differently constructed tyres (such as radial, bias-belted or biasply tyres).
- 6. Speedometer can be affected by the tyre size. If the tyre size (diameter) is different from the genuine one, it will not display accurate speed, and may result in accidents, such accidents loss are not covered by the warranty.

#### 7. MAINTENANCE

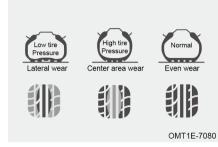


Incorrect tyre inflation pressure will lead to excessive fuel consumption. shorten the tyre service life and the vehicle stability. reduce Therefore, you should drive the vehicle with proper tyre pressure (For provisions about the tyre inflation pressure, please refer to the tyre pressure label on driver side B pillar). When cold tyre inflation pressure is higher than specified value economic tyre pressure is used. driving comfort will be reduced accordingly. Please adiust it according to your needs.

- Be sure to keep proper tyre inflation pressure. Otherwise, the following conditions may occur and result in in death or serious injury:
- 1. Excessive wear.
- 2. Poor handling.
- 3. Uneven wear.
- 4. Poor sealing of the tyre bead.
- 5. Wheel deformation or tyre separation.
- 6. Possibility of blowouts resulting from overheated tyres.
- 7. A greater possibility of tyre damage caused by poor road conditions.

# ⚠ CAUTION

- It is normal that the tyre inflation pressure increases after driving for a period of time.
- If the tyre needs to be inflated frequently, please go to authorized service centre for inspection and repair as soon as possible.
- If a tyre often leaks or cannot be properly repaired due to a cut or other damages, it should be replaced.
- Use a tyre pressure gauge to check cold tyre inflation pressure. Visual inspection of a tyre may cause inaccurate estimation on inflation pressure.
- If air leakage occurs while driving, do not continue to drive. Driving even a short distance can damage a tyre beyond repair.
- Be sure to install tyre valve caps properly. Otherwise, dirt could get into the valve core and cause blockage. If the caps are lost, install new ones as soon as possible.

#### Tyre Rotation

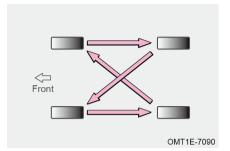

To equalize tyre wear and extend tyre service life, we recommends that you should rotate your tyres approximately every 12 mouths or 10,000 miles (16,093 km); the tyre rotation cycle may vary according to your driving habits and road surface conditions.

#### 🚇 READ

Tyre rotation should be done by professionals, please contact authorized service centre.

#### Checking Battery

Check and make sure that the battery terminals are not corroded and that there are no loose connections, outside cracks, or loose hold-down clamps.

Your vehicle is equipped with maintenance free battery. The new battery should have the same specifications with the genuine one during replacement. We recommend that you should go to authorized service centre for battery replacement.

### Checking Air Conditioning Filter

Air conditioning filter can prevent outside dust from entering vehicle through air conditioning outlets when driving for a long period of time, and it may be blocked after being used for prolonged periods of time. If operational efficiency of air conditioning decreases significantly, check filter element and replace it as necessary.

### @ READ

- The replacement of air conditioning filter should be performed by professionals, please contact authorized service centre.
- Using air conditioning with filter removed may result in degradation of dustproof performance, affecting efficiency of air conditioning.

### Checking Windshield Washer Fluid

If no washer fluid can be sprayed from washer nozzles, stop operating washers and check if it is necessary to add washer fluid. If it cannot operate properly after adding washer fluid, please go to authorized service centre for inspection and repair.

#### 7. MAINTENANCE

### **⚠** CAUTION

- Never add antifreeze in the windshield washer fluid, because antifreeze will damage the body painted surface.
- Do not use water as washer fluid when temperature is below zero. Otherwise, water will be frozen, causing damage to washer.
- · The capacity of washer fluid reservoir is 4.5 L.

### Checking Wiper Blades

Check the roughness of wiper blade by sliding on its edge using your finger. Wiper blade will not work effectively, if it is too rough.

#### CAUTION

- Do not use the wiper blades to remove frost or ice covered on the windshield.
- If there are any chips on the windscreen from gravel, please repair quickly.
- In winter, make sure that the wiper blades are not frozen to the glass before operating them to avoid damaging the wiper blades.
- Oil, silicone and fuel may cause the wiper blades to operate improperly, and it is recommended to clean the wiper blades with washer fluid.
- When the blades are lifted for maintenance, the centre connector position
  of the blades should be properly picked up, it is required to enter
  maintenance mode for some models (for details, please refer to "Wiper
  System").

### Maintaining wiper blades

- Do not use high-pressure water jet to directly wash the wiper blades while washing the vehicle, or the wiper blades could be deformed.
- In order to prevent the formation of build up that obscures view, it is recommended to clean wiper blades using glass detergent regularly once a week.
- For safety, it is advised to replace the wiper blades once or twice a year, the wiper blades can be purchased at authorized service centre.
- After washing the vehicle in the automatic car washer, apply pure water to rinse the windshield and blades, to remove the remaining wax layer.
- Do not operate wipers when windshield is dry. Doing so may scratch glass, resulting in permanent damage to wiper blades.
- Do not clean the windshield with fuel, nail polish remover, paint thinner or similar liquid, which can damage the wiper blades.

- Avoid using glass plating agent and hydrophobic agent on the front and rear windshield glass. The hydrophobic layer will fall off slowly after using, resulting in uneven friction of windshield and abnormal noise of wiper shakina.
- When the windshield surface is frosted or frozen, or when dry soil, insect. sticker or other solid particles are attached to the windshield surface, clean them with a wet cloth. Do not use a dry cloth or remove them with wiper blades directly, otherwise it will damage the glass and wiper blades.

#### Using wipers

- Do not swing the wiper arm manually, otherwise it may damage the wiper.
- · When there is snow, leaves, branch and other objects, they should be cleaned before operating the wiper.
- · Washer fluid should be added as soon as is needed, please use the windshield washer fluid as specified in this manual, and do not use tap water instead
- · In cold weather, always check if the wiper blades are frozen on the windshield before using. If they are frozen on the windshield, always unfreeze before using. Use air conditioning heating and ventilation device to warm up. Do not pour hot water directly to blades, otherwise, windshield may break or wiper blades may deform.

#### Technical Data

| Fluid Name     | Specification | After-sale Maintenance |
|----------------|---------------|------------------------|
| Refrigerant    | R1234yf       | 550 ± 15 g             |
| Compressor oil | PAG           | 150 ± 10 mL            |



READ

Contains fluorinated greenhouse gases and CO<sub>2</sub> equivalent 0.000275t.

| 8-1. | Label Location                       | Fuel System              | 253 |
|------|--------------------------------------|--------------------------|-----|
|      | Vehicle Identification               | Suspension System        | 254 |
|      | Number (VIN) 248                     | Wheel Alignment          | 254 |
|      | Vehicle Product Label 249            | Air Conditioning System  | 254 |
|      | Engine Number249                     | Battery                  | 254 |
|      | RF Emitter and Receiver Installation | Wheels and Tyres         | 25  |
| 0 0  |                                      | Light Bulb Specification | 256 |
| 0-2. | Vehicle Specifications               | Vehicle Components       |     |
|      | Vehicle Dimensions 250               | That Are Not Included in |     |
|      | Vehicle Type251                      | the Vehicle Size         | 257 |
|      | Vehicle Weight251                    | Your Rights              | 258 |
|      | Vehicle Performance 252              | Contact Us               | 258 |
|      | Engine Performance 252               |                          |     |

#### 8-1. Label Location

### Vehicle Identification Number (VIN)

#### Vehicle Identification Number (VIN) on actual vehicle



- Vehicle Identification Number (VIN) label is located on top left of instrument panel, and can be seen from the outside through the front windshield.
- Vehicle Identification Number (VIN) label is located on bonnet as shown in the illustration.



Vehicle Identification Number (VIN) is stamped under driver's seat.



Vehicle Identification Number (VIN) label is located on boot door as shown in the illustration.

### **@** READ

- Due to regional differences, the location of VIN code shall be subject to the actual vehicle.
- If VIN needs to be read, it is recommended to read the data through the operation of authorized service centre professional serviceman.




It is forbidden to cover, paint, weld, cut, drill or remove Vehicle Identification Number (VIN) and areas around it.

### Vehicle Product Label



Vehicle product label is located on right quarter outer panel as shown in the illustration.

# Engine Number

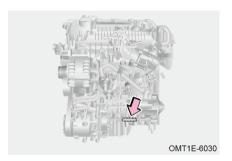

Engine number is located on engine block as shown in the illustration.


### RF Emitter and Receiver Installation



RF emitter and receiver can be placed on back of front windshield for reduced interference etc.

# 8-2. Vehicle Specifications

# Vehicle Dimensions

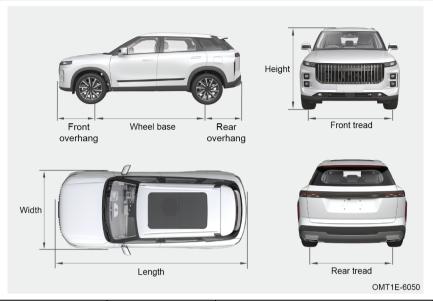

|                 | Length (mm) | 4500 |
|-----------------|-------------|------|
| Overall Size    | Width (mm)  | 1865 |
|                 | Height (mm) | 1680 |
| Wheel Base (mm) |             | 2672 |
| Trood           | Front (mm)  | 1582 |
| Tread           | Rear (mm)   | 1604 |
| Overhand        | Front (mm)  | 906  |
| Overhang        | Rear (mm)   | 922  |

### Vehicle Type

| Vehicle Type          | 4 × 2 front-wheel drive, front-<br>wheel steering, transverse<br>front-engine, two-<br>compartment, five-door, five-<br>seat, right-hand drive | 4 × 4 four-wheel drive, front-<br>wheel steering, transverse<br>front-engine, two-<br>compartment, five-door, five-<br>seat, right-hand drive |
|-----------------------|--|---|
| Engine Model          | SQRF4J16F  | SQRF4J16F   |
| Engine Type           | Vertical, 4- cylinder in-line,<br>water-cooled, 4- stroke,<br>double overhead camshaft,<br>turbocharging, intercooler                          | Vertical, 4- cylinder in-line,<br>water-cooled, 4- stroke,<br>double overhead camshaft,<br>turbocharging, intercooler                         |
| Fuel Supply<br>Type   | Direct injection   | Direct injection  |
| Transmission<br>Model | 730DHB   | 730DHC  |

### Vehicle Weight

| Vehicle Model                            |                 | 1.6T+2WD | 1.6T+AWD |
|--|-----------------|----------|----------|
| Vehicle Curb Weight (kg)                 |                 | 1529     | 1649     |
| Vehicle Curb Axle                        | Front Axle (kg) | 898      | 932      |
| Weight                                   | Rear Axle (kg)  | 631      | 717      |
| Manufacturer Maximum Total Weight (kg)   |                 | 1939     | 2038     |
| Manufacturer                             | Front Axle (kg) | 1028     | 1057     |
| Maximum Total Axle Weight Rear Axle (kg) |                 | 911      | 981      |
| Seating Capacity (Including Driver)      |                 | 5        | 5        |

### ⚠ WARNING

Please follow the vehicle load specified in the instruction manual and do not exceed the allowable total weight. Otherwise, the brake and handling performance of the vehicle may change and may cause an personal injury and accident.

# Vehicle Performance

| Vehicle Model                         |                                  | 1.6T+2WD  | 1.6T+AWD  |
|---------------------------------------|----------------------------------|-----------|-----------|
|                                       | Minimum Ground<br>Clearance (mm) | 196/166   | 186/160   |
| Passing                               | Minimum Turning<br>Diameter (m)  | 11        | 11        |
| Performance                           | Approach Angle (°)               | 21        | 21        |
|                                       | Departure Angle (°)              | 29        | 29        |
| Maximum Vehic<br>Speed(mph (kr<br>h)) |                                  | 110 (180) | 110 (180) |
| Performance                           | Maximum<br>Gradeability (%)      | 40        | 40        |

# Engine Performance

| Engine Mode                      | SQRF4J16F   |
|----------------------------------|-------------|
| Cylinder Bore Diameter (mm)      | 77          |
| Piston Stroke (mm)               | 85.8        |
| Displacement (mL)                | 1598        |
| Compression Ratio                | 9.9:1       |
| Maximum Net Power (kW)           | 108         |
| Maximum Net Power Speed (r/min)  | 5000        |
| Maximum Net Torque (N⋅m)         | 275         |
| Maximum Net Torque Speed (r/min) | 1750 - 2750 |

#### Fuel System

| Fuel Type                | Unleaded petrol with an octane number of 95 or higher |  |
|--------------------------|---|--|
|                          | E10   |  |
| Fuel Tank Type           | Plastic fuel tank                                     |  |
| Fuel Tank Total Capacity | 51 L / 57 L   |  |
| Fuel Pump                | Electric fuel pump                                    |  |

#### (III) READ

- Fuel tank capacity is different depending on vehicle configuration. Please refer to your real vehicle.
- Vehicle with catalytic converters can only use unleaded petrol. In order to avoid the accident of filling wrong fuel type, the fuel filler pipe adopts a neck-type fuel filler port design, and only the standard unleaded petrol fuel gun can be used for fueling operation.

### ⚠ CAUTION

- · Only use recommended fuel type.
- The use of off-specification petrol may cause damage to the engine and such damage is not covered under warranty.
- Using leaded petrol will cause three-way catalytic converter to lose its effectiveness and emission control system to function improperly.
- If you accidentally fill leaded petrol to the fuel tank and start the engine (even if only a small amount is filled), it will cause permanent damage to the
  catalytic converter. Therefore, if you accidentally fill leaded petrol, please
  go to authorized service centre for inspection and repair immediately.

### Suspension System

| Front Suspension | Macpherson type suspension |
|------------------|----------------------------|
| Rear Suspension  | Multi-link suspension      |

### Wheel Alignment

|                | Front Wheel<br>Camber        | -25′ ± 45′         |  |
|----------------|------------------------------|--------------------|--|
| Frank Wiles al | Kingpin Caster<br>Angle      | 4°28′ ± 60′        |  |
| Front Wheel    | Kingpin<br>Inclination Angle | 13°43′ ± 60′       |  |
|                | Front Wheel Toe-<br>in       | 5' ±5' (one side)  |  |
| Door Whool     | Rear Wheel<br>Camber         | -42′ ±30′          |  |
| Rear Wheel     | Rear Wheel Toe-<br>in        | 5′ ±10′ (one side) |  |

# Air Conditioning System

| Fluid Name     | Specification | After-sale Maintenance |
|----------------|---------------|------------------------|
| Refrigerant    | R1234yf       | 550 ± 15 g             |
| Compressor oil | PAG           | 150 ± 10 mL            |

# ♠ READ

Contains fluorinated greenhouse gases and  $\text{CO}_2$  equivalent 0.000275t.

# Battery

| Battery Model | 70Ah EFB lead-acid battery |
|---------------|----------------------------|
|---------------|----------------------------|

### Wheels and Tyres

| Tyre Model                                 |                  | 235/50R19 99V; T125/80R17 99M (Spare tyre) |  |
|--|------------------|--|--|
| Rim Model                                  |                  | 19×7J; 17×4T (Non-full size spare tyre)    |  |
| Cold Tyre<br>Inflation                     | Front<br>Wheel   | 230 / 2.3 / 33                             |  |
| Pressure<br>(Unladen)<br>(kPa/bar/<br>psi) | Rear<br>Wheel    | 230 / 2.3 / 33                             |  |
|  | Spare Tyre       | 420 / 4.2 / 61                             |  |
|  | Torque of lbolts | M12: 150 ± 12 N·m<br>M14: 180 ± 18 N·m     |  |

#### ♠ READ

The tyre inflation pressures listed in the table apply to cold tyres. The pressure increases slightly when the tyre is heated, but it is unnecessary to lower the pressure.

### ↑ CAUTION

- Tyre inflation pressure should be checked at least once a month, and tyre pressure is especially important at high speeds.
- In order to facilitate you to find the specified value for inflation pressure, there is adhesive sticker label on the driver doorsill, which is marked with the specified value for cold tyre inflation pressure.

# Light Bulb Specification

| Light Bulb Name          | Nominal Light Source<br>(Type/Model) | Replacement Advice                    |
|--------------------------|--------------------------------------|---------------------------------------|
| Headlights               | LED                                  | Replaced by authorized service centre |
| Front Fog Light          | LED                                  | Replaced by authorized service centre |
| Rear Fog Light           | LED                                  | Replaced by authorized service centre |
| Daytime Running Light    | LED                                  | Replaced by authorized service centre |
| Front Position Light     | LED                                  | Replaced by authorized service centre |
| Rear Position Light      | LED                                  | Replaced by authorized service centre |
| Brake light              | LED                                  | Replaced by authorized service centre |
| High Mounted Brake light | LED                                  | Replaced by authorized service centre |
| Reverse Light            | LED                                  | Replaced by authorized service centre |
| Front Indicator Light    | LED                                  | Replaced by authorized service centre |
| Side Indicator Light     | LED                                  | Replaced by authorized service centre |
| Rear Indicator Light     | LED                                  | Replaced by authorized service centre |
| License Plate Light      | LED                                  | Replaced by authorized service centre |

#### Vehicle Components That Are Not Included in the Vehicle Size

Components not included in vehicle length size

The following devices do not have laden function and their sizes are not more than 50 mm beyond the vehicle front end or rear end, and fillet radius of edge and corner is no less than 5 mm:

- Wiper and washer
- Outer identification, including registered trademark, manufacturer name, origin, model name and type, engine emission, transmission type, driving type and other distinguishing identification of the vehicle
- Lights and light signal device
- Anti-collision rubber block and equivalent
- External sunshade device
- Customs sealing device and its protective device
- Device used to fixed raincloth and its protective device
- Locking device, hinge, handle, controller, switch
- Step plate (or ladder), vehicle climbing step plate and handle on top of bumper used for cleaning windows.
- Rear emblem plate with LOGO
- Removable trailer or towing device
- Exhaust tail pipe

Components not included in vehicle width size:

Indirect view device

The following devices do not have laden function and their one side size exceeds the side of vehicle for no more than 50 mm, and fillet radius of edge and corner is no less than 5 mm:

- Outer identification, including registered trademark, manufacturer name, origin, model name and type, engine emission, transmission type, driving type and other distinguishing identification of the vehicle
- Lights and light signal device
- Anti-collision rubber block and equivalent
- Customs sealing device and its protective device
- Device used to fixed raincloth and its protective device
- Local water drain slot: Refers to the water drain slot used to guide rain flow above driver door (or window) and passenger door, both sides of front windshield
- Flexible protruding part of splash proof system
- Retractable step plate, lifting platform and equivalent that is in the retract state
- Locking device, hinge, handle, controller, switch

- Tyre failure signal device
- Tyre pressure indicator
- Deformed part of tyre wall directly above contact point between tyre and ground
- Reversing assistance device
- Exhaust tail pipe

Components not included in vehicle height size:

Soft part of antenna

Device without laden function:

- Intake duct
- Indirect view device
- Current collecting device of electric vehicle (including its fixing device)
- Vehicle rear air guide device is removable or folding, and its deployed and retracted length is no more than 2,000 mm and 200 mm respectively.
- Tailboard, entering/exiting slope and equivalent with a horizontal length not exceeding 300 mm in retract state
- Tail ladder

### Your Rights

Depending on local law, you may have the following rights regarding your personal data: the right to object or withdraw consent, the right to access, update, and correct inaccuracies of your personal data, the right to have your personal data restricted or deleted, the right to receive your personal data and request its transfer to another organization where technically feasible, and the right to be informed of and lodge a complaint with your local data protection authority.

#### Contact Us

To make a query, raise a concern, or exercise your data subject rights, please feel free to contact us at privacy@mychery.com. This applies if you are based within the European Economic Area and the UK.

We take your privacy seriously and aim to respond to you within one month or within the timeline specified by the relevant local privacy protection law, after confirming your identity.

If you believe that we have not adequately addressed your complaints or concerns, you have the right to lodge a complaint with a competent data protection authority.

| A                                 | C                                      |
|-----------------------------------|--|
| A/C Settings                      | Check the Exhaust System14             |
| Active Speed Limit                | Checking Air Conditioning Filter . 243 |
| Adaptive Cruise Control           | Checking Battery                       |
| System (ACC) 166                  | Checking Brake Fluid Level 238         |
| Adaptive Engine Control           | Checking Coolant Level                 |
| System 138                        | Checking Drive Belt240                 |
| Adjusting Steering Wheel33        | Checking Fuse                          |
| Advanced Driver Assistance        | Checking Oil Level                     |
| System (ADAS)213                  | Checking Radiator and                  |
| After Starting Engine12           | Condenser 240                          |
| Air Conditioning Cooling          | Checking Transmission Fluid            |
| Operation 112                     | Level                                  |
| Air Conditioning Heating          | Checking Tyres241                      |
| Operation114                      | Checking Windshield Washer             |
| Air Outlets Airflow Control111    | Fluid243                               |
| Air Quality Control System 112    | Checking Wiper Blades 244              |
| Anti-lock Brake System (ABS) 210  | Child Restraint Systems61              |
| Around View Monitor System        | Coat hooks 117                         |
| (AVM)199                          | Contact Us                             |
| Assist Grips 116                  | Cyber Security Notice for              |
| Audio Buttons101                  | Scrapping or Resale20                  |
| Audio View91                      | Cyber Security Support                 |
| Authorized Service Centre is at   | Service Update or                      |
| Your Service234                   | Termination Notice20                   |
| AUTO HOLD 150                     |  |
| Automatic Air Conditioning 105    | _                                      |
| Automatic Cabin Ventilation       | D                                      |
| and Automatic Cabin Cleaning111   |  |
| Automatic Emergency Braking       | Data Privacy213                        |
| System (AEB) / Front              | Delivery Inspection Certificate4       |
| Collision Warning System          | Door Mechanical Switch83               |
| (FCW) 188                         | Door Open Warning System 187           |
| Automatic Inside Rear View        | Doors Lock Switch82                    |
| Mirror34                          | Drive Away Information System . 195    |
| Automatic Transmission            | Driver Drowsiness and                  |
| Auxiliary Fascia Armrest Box      | Attention Warning (DDAW) 213           |
| Cooling Function                  | Driver Monitoring System               |
| Cooling Function                  | (DMS)198                               |
|                                   | Driving Mode (AWD Models) 142          |
| В                                 | Driving on Road Covered with           |
| В                                 | Ice and Snow18                         |
| Battery 254                       | ·                                      |
| Before Starting Engine11          | _                                      |
| Blind Spot Detection (BSD)        | E                                      |
| System 184                        |  |
|                                   | Easy Entry / Exit Seat (If             |
| Boot Door Emergency Opening . 129 | Equipped)54                            |
| Brake153                          | ECALL 216                              |
|                                   | Effective Range76                      |

# **ALPHABETICAL INDEX**

| Electric Parking Brake System (EPB)      | If Battery is Flat  |
|--|---|
| Engine Number                            | Installing Towing Eyelet                                      |
| "Face to face" Consultative Service Card | Intelligent Timely All-wheel-drive System (AWD) (If Equipped) |
| Fuel System                              | Key Information   |
| Hazard Light                             | Lane Departure Prevention System (LDP)                        |
| Hooks                                    | Manual Inside Rear View Mirror 34 Mode Adjustment             |
| Idling Stop-start System 174             |   |

| N  | S   |
|--|---|
| Never Drive Through Flooded Water  | Safety Check  |
| 0  | Equipped) 53  |
| Off-road Driving   | Smart Key Vehicle Locating  |
| Р  | Starting and Turning off in   |
|  | Emergency   |
| Parking on Slope   | Storage Space   |
| Power Windows85  | T.I. (0.1.1   |
| T GWGI TIMAG WGIIII  | Table of Contents   |
| В  | Top Tether64  |
| R  | Towing Vehicle  |
| Rear Collision Warning System 188 Rear Cross Traffic Alert (- RCTA) System | Traffic Jam Assist System (TJA) / Integrated Cruise Assist System (ICA) |
| Repair and Maintenance   | Unlocking Doors with Inside Handle                                      |
|  | Vacuum Booster 152  |

# **ALPHABETICAL INDEX**

| 92  | Wheel Alignment  | 254              |
|-----|--|------------------|
|     |  |                  |
|     | When Driving   |                  |
| 257 | When Driving on Slippery   |                  |
| 250 | Road Surfaces  | . 16             |
|     | Window Jam Protection Function                                   | . 87             |
| 248 | Window Remote Control  |                  |
| 252 | Function   | . 87             |
| 249 | Winter Driving Tips  |                  |
| 79  |  |                  |
|     |  |                  |
|     | Wireless Charging  | 115              |
| 102 |  |                  |
|     | V  |                  |
|     | Y  |                  |
|     | Your Rights  | 258              |
| 217 | Tour rights  | _00              |
|     | 92<br>257<br>250<br>248<br>252<br>249<br>79<br>251<br>251<br>102 | Wheels and Tyres |